


READ AND SAVE IMPORTANT SAFETY INSTRUCTIONS

PORTABLE AROMA DIFFUSER

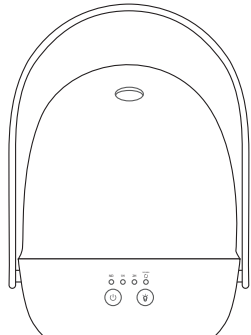

Model B-0528-1
K: 43482276
T: 70226492

IMPORTANT!

Care should be taken with the use of diffusers around animals. Both the choice of essential oils and where animals are should be taken into consideration when in use.

WARNING- TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

For filling, please refer to section "GETTING STARTED OPERATING INSTRUCTIONS"

For cleaning and descaling, please refer to section "CARE AND MAINTENANCE"

For charging, please refer to section "POWER INDICATOR"

- DO NOT** block the air inlet at the bottom of the diffuser.
- DO NOT** use the diffuser on flammable surfaces or near flammable materials, heat sources or open flames.
- DO NOT** use if the USB Type-C charging cable or diffuser is damaged. If the diffuser malfunctions, is damaged or is immersed in water, stop using the diffuser.
- Use provided USB Type-C charging cable to charge the product only.
- Indoor dry location use only.
- DO NOT** touch the ultrasonic disc with a finger or scrape it with metal tools to avoid damage to the disc.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- DO NOT** immerse the diffuser in water or any other liquid.
- Always use fragrance with water. Do not use fragrance on its own.
- DO NOT** leave the diffuser on or unattended overnight.

- Only use with essential oil or water-based fragrance. Acidic oil can damage the diffuser. Check the instructions of the oil or fragrance.
- The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or create a fire risk.
- Always unplug the diffuser from the electrical supply when filling and cleaning.
- The rechargeable battery is permanently built into the product and cannot be replaced.

GETTING STARTED OPERATING INSTRUCTIONS

- Use provided charging cable to fully charge the unit before use.
- Place the diffuser on a stable and level surface, and remove the reservoir lid.
- Fill the reservoir with water. For maximum run time, fill to "Max" line-150ml. Always use room temperature water.

CAUTION

Do not overfill the reservoir.

Do not use water over 45°C.

Do not fill water through the vent.

- Connect the diffuser via the USB cable to a wall charger or alternative power source (not included).
- The appliance must only be supplied by AS/NZS 61558.2.16 certified SELV power supply with output 5V=2A.
- Add 2 to 3 drops of essential oil to a full tank of water. For a stronger fragrance add more drops of oil, but do not exceed 4 drops.
- DO NOT** add more than 2 drops of essential oil to 20ml of water. Adding too much oil will damage the diffuser.
- Replace the reservoir lid and the cover securely.

Product Specification

Product Size:115 x 124 x 176mm

Rated input: DC5V/2A


Battery Capacity:

3.7V Lithium Ion Battery 2600mAh

Charging time: approx. 2.5 hours

Working time: approx. 2 hours

- Ultrasonic disc
- Mist control button
- Mist on light
- 1-hour timer light
- 2-hours timer light
- Intermittent mist light
- Light button
- Vent
- Reservoir lid
- Reservoir
- USB Type-C charging cable
- USB Type C socket
- Power light
- Mist Outlet

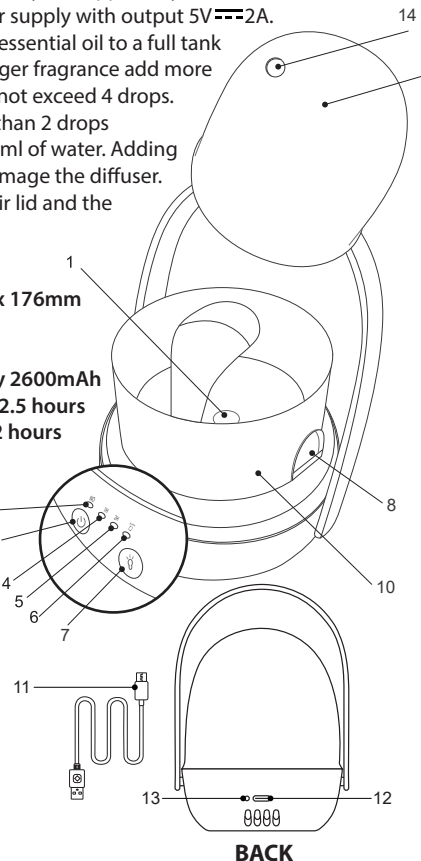

DIFFUSER SETTINGS

- Place the diffuser on a stable and level surface.
- Press mist control button (2) to turn the diffuser on
 - Press once for continuous mist and steady on
 - Press 2 times for 1 hour and continuous mist
 - Press 3 times for 2 hours and continuous mist
 - Press 4 times for intermittent mist (30 seconds of diffusion and 1 minute off,cycle repeats until water empty).
 - Press 5 times turn off the mist, the light still on
- At any time, press and hold mist control button (2) 2s to turn off the mist.

AUTO-OFF FUNCTION

The mist function will turn off automatically when the reservoir is out of water or the timer is up, but the light still on.

LIGHT SETTINGS

- Press light button (7) to control the light
- There are 3 lightness for the warm light Press the light button repeatedly to go through different settings.
- You can choose and set the lightness, the light intensity is: 100% light intensity -- 50% light intensity -- 30% light intensity -- off.
- At any time press and hold light button (7) 2S to turn off the light.

POWER INDICATOR

- The green indication light will flash to indicate the device need to be charged. After flash, the light will off, the device is out of power.
- Use provided USB Type-C charging cable to charge the device only.
- Once connected properly, the indication light will turn red to indicate that the device is being charged. The indication light will turn green then off to indicate the device is fully charged.
- Unplug the charging cable after fully charged.
- When you use the diffuser, the indication light is green. When you turn off the mist & light, the green indication light will turn off after approx. 30S.
- You can use the diffuser when charging.

WARNING

- Make sure the product has plenty of ventilation during charging.
- DO NOT** place the product in direct sunlight, heat or the under the windshield.
- DO NOT** try to repair or disassemble this product.
- When product is not in use, make sure it is correctly turned off and stored in a cool dry place
- When disposing of this product. Do so responsibly following local government requirements.
- This device is designed for household use only. It is not suitable for commercial use.

7. The rechargeable battery is permanently built into the product and cannot be replaced.
8. Never charge the rechargeable battery of the product unattended.
9. If the product shows damages, do not use it any longer and have it re-paired by a qualified technician, or contact our customer service department. Do not disassemble the product, and do not try to repair it yourself.
10. When disposing the product, please consult an electrician or your retailer to remove and dispose the built-in batteries in an environmentally friendly manner
11. Use provided USB Type-C charging cable to charge the product only.

WARNING: READ AND FOLLOW ALL ABOVE INSTRUCTIONS CAREFULLY. DO NOT DROP OR APPLY EXCESSIVE FORCE TO THIS PRODUCT. DO NOT EXPOSE TO HIGH TEMPERATURES. IMPROPER USE OR HANDLING OF THIS PRODUCT MAY RESULT IN FIRE OR EXPLOSION CAUSING SERIOUS INJURY OR PROPERTY DAMAGE.

MOVING AND STORAGE INSTRUCTIONS

1. **DO NOT** move the diffuser while in use. Spillage may cause damage to the diffuser and other parts.
2. Always hold both the base and the cover when moving the diffuser.
3. Empty the reservoir and clean the diffuser before storing.

CARE AND MAINTENANCE

1. Always turn OFF and unplug the diffuser for care and maintenance.
2. Clean the reservoir before using a different essential oil.
3. Empty the reservoir using the drain side.
4. Clean the reservoir with a soft cloth.
5. Clean scale deposits on the ultrasonic disc with clean water.
6. **DO NOT** use metal or hard abrasive to scrape the ultrasonic disc.
7. Clean the ultrasonic disc regularly to avoid scale building up.
8. If the ultrasonic disc becomes excessively scaled, clean it repeatedly to descale.
9. Dry the diffuser completely before using it again.
10. **DO NOT** use vinegar or other corrosive cleaning agents.
11. Wipe off the fan inlet regularly at the bottom with a dry, soft cloth.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred

in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Troubleshooting

Problem	Possible Reasons	Solution
Unit does not work	Recharge battery out of power	Use provided Type-C cable charge the battery
Unable to Spray mist	Water reservoir might be dirty	Clean the water reservoir
	Too much water inside the reservoir	Make sure water inside the reservoir is not over max water level
	Cover is not closed properly	Make sure the cover is tightened
	Is the bottom air inlet dirty?	Clear away the dust in the bottom air inlet
	Water level very low	Fill with more water

Caution:

DO NOT shake or tilt the product when there is water in the reservoir or else the product will not work properly

Contact for Kmart purchases

Kmart Australia Ltd.
 C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170
 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au

Contact for Target purchases

Target Australia Pty Ltd
 C/- Customer Service Centre
 2 Kendall Street, Williams Landing, Vic, 3027
 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us