

WOODEN SEESAW&BALANCE BEAM INSTRUCTIONS

Keycode: 43486953

WARNING! Requires adult assembly only. Use only under adult supervision.

WARNING! Not suitable for children under 3 years. Only for one child use as balance beam. Only for two children use as seesaw.

WARNING! Not for commercial use. Do not repeatedly assemble and disassemble the product. Do not jump on this product. Do not step on the edge or sit the edge as it poses a risk of overturning. Never allow your child jump on the product when using it.

WARNING! Contains functional sharp point. Make sure all screws, nuts and bolts are firmly tightened before using the product. Please install the product according to the instructions. Only use on flat ground. Do not expose to the sun. For indoor use only. For domestic use only.

WARNING! This product is a toy and cannot be used as a tool. Adults are strictly prohibited from stepping onto the product. If the product shows visible damage during use, please stop using it.



WARNING! Not for children with a body mass of more than 30kg.

WARNING! Always ensure the product is placed on a flat, even surface to ensure that it does not tip over.

Remove the product and related pieces from the box. Set all the parts out and read the assembly instructions prior to use. Keep the packaging until assembly is complete. Please keep for future reference.

CONTENTS:

The product consists of below components, please assemble each part step by step.

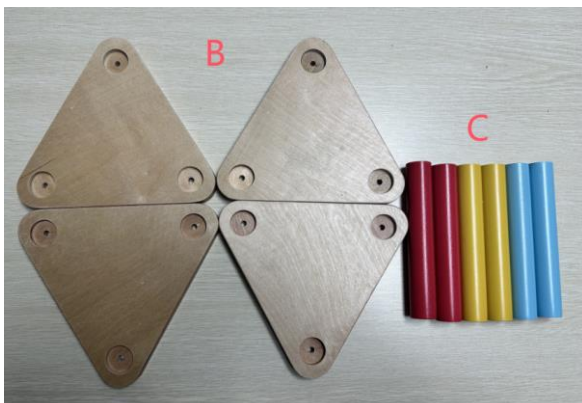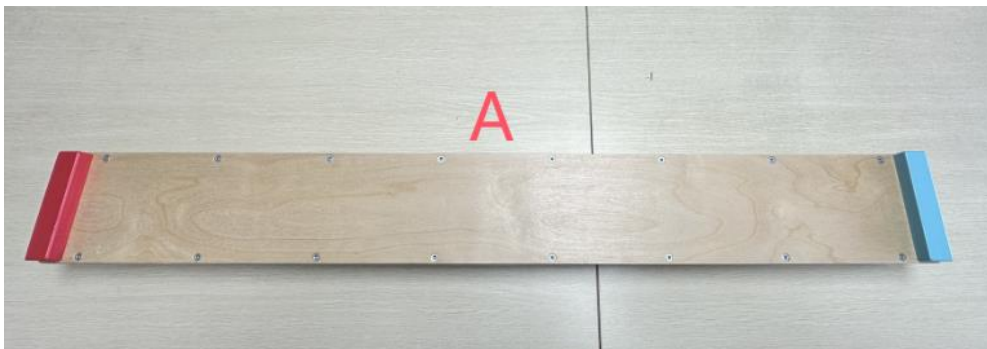


- A. 1pc wooden beam
- B. 4pcs wooden panel
- C. 6pcs wooden rung

WARNING:
A is pre-assembled, do not loosen the screws.

Accessories:
12pcs screw
1pc hex wrench

Assembly Instructions

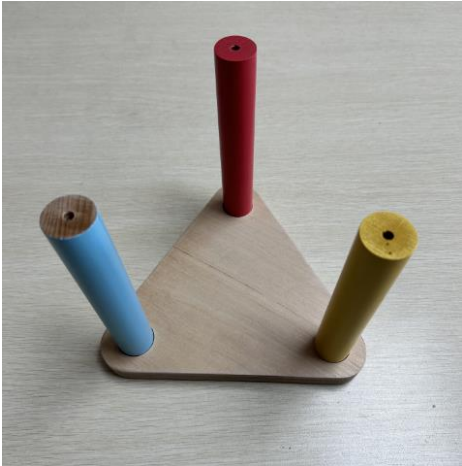

Insert the rungs one by one, using the screws to tighten. Please tighten half firstly.

Note: Please do not tighten firmly before all wooden rungs and boards are assembled.



Put another panel on and tighten with silver screws.

Note: Please tighten firmly all screws at this step.



Repeat above steps and finish assembling another triangle base.

Product picture after assembled:



Place beam and 2 bases as image to be balance beam.



Place beam and 1 base as image to be seesaw.

Storage & Care Instructions

Wipe the product clean with a dry cloth. Do not use abrasive materials or solvents. Ensure item is clean and 100% dry before storing to prevent mould and mildew. Keep away from water and direct sunlight.

It is not recommended to use power tools for assembly, which will cause the screws to slip. It is strictly prohibited to use if there is obvious deformation or damage.

It is of particular importance that they be followed at the beginning of each season as well as at regular intervals during the usage season.

Always check all screws for tightness and tighten when required. Always check all screws for sharp edges and replace when required. Always check any means of attachment for evidence of deterioration; replace when required in accordance with manufacturer's instructions. If these checks are not carried out, the toy could overturn or otherwise become a hazard. Do not use this product if you detect any damage or loosening of the screws on the products.

MADE IN CHINA

CUSTOMER SERVICE

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567