

SUPER LOOP SLOT CAR SET

6+

INSTRUCTIONS

1. Assembly Instructions

a. Assemble the track set as shown in Diagram 01. Make sure to use correct components as shown in Diagram 01. Do not join the tracks together if the joints are bent or distorted. Use tools to adjust any distorted joints as shown in Diagram 02.

b. Affix the fence to the side of tracks as shown in Diagram 04.



Diagram 01


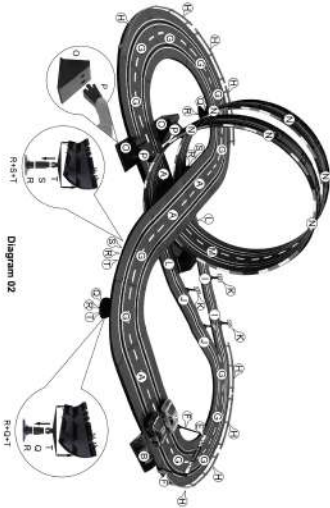


Diagram 02

RIGHT
LEFT

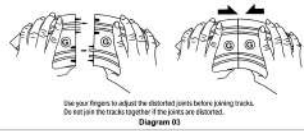

Use your fingers to adjust the distorted joints before joining tracks. Do not join the tracks together if the joints are distorted.

Diagram 03

Attach the fence to the side of the track as shown.

Diagram 04

2. DIY Track Sticker

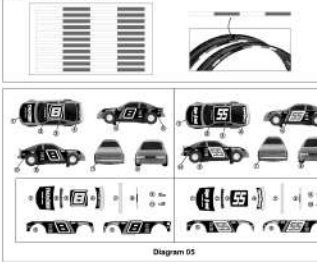


Diagram 05

3. How To Play



Diagram 06

a. Assemble hand controller as shown in Diagram 06.
b. Disconnect open battery and insert 4 x 1.5V AA batteries as shown in Diagram 06.
c. Fasten the battery lid.
d. Place vehicle on the track and press the hand controller to start your race. Make sure the vehicle starts in the correct direction of the lap counter.

Performance tip: Use hand controller to control vehicle speed. (There are two speed modes you can choose: Fast / Slow.) Press the hand controller to stop the vehicle speed will go to zero, when the hand controller speed will slow down. The vehicle may run off tracks if speed is too fast / slow.

4. Cautions

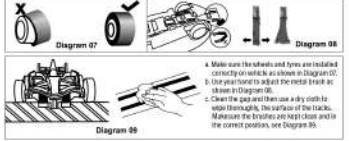


Diagram 07

Diagram 08

a. Make sure the wheels and tires are installed correctly on vehicle as shown in Diagram 07.
b. Use your hand to adjust the motor brake as shown in Diagram 08.
c. Clean the gap and then use a dry cloth to wipe thoroughly, the surface of the tracks. Maintain the tracks are kept clean and in the correct position, see Diagram 05.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -) DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE RECHARGING. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME OVERHEATED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

ADULT ASSEMBLY AND SUPERVISION REQUIRED. READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
K: 43-488-728
T: 70-384-253