

 
 
 
3+ years

# REMOTE CONTROL DINO





### BATTERY INSTALLATION:

- 1 - Open the battery compartment.
- 2 - Insert batteries into the correct + and - polarities.
- 3 - Close the cover.

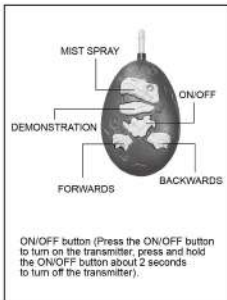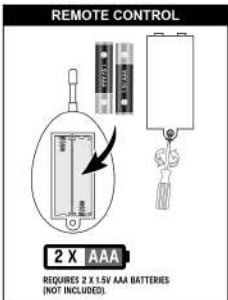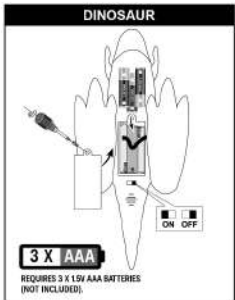


### HOW TO USE:

  1. Turn on the dino.
2. Press the ON/OFF button of the transmitter to pair to the dino.
3. When the dino is functioning, that means pairing has been successful.
4. If you have more than two dinos, please pair one by one. When the second dino is pairing, please always keep the first dino and transmitter on.
5. Please turn off both the dino and transmitter and re-start the pairing process if you are changing to play with another 2.4GHz transmitter.

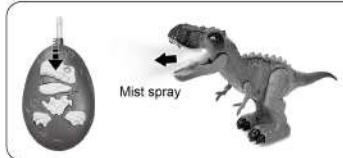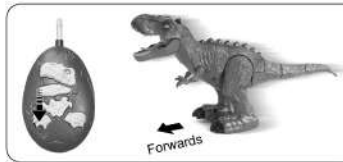

### HOW TO SPRAY:

 As shown in Figure 1, open the lid and fill with water using the dropper (included). Close the lid, and press the mist spray button to mist.

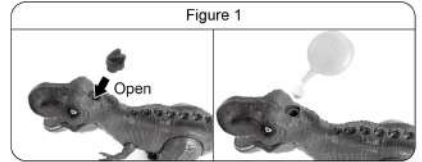

K: 43-488-766

T: 70-384-215

ADULT SUPERVISION REQUIRED.  
PRODUCT MAY VARY SLIGHTLY FROM THE IMAGE SHOWN.  
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.

**WARNING: CHOKING HAZARD**  
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

R-NZ **2.4GHz**

**WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.**

**WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.**

**WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.**