

9\*10cm

**anko**

K: 43499144 | T: 70362688 (Model: JLR-80069)

**Digital Camera**  
Instruction Manual



 
 
**Packing list:** 1pc digital camera, 1pc manual, 1pc USB-C cable, and 1pc wrist strap  
Please read all the information carefully before you use the product and keep the manual for future reference as it contains important information.

**NOTE:** The product does not include TF memory card, please purchase it separately and insert a card before take photo/videos.

**Product Specification**  
Product size: 9.6\*5.6\*2.6cm  
Rechargeable and Removable Battery: 700mAh, 3.7V  
Input Rating: 5V/1A  
TF card extension: Max support for 32GB (not included)  
Video file format: .AVI  
Photo file format: .JPG  
Camera: Photo 720P/ VGA Video 1080P/720P

**Product Feature:**  
Portable and lightweight design  
Easy to operate  
2.4-inch screen  
Up to 26 stickers  
Max Interpolation up to 1080P Video/ 720P Photo

**Product structure**

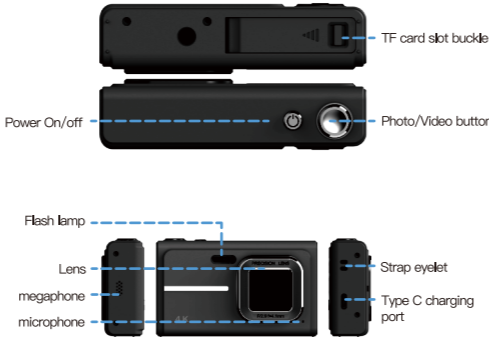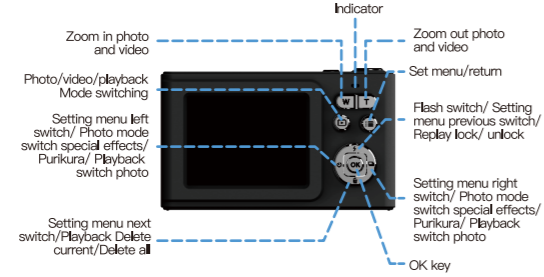

**Operating Instructions:**  
**Camera function:**

1. Press and hold to power on.
2. Press the top to take a photo (Default mode is Camera).



3. Long press **W** (Max 16x) to enlarge the image and long press **T** (Min 1x) to reduce the image.
4. Press to switch the previous filter/stickers and press to switch the next filter/stickers.
5. Press to turn on or turn off the flash.
6. Press to enter or exit Filter menu. Then press or to select and press **OK** to confirm.

**Video Function**

1. Press and hold to power on.
2. Press to take a photo (Default mode is Camera).



3. Long press **W** (Max 16x) to enlarge and long press **T** (Min 1x) to reduce before start recording.
4. Press to start recording, click again to end and save the recording.

**Playback Function**

1. Press and hold to power on.

2. Press switch to playback function.
3. Press to switch the previous photo/video and press to switch the next photo/video
4. If the file is a video, press **OK** to play or stop the video.
5. Press to enter lock/unlock menu, and press **OK** to confirm the operation, or press to return. If the file (photo/video) is set to "lock", it can't be deleted. And it need to set unlock to delete it. (lock/unlock function only works with photo/video on TF memory card)



 
6. Press or to delete/delete all files. Press to return. Or press **OK** to choose ok/ cancel and return.

**Settings**

**Time setting**

1. On the camera or video screen, press to enter the Settings screen.
2. Press or to switch to the **Settings menu**, and press or to enter submenu, switch the Date/Time function, press **OK** to enter.
3. Press or to increase/decrease the date/time, press **OK** to confirm and switch to the next step and it can be saved automatically, press to cancel and return.

4. It is only 24-hour system.

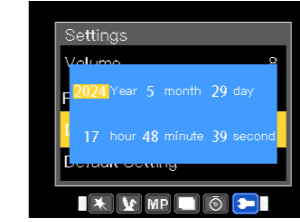

**Filter Setting:**

1. Press to enter camera mode
2. Press or switch to Filter
3. It contains 7 filters (Normal/ Reversal/ Old Photo/ BW/ Blue/ Green/ Red)



**Purikura (Stickers)**


1. Press on the camera or video screen to enter the Settings screen
2. Press or switch to Purikura (stickers)

3. Press or to switch on and off option
4. Press **ON** option, there will be 26 stickers' options
5. Press **OFF** option, there is no sticker to choose during shooting



**Image Quality Settings:**

 1. Press on the camera or video screen to enter the Settings screen
2. Press or switch to Image Quality
3. Press or to switch 48M/ 40M/ 24M/ 20M/ 18M/ 16M/ 12M/ 10M/ 8M/ 5M/ 3M/ 2M/ 1M as your need

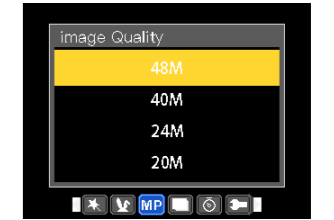


**Continuous shooting**


1. Press on the camera or video screen to enter the Settings screen
2. Press or switch to Continuous shooting
3. Press or to switch on and off option
4. On option: It will take 3 photos per time.
5. Off option: It will take 1 photo at one time.

**Self-Timer**

1. Press on the camera or video screen to enter the Settings screen
2. Press or switch to Self-Timer
3. Press or to switch Off/ 3S/ 5S/ 10S as you need
4. Off option: It will take photos immediately.
5. 3S/5S/10S option: It will take photos after 3/5/10 seconds.

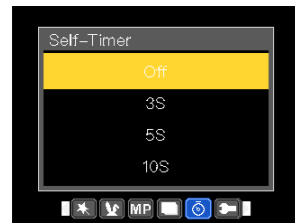 

**Table of Different functions under Settings:**

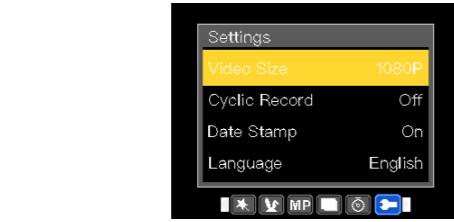 


Video Size	Press <b>OK</b> to enter and switch 720P or 1080P as you need. Default 1080P
Cyclic Record	Press <b>OK</b> to enter and switch off/ 3 Min/ 5 Min/ 10 Min as you need OFF: It will take one video per time. 3 Min: Loop video recording and each video is 3min 5 Min: Loop video recording and each video is 5min 10 Min: Loop video recording and each video is 10min Default: <b>OFF</b>
Date Stamp	Press <b>OK</b> to enter and switch off and on as you need Default <b>ON</b>
Language	Press <b>OK</b> to enter and switch Simple Chinese or English etc. total in 16 Languages Default <b>English</b>
Beep Sound	Press <b>OK</b> to enter and switch off and on as you need. Default <b>ON</b>
Brightness	Press <b>OK</b> to enter and switch from 1 to 8 degree as you need. Default <b>8</b>
Auto Power Off	Press <b>OK</b> to enter and switch off/ 1 Min/ 3 Min/ 5 Min as you need, and the machine will not be off automatically or be off in 1 or 3 or 5 Mins. Default <b>3 minutes</b>
Screen Savers	Press <b>OK</b> to enter and switch off/ 1 Min/ 3 Min as you need and the screen will not be off automatically or be off in 1 Mins or 3 Mins.

	<b>Default 3 minutes</b>
Volume	Press <b>OK</b> to enter and switch from 1 to 8 as you need. Default <b>8</b>
Format	Press <b>OK</b> to enter and switch OK or Cancel as you need. <b>CAUTION: Be attention to Format as all your record will be deleted.</b>
Date/ Time	Press <b>OK</b> to enter and switch  or  to set the date/time and final press <b>OK</b> to save and exit It only has 24-hour system
Default Settings	Press <b>OK</b> to enter and switch OK or Cancel as you need. <b>CAUTION: All the settings will be cleared up and you have to reset you need.</b>
Version	Press <b>OK</b> to check the version number and date.

**Install and Remove TF card**

 1. Push the memory card latch to release the card cover.
2. Before inserting or removing the TF card, long press the power button to turn off the machine and disconnect the charging.
3. When inserting the TF card, please pay attention to the TF card direction, otherwise the TF card may be damaged, it is recommended to use a standard TF card.

**Attention: TF card need to purchase separately.**

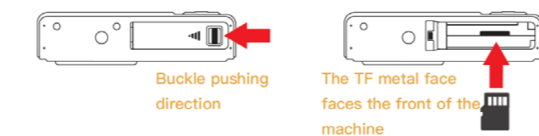


**Install and Remove Battery**

Open the cover of the bottom battery compartment, and insert the battery as below picture and close the bottom cover. Then you can start to use.

**Note:**

 Make sure the battery is inserted correctly before turn on this product  
Make sure the battery is fully charged before usage.

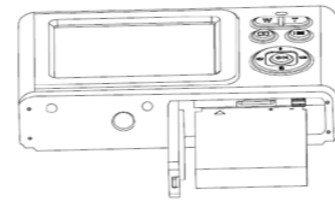

**Connecting computer to transfer files:**

 
1. Recommended to use card reader (need to purchase separately).
2. Use provided data cable to connect camera and computer

**Charging:**

1. The camera should be charged with the specified 5V/1A power adaptor.
2. Only use the provided charging cable to charge the camera
3. Only use specified charger to charge the battery.
4. Regular charging the product for every month is to ensure the life of

the product, while pro-longed period of idle or low battery level may lead to battery life issue.

5. The indicator is red and always on during charging and turn off after fully charged.
6. It takes around 3 hours to fully charge the product.

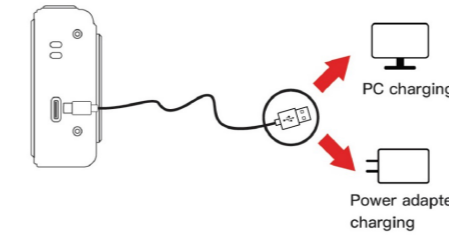

**Safety instruction**

Keep the appliance away from all hot surfaces and naked flames.  
Always put the appliance on a level, stable, clean, dry surface.  
Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.  
Do not immerse the appliance in water or in other liquids.  
Do not open the housing under any circumstances.  
Do not introduce any objects into the interior of the housing.  
Should the device malfunction due to electrostatic discharge or a short

power surge, disconnect it from your computer and then reconnect it again.

Please wipe the surface stains with dry cloth. When cleaning this product, ensure that the charger is disconnected.  
Regular checking cables and product in case it's damaged. If it is damaged, stop using immediately  
Battery is removable and replaceable, if damaged should contact service and repair.  
It contains small parts, not suitable for use of the child under the age of three!

**12 Month Warranty**

Thank you for your purchase.  
Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.  
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.  
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us