

9*10cm

anko

K: 43499281 | T: 70363210 Model: JLR-80051

Digital Video Recorder

Instruction Manual



Packing list: 1pc digital video recorder, 1pc manual, 1pc USB-Micro cable, and 1pc 4GB TF card+ SD adaptor

 
Please read all the information carefully before you use the product and keep the manual for future reference as it contains important information.

Product Specification

2.0" LCD Screen
 Battery: 3 x AAA (not included)
 4GB TF card+ SD card adaptor included.
 Supports up to 16GB TF card; (not included)
 Photo file format: JPEG
 Video file format: AVI
 Audio file format: WAV
 Max interpolation video resolution up to 720P, VGA (640X480)
 "Video" Resolution:
 1280*720 720P
 640*480 VGA
 Max interpolation photo resolution up to 16MP
 "Still" Image Resolution:
 16M(4032*3024) 12M(2560*1440) 5M(1920*1080)
 3M(1280*720) 2M(640*480) 1M(320*240)
 Supported Microsoft Windows 7/8/10 or later

Product diagram

Arts Identification

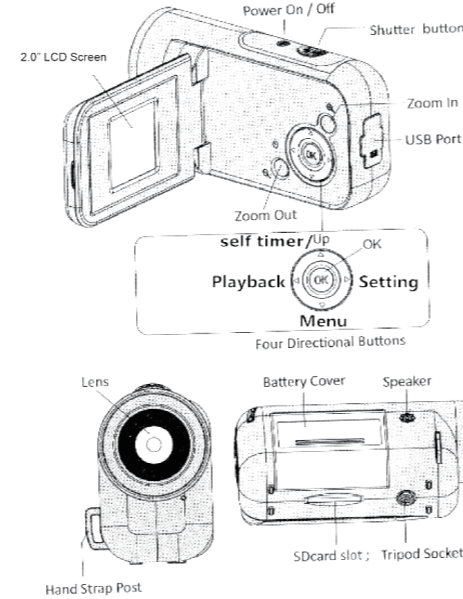

Button Description

Button	Description	Function
	Power button	Press it 2 to 3 seconds to turn the recorder on /off
	Shutter button	Start recording video or take a picture
	Four Directional Buttons	Enter into Menu and Submenu
	Zoom	Zoom in/ Zoom out

Before Starting to Use

Insert SD memory Card


Please insert SD memory card as below diagram, and make sure that the golden finger is facing downwards (Beware of the orientation of video recorder)

Note:

1pc 4GB TF card+ SD adaptor included.
 Max support 16GB (need to purchase separately)

The SD memory card must be inserted before power on if you want to record or photo taking. Please insert the video recorder with SD card inserted in if device doesn't detect the SD card.

 Diagram for inserting SD memory card

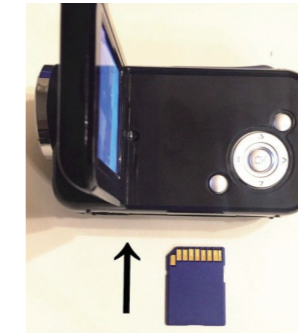


Battery installation

• Slide down to open and remove the battery cover, and install three AAA alkaline batteries according to the polarity signs on terminals location.
 • The close it by sliding the leading end of battery cover into battery latch, press down the cover to latch the battery compartment securely.

Note: Reverse installation direction of anode (positive) and cathode (Negative) may lead to damage onto the video recorder or a fire accident.

Attention: This product is not waterproof. Please be careful during use.

 Diagram for installing AAA batteries

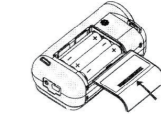

Video Mode

This section is about how to record with this video recorder.

Go to video Mode

	Power button: Hold it for 2-3 seconds to turn the recorder on.
	Press to select video mode (Changing mode from camera to video. Default mode is Camera.)
	Press to start recording video and press again to save video
	Press to find video album and press OK button to play video

Table of display in Video Mode

Icon	Mode	Function
	Video mode	Video recording (Each video recording time: max 10mins)
	720P: 1280X720 VGA: 640X480	Displays the size of the current video
	SD card	Indicates the SD card has been inserted in this video recorder
	Battery Conditions (full, half, low, depleted)	Shows current battery power status

	zoom	Zoom in or zoom out
--	------	---------------------

Note:

- The duration of recording is subject to video resolution.
- Please press "Q" zoom in and "Q" to zoom out before record it necessary.
- Press "▶" (turn right) to exit the menu.
- The screen is not rotated.
- If the memory card capacity is low, it can't support to take videos.

Camera Mode

This section tells you how to take photos.

Go to Camera Mode

	Power button: Hold it for 2-3 seconds to turn the recorder on.
	Press to take photo (The default mode is camera)
	Press to enter photo album

Table of display in Camera Mode

Icon	Mode	Function
	Camera mode	Take still picture
	Self-timer mode setting (off, 2 sec delay self-timer, 10 sec delay self-timer, burst)	Max setting as 10s delay self-timer Burst: continuously take three photo
	Zoom	Zoom in and zoom out
	Resolution 16M:4032x3024 12M:2560x1440 5M:1920x1080 3M:1280x720 2M: 640x480 1M:320x240	Selection for size of the still pictures

	Quality (super, fine, normal)	Adjust photo quality
	SD card	Indicates the SD card has been inserted in this recorder
	Battery conditions (full, half, low, depleted)	Shows current battery power status
	Quantity of photos can be taken and saved	Number of photo can be taken and saved
	EV(Exposure) -2.0, -1.7, -1.3, -1.0, -0.7, 0.3, +0.0, +0.3, +0.7, +1.0, +1.3, +1.7, +2.0	Adjust brightness
	OFF, Date, Date/time	The date or date & time can be showed on the photos.

Note:

- The quality of the picture to be saved is subject to the resolution and quality of still pictures.
- Press "Q" button to zoom in and press "Q" button for zoom out
- Press "▶" to exit menu.
- The screen is not rotated.

Audio Mode

This section tells you how to take and play audio.

Go to Audio Mode

	Power button: Hold it for 2-3 seconds to turn the recorder on.
	Press to select audio mode (Changing mode from camera to audio, Default mode is camera)

	Press to take audio and press again to save
	Press to find audio album and press OK button to play audio.

Below is the audio screen and it shows the audio name & format as well as the audio time.



Playback Mode

This section tells you how to use playback function

Go to playback mode:

- Open display screen, press "Q" for 2-3 seconds to turn it on.
- Press "◀" to enter into or exit playback mode
- Press "OK" to play or stop photos, video or audio
- Press "▶" to enter into playback menu to lock/unlock/delete the file as below sheet.

Icon	Sub Menu	function
	Lock This/ Unlock This/ Unlock All	Lock is preventing important file from being deleted
	Delete/ Delete All	To delete one or all files

Menu setting

How to set up menu and submenu

- Open display screen, press "Q" for 2-3 seconds to turn it on
- Press "▶" to enter setting menu, then press "◀" to set up menu.


Table of Submenu Setting

Icon	Submenu	Function
	Time Setting	YYYY/MM/DD
	Auto Power Off	Off, 1 mins/3 mins/5 mins
	Screen savers	Off, 1 mins/3 mins/5 mins
	Sounds	Shutter: On/off Start-up: 0 to 3 Beep: on/off Sounds: 0 to 3
	languages	Select the language you need within 17 choices
	Frequency format	50HZ, 60HZ Yes/NO
	Default setting	OK/CANCEL
	Version	Software version

	Time Setting	YYYY/MM/DD
	Auto Power Off	Off, 1 mins/3 mins/5 mins
	Screen savers	Off, 1 mins/3 mins/5 mins
	Sounds	Shutter: On/off Start-up: 0 to 3 Beep: on/off Sounds: 0 to 3
	languages	Select the language you need within 17 choices
	Frequency format	50HZ, 60HZ Yes/NO
	Default setting	OK/CANCEL
	Version	Software version

Connect to PC

 Please connect the video recorder to PC with the included USB cable as below diagram, then you can find your photos and videos.

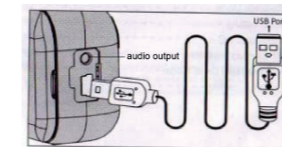

Safety Instructions:

Please read the instruction manual before using this device and follow all the safety instruction to avoid damage caused by improper use.

- Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual should also be handed over.
- Use this device solely for its intended purpose.
- Keep the appliance away from all hot surfaces and naked flames.
- Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- Do not open the housing under any circumstances.
- Do not introduce any objects into the interior of the housing.
- Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

WARNINGS:

Insert batteries with the correct polarity and always follow the manufacturer's instructions.

Remove batteries if product will be stored for an extended period.

Dispose of used batteries responsibly

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
 For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic. 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us