 


anko

K: 43499298 | T: 70363227 (Model: JLR-80229)

Multimedia Projector User Manual

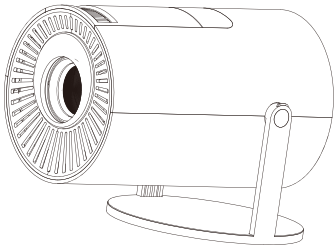

Thanks for purchasing our products. In order to ensure that you can fully understand, install and use this product please read the instructions carefully, please keep it properly after reading for future reference.

Warning:

1. The projector is non dustproof or waterproof.
2. In order to reduce the risk of fire and electric shock, do not expose the projector to rain and fog.
3. When projector is working, please do not look directly into the lens, the strong light will flash your eyes and cause slight pain. Children should use the projector under the supervision of adults.
4. Do not cover the vents of projector. Heating will reduce the life of projector and cause danger.
5. Regularly clean projector vents, or dust may cause cooling malfunction.
6. Do not use the projector in greasy, damp, dusty or smoky environment. Oil or chemicals will cause malfunction.
7. Please handle with care during daily use.
8. Please cut off the power if the projector is out of use for long time.
9. Please pay attention to important information related to the operation and maintenance of the projector. You should read this information carefully to avoid problems. Following safety instructions will increase the life of projector.
10. Please consult the qualified personnel for installation and repair services, and do not use damaged wires, accessories and other peripherals.
11. Projector should be kept away from flammable, explosive, strong electromagnetic interference (large radar stations, power stations, substations etc.), strong ambient light (avoid direct sunlight), etc.
12. Please use the original power adapter.
13. Do not bend or drag the power cord.
14. Do not put power cord under projector or any heavy objects.
15. Do not cover other soft materials on power cord.
16. Do not heat the power cord.
17. Avoid touching power adaptor with wet hands.

Specifications

Power Input: 100-240V, 50/60Hz 0.8A

 
 
Video Input: HDMI 1.4 input

PROJECTION DISTANCE: 1.2-4M


CONTRAST RATIO: 1500:1


Audio output: 3.5mm AUX output

Bluetooth Device Name: anko43499298

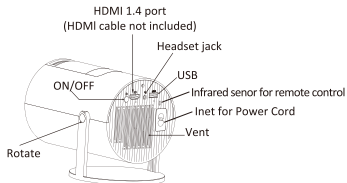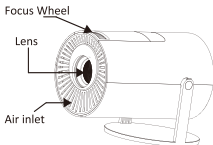

Power Cord

 

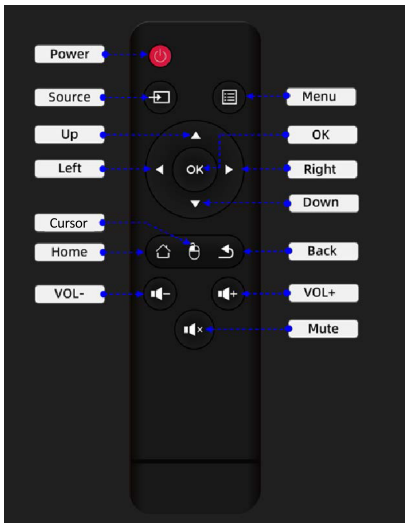 


Note:

1. Press "Source" to choose USB memory stick input or HDMI video source input.
2. Press "Cursor" to perform function operations.

Power on

 1. Plug in the power cord to the projector and then connect it to the mains.
2. Press the "Power" button on the projector or the "Power" button on the remote control to turn on the device.
3. Adjust the 'Focus Wheel' to achieve the clear projection image.
4. Connect the projector to your home network for a better experience before using it. (Please see the 'Network Setting')

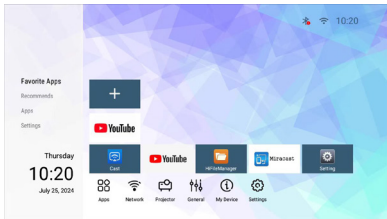

USB Playing


Insert the USB Memory Stick or USB Hard Disc (support up to 256GB) into the projector, select your file and press the "OK" button to enter the list.

Supported files formats for USB input:

VIDEO FORMAT: MP4/RMVB/AVI/ RM/MKV


AUDIO FORMAT: MP3/WMA/ACC

 IMAGE FORMAT: JPG/BMP/PNG

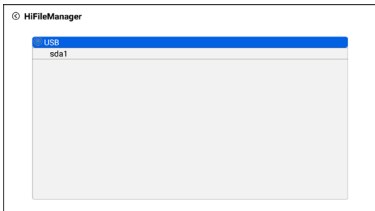


HDMI Playing

 1. Insert the HDMI cable into the projector and HDMI source.
2. HDMI input source will be auto detected. Press "OK" button on the remote control or wait for 10s to enter the HDMI channel.

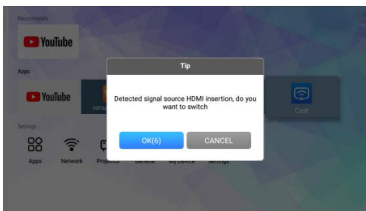


Note: When the HDMI is connected, if you would like to exit HDMI channel manually, perform the follow operations to return to HDMI channel:

 - Press 'Home' button on the remote control to exit the HDMI playing.
- If you want to play the HDMI video again, press the "Source" button on the remote control.
- Select the "HDMI" icon and press the "OK" button to re-enter the HDMI channel.

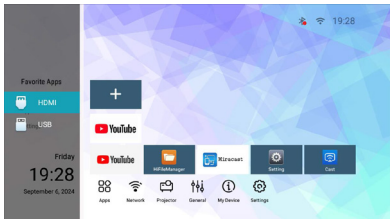

The Setting Page

 Click 'Setting' on the projector homepage.

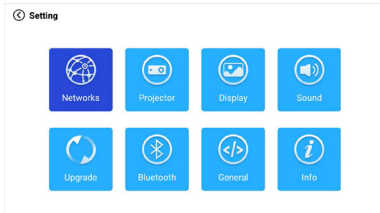

Network

 
Setting -> Networks -> Wi-Fi; select objective WIFI ID and input password to connect internet.



Projector

Setting -> Projector, enter to setup Keystone Correction and Display Area.

- Zoom: Press 'Up' or 'Down' to scale the projected area
- 4-Point Correction:
 1. Press "UP", "Down", "Left" or "Right" to adjust current vertex.
 2. Press "OK" to select vertex.
 3. Reset Position: Press "Menu" to reset position.
- Vertical Correction: adjust the picture using the directional keys until the guide lines form a rectangle.
- Auto Trapezoid Switch: Turn on/off automatic keystone correction.

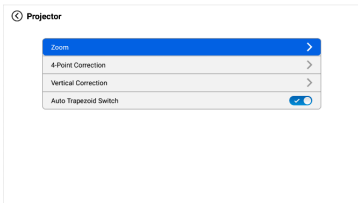

Display

Setting -> Display; enter to adjust the projected image

◀ Image Mode

Image Mode	<	Standard	>
Brightness	<	50	>
Contrast Ratio	<	50	>
Saturation	<	45	>
Sharpness	<	50	>

Sound

Setting -> Sound; enter to setup audio effects

◀ Sound Mode

Sound Mode	<	User	>
Bass	<	50	>
Mid Bass	<	50	>
Alto	<	50	>
Mid High	<	50	>
Treble	<	50	>

 
Upgrade

Setting -> Upgrade; upgrade can be done by Online.

OTA upgrade: When the projector is connected to the Internet, user can receive OTA notifications when updates are available.


Using Flash Drive:

Note: This function is not available

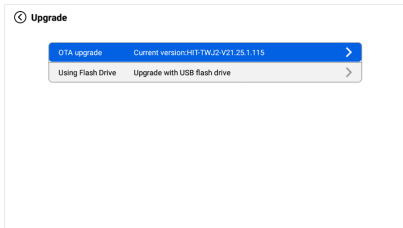


Bluetooth

 Setting -> Bluetooth; Bluetooth Switch "ON", click Search for Devices and choose objective device to pair.

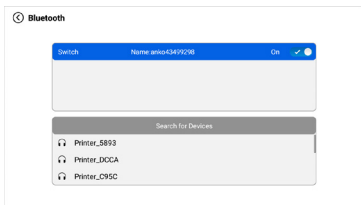


Bluetooth Speaker & Breathing Screen & Timed Shutdown

 Press the "Power" button on the remote control to choose any of the following functions: Bluetooth Speaker / Breathing Screen / Timed Shutdown.

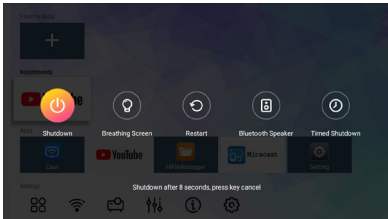

General Setting

 Setting -> General; enter to setup the projector features

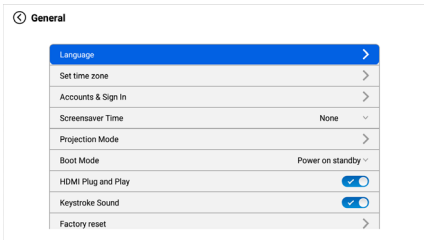

Miracast (for Android Devices)

Ensure that Android devices (phone, tablet, etc.) are in the same local wireless LAN with these devices.

Operations on Devices:

Homepage → Apps → Miracast → Open Miracast service → Turn on the phone mirroring → Connection



Miracast

Waiting for connection.

Device Name

 
Android_20ff

Cast (For Apple Devices)

Ensure that Apple devices (iPhone, iPad, etc.) are in the same local wireless LAN with these devices.


Operations on Devices:

Homepage → Apps → Cast → Open Cast service → Start projecting screen → Turn on the mirroring → Connection

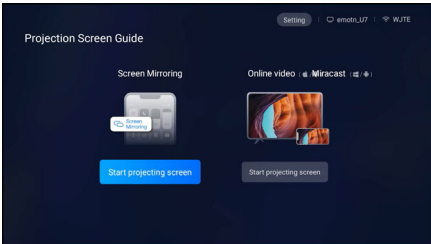

Apps Operation:

 Long press "OK" button on apps icon and enter to "Selection action" to perform the following 3 operations: Uninstall/Clear Cache/Clean Data

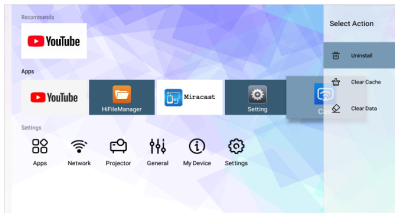

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming

the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us