

anko

WATER RESISTANT RGB LANTERN SPEAKER

User Manual

K: 43499892 | T: 70363838
Model: 43499892



Please read all instructions carefully and keep for future reference.

Warning:

1. Keep the unit away from liquids and moisture.
2. Allow a minimum distance of 100 cm around the apparatus for sufficient ventilation.
3. The ventilation should not be impeded by covering the ventilation opening with items.
4. Keep away from naked flames and other heat sources.
5. The apparatus is only suitable for mounting at height < 2m.
6. This product shall not be connected to power supply source exceeding PS1 (5V d.c. 1A).
7. The marking located on the bottom of the apparatus..

Rechargeable Battery Safety Information:

1. Dispose of this product in accordance with local regulations.
2. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
3. Do not attempt to remove or replace the internal battery.
4. Exposure of the battery to fire, extreme heat, cutting or crushing may result in fire or explosion.
5. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



Product Specification

Charging input rating: 5V 1A Charging
time: 3.5 Hours
Playback time at 50% volume: 5.5
Hours Power: 5 W
Speaker: 52mm
AUX In: 3.5mm
IP Rating: IP54

Product feature:

- Multi-lighting effects
- Bluetooth version 5.3
- Built-in rechargeable lithium battery

Button and interface:

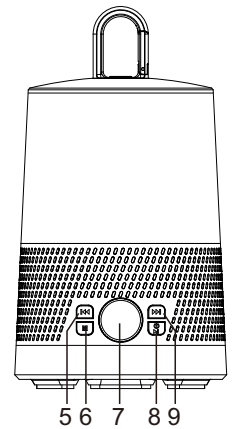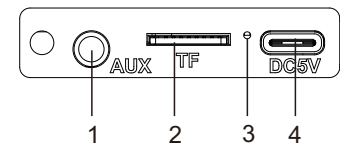

1. Aux Input: Insert the 3.5 mm cable.
2. TF Card Input: Insert the TF card to play the tracks.
3. Battery Charging Indicator
4. DC Input
5. Long press to switch to the previous track; Short press to reduce the volume.
6. Short press for BT/TF/AUX modes switch; Long press to turn on the TWS mode.
7. Short press to switch the light modes.

Long press to enable white noise mode (3 songs), long press again and will hear the DIDI prompt tone to exit the white noise mode.

Rotation: Turn clockwise and counterclockwise to adjust the brightness of the light.
8. Short press to play/pause music.

Long press to power on and power off the the product.
9. Long press to switch to the next track ; Short press to increase the volume.

Charging the Speaker

The speaker comes with a built-in rechargeable battery, follow the below steps to charge it:

1. Plug the end of USB charging cable (included) with USB charger (not included) to the DC 5V charging port, another end plug into a wall outlet to start charge.
2. The battery indicator will show RED on the back and turn off when fully charged.
3. When the battery is low, the speaker would prompt the tone to advise user to charge the speaker.

Powering ON/OFF

1. Make sure that the speaker has been charged.
2. Long press the [M] button front panel to power on the speaker and will enter Bluetooth pairing mode.
3. The speaker may automatically re-pair to any nearby previously paired device.
4. Long press the [M] button to power off the speaker.

*Please note that Bluetooth will be disconnected when switching to other modes.

Changing Function Modes

1. Press the [M] button the front panel of the speaker to switch function modes.
Note: You must have a micro TF card or AUX cable connected to switch to these modes.

Adjusting Volume & Playback

1. Short press the [M] button to decrease or increase the volume; or the controls on a connected device.
2. Long press the [M] button on front panel to switch the tracks in Bluetooth/ TF card mode.
3. Press the [M] key to pause and resume playback in Bluetooth/TF mode

TF Card Playing

This speaker has a TF card input slot for play back MP3 music.

1. Insert your TF card into the input slot and speaker will start playing automatically.

2. Press the [M] button to swith to TF card mode if the speaker is on other mode.
3. Long press the [M] button or the [M] button on fron panel switch to the previous or next track.
4. Press the [M] key to play or pause music.

Connecting with Bluetooth

1. Power on the speaker and will enter into the bluetooth mode.
2. Open the bluetooth on your mobile device and search Bluetooth name 43499892 to pair.
3. In Bluetooth mode, playback and volume can be controlled by your paired device or the controls on the front panel of the speaker.

TWS Connecting

*This speaker supports TWS pairing function, please buy two same speaker to enjoy this function.

1. Long press [M] button on two speakers to turn on the TWS pairing function (please do not connect the bluetooth first before turn on TWS).
2. The TWS will pair automatically once both speakers turn on the TWS function.
3. Turn the buttons on the front panel of any speaker increase or decrease the music volume.
4. If not using the TWS function, please long press [M] to disconnected TWS.

Switching the Speaker Light Effects

1. The LED light effects will automatically turn on when the speaker is powered on.
2. Press the [M] key on the front panel to switch LED light effects and turn the lights off.
3. Long press to enable white noise mode , and press [M] [M] to decrease or increase the volume; long press again and hear the DIDI prompt tone will exit the white noise mode.
4. Turn clockwise and counterclockwise the knob button to adjust the brightness of the light.

Connecting to an AUX Device

1. Insert one connector of 3.5mm AUX cable (included) into the 3.5mm AUX input . Insert the other connector into the headphone jack or audio output jack of your media playing device.
2. In AUX mode, the [M] [M] can be controlled.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us