

9*10cm

anko

Keycode: 43514991 Model: JLR-80046

Cordless Rechargeable Screwdriver

Instruction Manual



Packing list: 1pc cordless rechargeable screwdriver, 1pc USB-C cable, 1pc manual, 18 pieces accessories.

Note: Before using power tool, carefully read through these instructions to ensure efficient, safe operations. It is recommended that these instructions be kept readily available as an important reference when using this tool.



Warning! For your own safety and the safety of others, please read this information carefully before using the screwdriver and keep it in a safe place for reference.



Caution! Read all safety warnings and instructions.

Functional Description



18 Pieces accessories



Note: Change the Screwdriver bit as you need. Keep screwdriver accessories away from children during and after work.

Technical Data

Chuck: 1/4"= 6.35 mm (male) forward/reverse switch for screwing/un-screwing
 Rechargeable battery: 3.7V Li-ion, 1500mAh
 No load speed: 200RPM
 Max. Torque: 4Nm
 Input Rating: 5V, 1A
 1m USB-C cable included.

Safety Instructions



The safety instructions should be read carefully before operating the screwdriver. Save the safety warnings and the instructions for future reference.



Caution! Charging time should not exceed 5 hours.

The following recommendations should be strictly complied with before operating the screwdriver in order to avoid damage to the equipment and hazard to the user.

1. Wear individual protection equipment if necessary (gloves, eye protectors, etc. All need to purchase separately) Do not wear jewelry or close-fitting clothing, protect long hair.
2. Disconnect the charger when not in use or when replacing a tool bit.
3. Work in a clean and tidy room with sufficient lighting.
4. Place and store the screwdriver in a dry place, far from heat or flammable gases (best temp, is between 10 and 15°C). Do not operate the screwdriver close to explosive substances or inflammable material.
5. Use screwdriver adapted to the task to be performed. This do-it-yourself screwdriver is not designed for commercial use.
6. Do not work close to people, particularly children if work is hazardous. Keep screwdriver away from children during and after use.
7. Make sure you do not use the screwdriver on live parts to avoid electric shock. Make sure you locate any electric wire or cable inside the wall before using the tool.

8. Do not try to open or disassemble the screwdriver or the charger.
9. If the charger is damaged (case, wires or plug), replace it immediately.
10. This screwdriver does not require special maintenance. The same applies to the electrical parts of the tool.
11. Plastic parts should be cleaned only after disconnecting the charger. Use a wet cloth with mild detergent or soap. Do not immerse the screw driver or the charger in any liquid. The use of solvent, alcohol, petrol, etc. is not recommended.

Operation

CAUTION! Safety Instructions should be read carefully before operating the screwdriver.

Power Supply

The screwdriver is fully charged after 3-5 hours. The red light is always on during charging and turn to green light after fully charged. Only use the charging cable provided to charge the screwdriver Use a USB power source rated at 5V/1A only. To prolong the life of the rechargeable battery, recharge the battery regularly, i.e., once a month. It contains small parts, and please keep away from children.

Screwing/Unscrewing

The screwdriver is equipped with a forward / reverse switch (lever) to change the direction of rotation.

1. Clockwise, push the button.
2. Anti-clockwise push the button.
3. To stop rotation, release the switch.

Gun Shape

1. For ease of use, the screwdriver may be changed from gun shape to straight position.
2. For this purpose, press the lock button (Rotary button) and simultaneously move the handle.



Disposal product



End of life electrical equipment must not be placed in household waste. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Please take it to a return point.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us