

size:100x62


anko

Kids Camcorder

K: 43-529-667 | T: 70-869-422

K: 43-530-809 | T: 70-872-682

factory model: ZB202419006

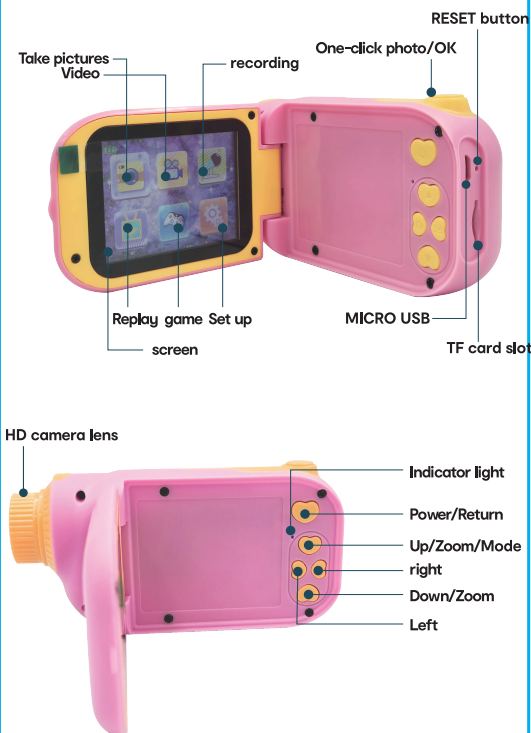

Start to use

1. Charging

Use Micro-USB cable to charge if it is low battery. (Charging: Micro USB DC 5V/1A; battery: Li-ion802040-3.7V 600mAh).

2. How to use the memory card

2.1. Properly insert the TF card into the card holder as per the instructions near the card holder.

2.2. To remove the TF card, press the end of memory card gently, the card will be ejected.

NOTE

Please insert TF card before taking video and photos.

> If you want to read the photos or video of the TF card through computer, please retrieve it on the computer through a card reader (included).

> To achieve the best photo / video taking experience, it is suggested to use with high speed TF card (Write: 20-35MB/s; Read: 40-80 MB/s, TF card maximum supported size: 32 GB)



3. Power on/off

3.1. Power on : Long-press the power Button the screen will be on and the camera will be started.

3.2. Power off : Hold on Power Button for 3 seconds when the camera is in the idle state to turn it off.

3.3. Auto screen off : The screen will be turned off automatically when the time that the camera is in the idle state for automatic screen off to save power.

3.4. Power off when the camera is lack of electricity. When electrical quantity of the battery is very low, an icon of will be displayed on the LCD screen, prompting you to charge it in time. When the icon flickers the camera will be turned off automatically.

4. Video mode, take pictures mode, replay mode, game mode, recording mode and set up mode

4.1. Video mode

When you turn on your camera, you are in main menu, find icon , short-press will enter video recording mode, short-press to start video recording; short-press it again to stop shooting.

Tips: If you want return menu, kindly short-press power button .

4.1.1 Short-press up or down button to choice color effect of images. There are seven kinds of color effects, such as normal, black and white, retro, negative, red, green, blue.

Note: Some TF cards may have slow writing speed. It is strongly recommended to take a single video with duration no more than 30 mins. If record a video for more than 20 mins, suggest to wait for 30s before taking the next video.

4.2. Take picture mode

4.2.1. When you turn on your camera, you are in main menu, find icon , short-press the take photos button to enter photo mode, short-press the button to capture your photo.

Tips: If you want return to menu or exit, kindly short-press power button .

4.2.2. Short-press pageup or pagedown button to join different frames or vibrato effects mode (15 photo stickers, 3 special effects and 6 filters).

4.2.3. You can long-press page up button or page down button to magnify or minify focal length (0-4 times).

Tips: You can set timed photo function at setting menu, there are three kinds of model: 2S, 5S, 10S.

4.3. Replay mode

4.3.1. Enter main menu, find icon , short-press into playback mode, short-press to start playback, short-press again to stop playback, you can short-press left or right button to see the photos and videos you took.

Tips: If you want return to menu or exit, stop playing the video, kindly short-press power button .

Note: If the camera is locked during reply mode, corrupted file(s) may be written to the TF card during photo / video taking.

1. Remove the TF card from camera and backup the taken photos and videos in computer using the provided TF card reader; (Data cables cannot be used to read data.)

2. Format the TF card in computer;

3. Press RESET button to restart the camera;

4. Insert the formatted TF card into the camera.

The camera cannot be used while charging.

4.4. Game mode:

Enter main menu, find icon , short-press into game mode, you can short-press or right button to choice, then short press to confirm. (5 games: Hit plane, Push Box, Snake, Maze, Guess number)

Tips: If you want return to menu or exit, kindly short-press power button .

4.5. Recording mode

Insert TF card with audio files, enter main menu, find icon , and short-press and will enter sound recording mode, short-press will enter video recording mode, short-press to start video recording; short-press it again to stop recording.

4.6. Set up mode

> Enter main menu, find icon , short-press into setting mode.

More functions as below:

- (1) Format: execute, cancel (Erase all data on the TF Card)
- (2) Date input: Year/Month/Day (setting the date and time of the cameras)
- (3) System reset: execute, cancel (Reset settings of the camera to factory default)
- (4) Photo size: YGA, 1.3M, 3M, 5M, 8M, 12M (Pixel Size)
- (5) Delay capture: Off, 2S, 5S, 10S
- (6) Burst: on, off (can take three consecutive photos)
- (7) Language: Chinese, English, German, French, Spanish, Japanese, Russian, Korean, Italian, Hebrew, Portuguese, etc. (12 Languages)
- (8) Volume: level 0-7
- (9) Version
- (10) Resolution: 1080P, 720P, VGA

WARNING! IMPORTANT INFORMATION: PLEASE RETAIN THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION. DO NOT CONNECT TO POWER EXCEEDING THE RECOMMENDED VALUE. THE TOY SHALL ONLY BE USED WITH A TRANSFORMER FOR TOYS OR A POWER SUPPLY FOR TOYS. THE TRANSFORMER, POWER SUPPLY, OR BATTERY CHARGER SHOULD BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, PLUG, ENCLOSURE, OR OTHER PARTS. IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED. THIS TOY CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.

WARNING! MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD DO NOT PUT INTO THE MOUTH.

WARNING! THIS TOY CANNOT BE OPERATED DURING CHARGING BATTERY. ADULT SUPERVISION REQUIRED AT ALL TIMES. THE TRANSFORMER OR POWER SUPPLY IS NOT A TOY.

SEPARATE SUPPLY UNIT

READ OPERATORS MANUAL

packaging must be retained since it contains important information.

Made in China