

**OPERATING INSTRUCTIONS:
NON DATE WATCH**

Pull the crown out to position B
Advance hands clockwise to the correct time
Return to position A



 
DATE WATCH

Time setting as before, but pull crown out to position C.
Date setting by pulling crown out to position B and turning clockwise or anti-clockwise.
Return to position A



DAY/DATE WATCH

Time setting as above, but pull crown out to position C.
Date setting by pulling crown out to position B and turning clockwise.
Return to position A.
Day setting by pulling crown to position B and turning anti-clockwise.
Return to position A.



NOTE: Do not wind the crown when it is in position A.

If your watch has a second (sweep) hand you will notice that on pulling the crown out to position C, the second hand stops – this is normal.



WARNING

DISPOSE OF USED BATTERIES IMMEDIATELY

BUTTON CELL BATTERIES ARE HAZARDOUS (NEW OR USED). KEEP AWAY FROM CHILDREN. BUTTON CELL BATTERIES CAN CAUSE SEVERE OR FATAL INJURIES IN 2 HOURS OR LESS IF THEY ARE SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON CELL BATTERY, CALL THE 24-HOUR POISONS INFORMATION CENTRE IN AUSTRALIA ON 131126 OR IN NEW ZEALAND 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT