

正面

Digital Module Instructions



- Features:**
- Hour/Minute/Second
 - Display light
 - Stop watch function
 - Alarm
 - Hourly chime
 - Stainless steel back and buckle
 - Day/Date

Note:
Watch must not be used in water Do not use chemical solutions to clean the watch. Use a clean dry cloth only

Direct contact with sprays such as hairsprays, perfumes may cause damage to your watch,
Leather straps and PU straps deteriorate at different rates depending on climatic conditions, sweat acidity and levels of wear and tear
Battery type: Please refer to the case back for the battery information
For Battery replacements contact your local watch repairer.

Exhausted batteries should be

removed and discarded of immediately. Must be kept out of reach of children

SETTING THE WATCH:
In normal display settings

Setting the Seconds:

- Press "Mode" x 3 times to display "second" settings
- Press "Start" to set second

Setting the Minutes:

Press "Reset" x1 time to display "Minute settings
Press "Start" to set minute

Setting the Hour:

Press "Reset" x1 time to display "Hour" settings

Press "Start" to set hour

Note that when setting the hour, the watch will go through the following:

- twelve hours while showing the "A" for indicating AM

反面

- twelve hour while showing the "P" for indicating PM
- 24 hours (0 - 23) while not showing "A" or "P" meaning it is in 24hr mode

Setting the Day of the week:

Press "Reset" x1 time to display "Day" settings

Press "Start" to set Day of the week.

Setting the Month:

Press "Reset" x1 time to display "Month" settings

Press "Start" to set Month

Setting the Date:

Press "Reset" x1 time to display "Week" settings
Press "Start" to set date,
Press "MODE" once to store the settings

Stopwatch setting

-Press "Mode" once to display stop watch setting

-Press "Start" Once to start

-Press "Start" to Pause

- Press "Reset" to reset

Alarm Setting

- In normal display setting, press "Mode" twice for the hour setting

- Press "Start" to set hour
 - Press "Reset" once for the minute setting
 - Press "Start" to set minute
 - Press MODE once to store the settings
- Activating the Hourly Chime & Alarm Chime**

In the normal display mode press & hold the "Reset" button

While the "Reset" button is pressed also press the "Start" button to either activate or de-active

Release both buttons to save your preference
Depending on the model either the "ALM" (alarm) and "CHI" (hourly chime) will be displayed OR a bell symbol will be displayed

Day/Date Display

1- In the normal time display mode press and hold "Start" to see the date and month

2- Release the "Start" button and the display will return to normal time display



WARNING

DISPOSE OF USED BATTERIES IMMEDIATELY

BUTTON CELL BATTERIES ARE HAZARDOUS (NEW OR USED). KEEP AWAY FROM CHILDREN. BUTTON CELL BATTERIES CAN CAUSE SEVERE OR FATAL INJURIES IN 2 HOURS OR LESS IF THEY ARE SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON CELL BATTERY, CALL THE 24-HOUR POISONS INFORMATION CENTRE IN AUSTRALIA ON 13126 OR IN NEW ZEALAND 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT