

正面

CK11074



A: Features

- ◆ 12 Digit display showing hours, minute, second, day, date and month
- ◆ Alarm and hourly chime
- ◆ 12/24 hours display option
- ◆ Calendar function
- ◆ 1/100 second stopwatch
- ◆ EL backlight

B: Operational Instructions

1. In any mode, press the A key to EL backlight for three seconds. In any mode press the B key to select through the functions – time, stopwatch, alarm, time setting
2. Stopwatch and sectional timing function
 - ◆ The display range of the stopwatch is 23 hours, 59 minutes and 59.99 seconds
 - ◆ In the stopwatch mode, press the D key once to start running seconds, and then press

the D key once to stop running seconds. When the running seconds stop, press the C key to reset the stopwatch to zero

- ◆ In the stopwatch mode, press the D key to start timing, press the C key to enter the segmented timing state, then press the D key to exit the segmented timing state, and enter the stopwatch stop state; When exiting sectional timing, press C key to display all stopwatch time, and then press C key to run seconds to zero;

- ◆ When running, press B to return to the time display mode, with the stopwatch running behind

3. Turn off and on the alarm function and hour alarm

- ◆ Closing and opening of alarm and hourly alarm: In the alarm mode ("hour" and "minute" do not flash), press D to turn on/off the alarm in turn:

反面

Alarm symbol **ALM**, hourly alarm symbol **CHI**. When alarm is on, symbol **ALM** will flash, the alarm will stop automatically after 20 seconds

- ◆ When setting the alarm, in the alarm mode, press the C key "hour" to flash, press the D key to adjust, then press the C key "minute" to flash, press the D key to adjust, and then press the C

key to finish the setting.

- ◆ When the alarm rings, press B to start the snooze function. After 5 minutes, the alarm will ring again for 20 seconds. Press C/D to stop the alarm.

4. Time setting function

In the clock setting mode, the "second" flashes, press the D key to adjust the "

second" to zero, press the C key to flash the "hour", press the C key to enter the adjustment of "minute", "month", "day" and "week" in turn, and press the D key to adjust when the corresponding element flashes

- ◆ When setting "hour", press D key to adjust to "A" or "P"/"PM", which

is 12-hour system, and "H", which is 24-hour system

When setting "second", if the second value is between 30 and 59, the minute will be increased by 1 when the second value returns to 00; if the second value is between 00 and 29, the minute remains unchanged.



WARNING

DISPOSE OF USED BATTERIES IMMEDIATELY

BUTTON CELL BATTERIES ARE HAZARDOUS (NEW OR USED). KEEP AWAY FROM CHILDREN. BUTTON CELL BATTERIES CAN CAUSE SEVERE OR FATAL INJURIES IN 2 HOURS OR LESS IF THEY ARE SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON CELL BATTERY, CALL THE 24-HOUR POISONS INFORMATION CENTRE IN AUSTRALIA ON 131126 OR IN NEW ZEALAND 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT