

vtech[®]
Baby

User's Manual

Baby's First Storytime Rhymes



© 2012 VTech
Printed in China
91-002735-004 ©

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months



3-6 years



4-10 years



 
To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the VTech® Baby's First Storytime Rhymes learning toy!

The VTech® Baby's First Storytime Rhymes is a delightful book that features four classic nursery rhymes. With easy-to-turn pages, your child can sing along to their favourite nursery rhymes or they can look at the colourful illustrations. With a bright light-up button and music button, your child will be engaged as they learn about animals through their favourite stories!

LIGHT-UP BUTTON

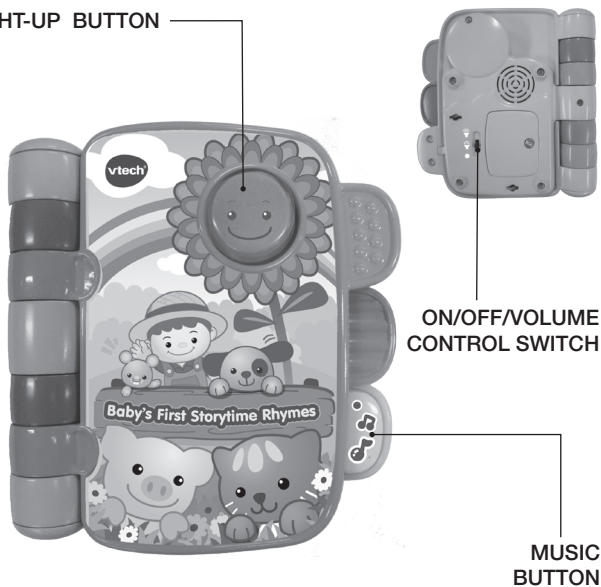

Introduction

2

 
INCLUDED IN THIS PACKAGE

- One VTech® Baby's First Storytime Rhymes
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this instruction manual as it contains important information.

Unlock the packaging locks:

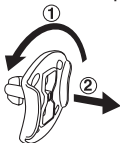


- ① Rotate the packing locks 90 degrees counter-clockwise.
- ② Pull out the packing locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw. Install 2 new 'AAA' batteries following the diagram inside the battery box.
3. Replace the battery cover and tighten the screw to secure.

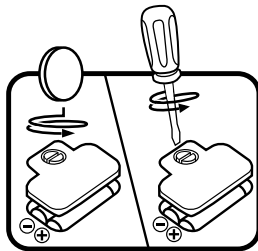

Included In This Package/Getting Started

3

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.


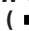 
For more information, please visit:


www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

 To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (●) position.

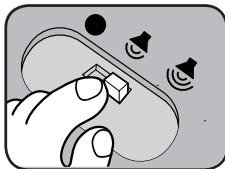


2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Baby's First Storytime Rhymes will automatically power down after approximately 30 seconds without input. You will hear a short tune before the unit powers down. The unit can be turned on again by pressing any button or by turning the book pages.

ACTIVITIES

 1. Slide the **on/off/volume control switch** to turn the unit on. Press a button or turn the book pages to hear a voice or musical response.

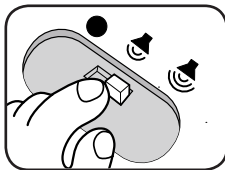

2. Press the **light-up button** to hear a short song, a phrase and short tunes when the book is closed. When the book is open, press the light-up button to hear sung songs related to the book pages. The light will flash with the sounds.



3. Press the **music button** to hear short tunes and melodies. The light will flash with the sounds.



4. Turn the pages to hear a sound, a phrase and a song related to the pictures on the right side of the book. Close the book to hear a short tune. The light will flash with the sounds.



MELODY LIST:

1. Pussy Cat, Pussy Cat
2. Three Little Pigs
3. Three Blind Mice
4. Farmer in the Dell



SUNG SONG LYRICS

SUNG SONG 1

Read a book and let your imagination take you away!

SUNG SONG 2

Three little kittens,
They lost their mittens,
And they began to cry.

SUNG SONG 3

Old MacDonald had a farm, E-I-E-I-O.
On his farm he had a pig, E-I-E-I-O.
Oink-oink here, oink-oink there,
Here an oink, there an oink,
Everywhere an oink-oink!
Old MacDonald had a farm, E-I-E-I-O.




SUNG SONG 4

There was a farmer who had a dog,
Bingo was his name-o.
B-I-N-G-O, B-I-N-G-O, B-I-N-G-O.
And Bingo was his name-o!

SUNG SONG 5

Hickory, dickory, dock,
The mouse ran up the clock.
The clock struck one,
The mouse ran down!
Hickory, dickory, dock.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
 2. Keep the unit out of direct sunlight and away from any direct heat source.
 3. Remove the batteries when the unit will not be in use for an extended period of time.
 4. Do not drop the unit on hard surfaces.
- 



TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.



IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT