

anko

6-24
months

3-in-1 Playpen

› fits openings 73cm - 376cm






IMPORTANT! READ AND FOLLOW THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This product conforms to EN1930:2011.

Parts List

- A. 3x Barrier panel topside
- B. 2x Barrier panel underside
- C. 1x Gate Panel
- D. 1x Top underside hinge adaptor
- E. 2x Bottom hinge adaptors
- F. 2x Top caps
- G. 1x Bottom cap
- H. 2x Top upside hinge adaptors
- I. 2x Wall bracket covers
- J. 2x Wall brackets
- K. 7x Corner tubes
- L. 10x Screws
- M. 10x Wall Plugs

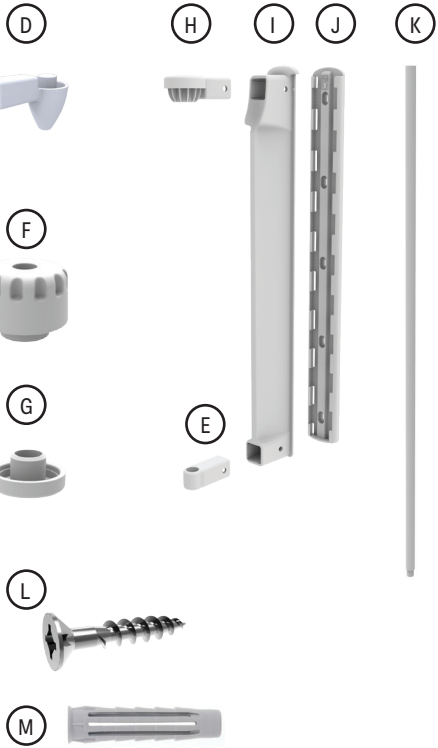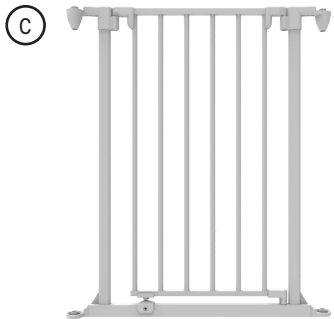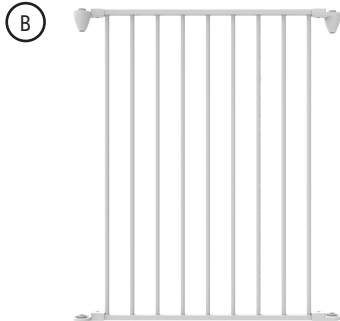


If any parts are missing, do not attempt to use your 3-in-1 Playpen.
 Please contact Kmart Australia Ltd. to obtain additional or replacement parts.
 Only use parts supplied by the manufacturer with your 3-in-1 Playpen.

Safety Information

WARNING

- WARNING** – To prevent serious injury or death, securely install gate or enclosure and use according to manufacturer's instructions.
- WARNING** – Never leave child unattended when using this product.
- WARNING** – Incorrect installation can be dangerous.
- WARNING** – Do not use the safety barrier if any components are damaged or missing.
- WARNING** – The safety barrier must not be fitted across windows.
- WARNING** – Never use with a child able to climb over or dislodge/open the safety barrier which may cause danger.
- WARNING** – Never install this product on glass doors. Install this product against reliable doors or walls.
- WARNING** – To prevent falls, never use this product at the top of stairs.
- WARNING** – If the safety barrier is used at the bottom of the stairs, it should be positioned at the front of the lowest tread possible.

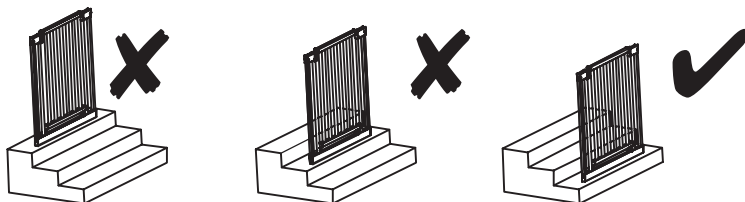

- WARNING** – To prevent injury, do not put any goods which can be grabbed by children or pets near this product.
- WARNING** – Before using this product, carefully inspect for any loose parts and whether any parts need to be tightened.
- WARNING** – Make sure the product to be installed is horizontal and flat on the floor.
- WARNING** – This product is intended for use with children from 6 to 24 months or small to medium pets.
- WARNING** – Regularly check that the safety barrier is properly installed and secure.
- WARNING** – Any additional or replacement parts should be obtained from Kmart Australia Ltd.

WARNING

- WARNING** - Barrier must be fitted between rigid surfaces such as plaster board, timber or hardwall.
- WARNING** - Always check that the safety barrier is correctly closed.
- WARNING** - Use only with the locking/latching mechanism securely engaged.
- WARNING** - This safety barrier is for domestic use only.
- WARNING** - Never use without wall brackets.
- WARNING** - This safety barrier has a manual closing system.
- WARNING** - This safety barrier must be fitted between a rigid surface such as doorways or walls along with wall brackets secured with screws.
- WARNING** - A maximum of 6 panels including gate can be used as a safety barrier.
- WARNING** - Check regularly that all assembly fittings are tightened properly.
- WARNING** - Do not use the playpen without the play mat base (not included).
- WARNING** - Do not place the playpen close to an open fire or other heat source.
- WARNING** - Do not leave anything in the playpen which may provide a foothold or create a danger of suffocation or strangulation.
- WARNING** - Ensure that the playpen is fully erected and all the locking mechanisms engaged before placing your child in this playpen.

General Assembly

Warning: Adult assembly required. Keep small parts out of reach of children and safely dispose of packaging.

1. Remove 3-in-1 Playpen from packaging and place upright on floor.
2. Unfold the 3-in-1 Playpen and place in desired location.

Select the appropriate fixing method from the following list.
This barrier must only be fixed to a solid and secure surface.

Timber Fixing

Drill 2mm pilot holes and use the wood screws provided, screwing directly into the wood.



Hard Wall Fixing

Drill 6mm(1/4") holes and insert the wall plugs provided, before screwing into these.

Plaster Board Walls

Plaster board walls require expandable wall plugs (not included).

Adding & Removing Panels

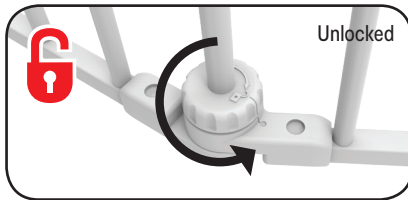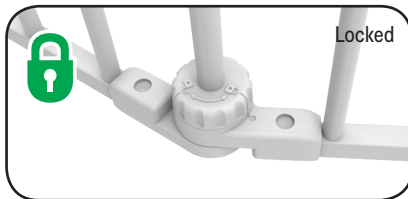



To Remove Unwanted Panels

Turn base knob to the unlocked position, pull up on the corner tube and slide the bottom of the corner tube out from the base. With the corner tube removed, you can lift and remove the unwanted panel.




Adding Extra Panels

Note: Two of the same panels cannot be joined together. Panel A will only connect to Panel B. Align Panel A and Panel B. Place the corner tube into the top hole first. Pull the corner tube up to position the bottom of the corner tube into the bottom hole.

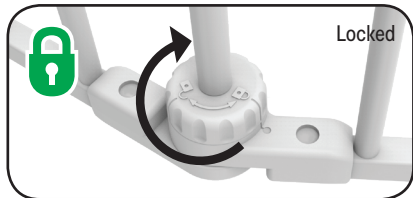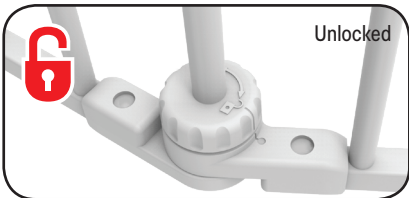


Turn the base knob into locked position to secure panels.

Wall Assembly

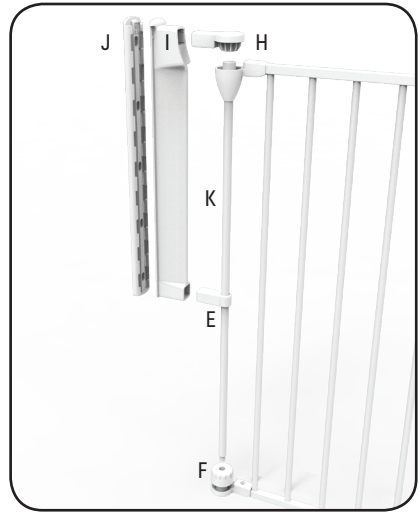

1. To assemble the barrier hinges for each end, slide (E) over corner tube and insert into (D) or (H). Then compress the spring in the top hole, and slide the base of the corner tube into position above (G) or into (F). Place wall bracket (J) over covers (I). Clip cover (I) to hinges (H) and (E) or (D) and (E) ensuring the small silver studs on the adaptors are positively engaged in cover (I).


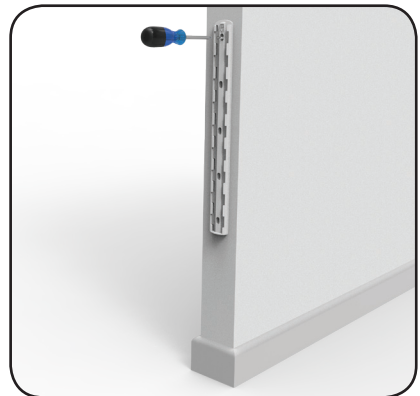


2. Place the assembled barrier against the wall and mark position. Remove bracket from cover and hold in marked location, and mark screw positions. Screw into surface with the appropriate fixing method.

Playpen Assembly





1. Align Panel A and Panel B/C. Place the corner tube into the top hole first. Pull the corner tube up to position the bottom of the corner tube into the bottom hole.
2. Align arrow with hexagon icon. Repeat steps for all corners.

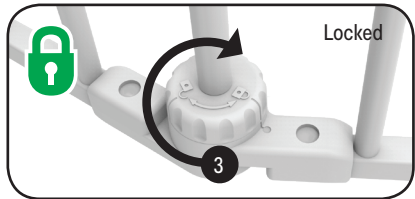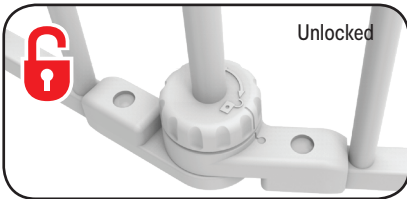

3. Turn the base knob into locked position to secure all panels.

Operation

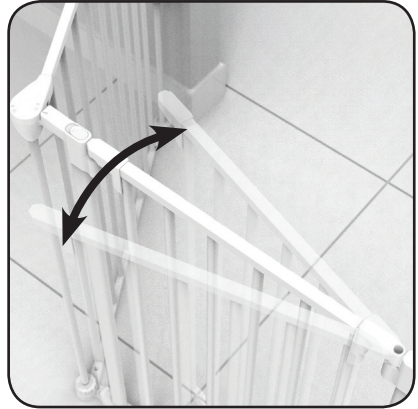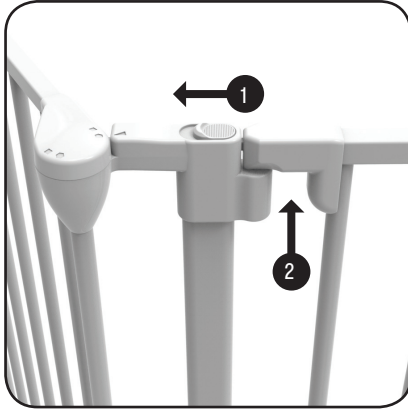


To Open Gate:

1. Place thumb on the button and grip gate with fingers. Slide button.
2. Lift and open gate in either direction. When released, gate/enclosure will swing closed.

Always check gate is properly closed. The safety barrier has a manual closing system.

NOTE: IF GATE IS OPEN AND EXCESSIVE PRESSURE IS APPLIED, (SUCH AS STANDING OR SWINGING ON GATE) STRUCTURAL DAMAGE MAY OCCUR.

Different Configurations

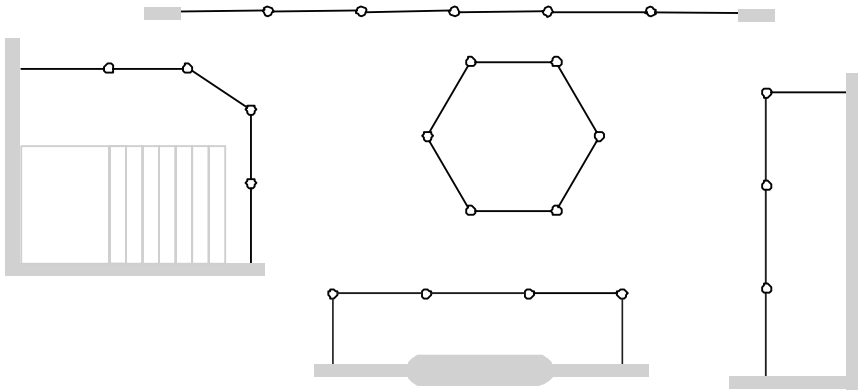

Up to 6 panels including the gate may be used in open configurations providing the 2 end panels are securely fixed to a wall with the fixings provided.

Cleaning Instructions

Use a soft damp cloth to simply wipe gate. Dry gate after cleaning.
Do not use chemicals or abrasive cleaners.

IMAGES/ DRAWINGS IN THE MANUAL ARE FOR VISUAL PURPOSES ONLY.
ACTUAL PRODUCT MAY VARY SLIGHTLY. THE MANUFACTURER RESERVES THE RIGHT TO
CHANGE ANY SPECIFICATION OR FEATURE WITHOUT PRIOR NOTICE.

Keycode : 42193715

MADE IN CHINA

©KMART AUSTRALIA LIMITED

ANKO, KIDS&CO. & BABY SOLUTIONS® ARE TRADEMARKS OF KMART AUSTRALIA LIMITED.
THEY ARE USED IN NEW ZEALAND BY COLES GROUP NEW ZEALAND HOLDINGS LIMITED
TRADING AS KMART IN NEW ZEALAND.

KMART AUSTRALIA - 690 SPRINGVALE RD, MULGRAVE, VIC 3170 AUSTRALIA.

KMART NEW ZEALAND - REGIONAL OFFICE C/O KMART PAPATOETOE STORE HUNTERS PLAZA,
GREAT SOUTH RD, PAPATOETOE, AUCKLAND, NEW ZEALAND.