

# **anko**

## **Electric Knife**

### **EK121**

## **User Manual**



**PLEASE READ AND SAVE THESE INSTRUCTIONS FOR  
FUTURE REFERENCE**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before using the Electric Knife.
2. To protect against risk of electrical shock, do not immerse power cord, plug, or motor unit in water or other liquid.
3. If the supply cord is damaged, it must be replaced by qualified electrical person in order to avoid a hazard or the product must be disposed.
4. Unplug from electrical outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Use only attachments that are included in the packaging of the appliance. The use of other attachments may cause fire, electric shock or injury.
7. This appliance is intended to be used in household only. It should not be used for commercial purpose.
8. Do not let cord hang over edge of table or counter or touch hot surface, including stoves.
9. Do not let long hair, scarves, ties etc., hang over the appliance when it is in operation. These objects could otherwise become entangled in the moving parts.
10. Do not operate the appliance with wet hands.
11. Do not operate the appliance without the blades.
12. Do not cut ingredients that are too hard.
13. Place the food to be sliced on a flat cutting board.
14. Keep hands, hair, clothing and other utensils away from moving blades while cutting food to reduce the risk of severe injury to persons or avoid damaging the unit.
15. The cutting blades are extremely sharp. Handle with care.
16. Always ensure the blades are securely locked in place before operating the appliance.
17. To keep the appliance in a good working condition, keep the cutting blades clean.

18. This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.

19. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

20. Children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT! Switch off the appliance and disconnect from mains power supply before changing accessories or approaching parts that move in use.**

**IMPORTANT! The maximum continuous operating time is 2 minutes. Allow it to rest for at least 2 minutes before using it again. After operating 3 cycles continuously, allow it to cool down to the room temperature.**


**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## BEFORE FIRST USE


Remove any packaging material before first use. Clean the appliance and all of its accessories as described in the section “Cleaning”.

**CAUTION: Care should be taken when handling and cleaning the blades, blades are sharp.**

## PARTS

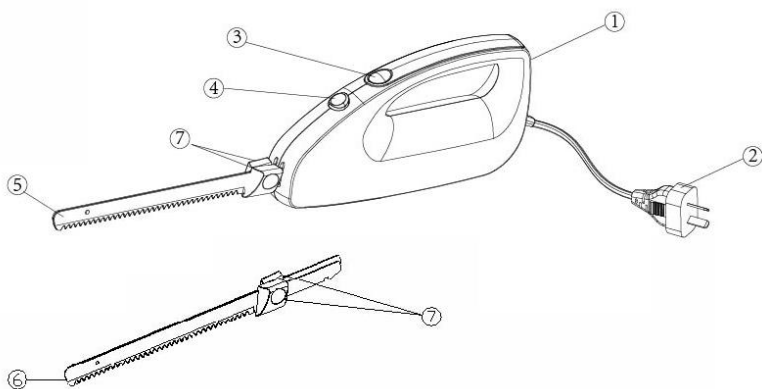

1. Motor Unit
2. Power Cord
3. Main Switch Button
4. Eject Button
5. Finely Serrated Blades
6. Widely Serrated Blades
7. Blade Handle Hollow

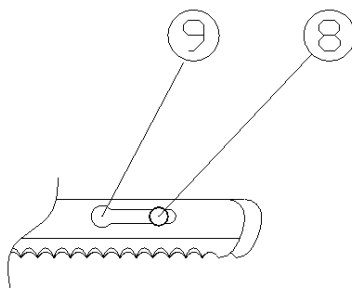

## OPERATION

### MOTOR UNIT

The motor unit operates on 220 - 240V~ 50/60Hz electrical power. Never allow the motor unit to become wet when plugged into an electrical outlet.

**WARNING: The motor unit should never be immersed in water or any other liquid.**

**CAUTION:** Make sure that the motor unit is unplugged from the electrical outlet and that the blades have stopped turning before attaching or removing any accessories.

### SLICING GUIDE

ACCESSORIES	DESCRIPTION
Finely Serrated Blades Assembly	Bread, Ham
Widely Serrated Blades Assembly	Frozen meat

### USING THE ELECTRIC KNIFE

**IMPORTANT! Ensure the electric knife is disconnected from mains power outlet before attaching or removing the blades.**

1. Attach the two blades together by inserting the rivet of one blade into the round socket of the other blade and sliding them together along the slot.
2. Grasp the two blade handle hollows and then insert the blades into the blade holding holes of the electric knife body. Push and click both

blades into place.

3. Plug in the appliance.
4. Hold the handle. Place the electric knife directly on the food to be cut.
5. Press the main switch button and the blades will begin to slice.
6. When you have finished cutting, stop the electric knife by releasing the main switch button immediately.
7. Unplug from an electrical outlet before removing the cutting blades. Grasp the two hollows of the blade handle by one hand and press the eject button with the other hand. Then carefully pull out the two blades from the holes of the electric knife body.

**IMPORTANT! The maximum continuous operating time is 2 minutes. Allow it to rest for at least 2 minutes before using it again. After operating 3 cycles continuously, allow it to cool down to the room temperature.**

## **CLEANING**

**CAUTION: Ensure that the electric knife unit is unplugged from the mains power outlet before inserting or removing any attachments and before cleaning.**

- Remove the blades from the unit before washing. Slide the blade with a rivet along the slot in the other to separate the two blades.
- **DO NOT** immerse the motor unit into water or any other liquid. Clean it with a damp sponge and cloth and wipe dry.
- Do not use corrosive or abrasive cleaning agents to clean the device. This could damage the surface.

- Wipe motor unit with a clean damp cloth and dry unit with a dry cloth. Any other servicing or repairs should be carried out by qualified electrical persons only.
- Wash the blades in warm soapy water, and then dry. The blades can also be cleaned in a dishwasher.

**CAUTION: Use extreme caution when cleaning the blades as they are very sharp!**

**NOTE: Do not clean electric knife in the dishwasher except the blades.**

## **STORAGE**

- The appliance must be stored in dry location and kept away from children. Make sure that the appliance is disconnected from mains power outlet.

## **TECHNICAL SPECIFICATION**

Voltage: 220-240V~ 50/60Hz

Power: 120W

## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) -for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.