



Wireless Mouse Manual

Specification:

- 2.4GHz wireless mouse
- Resolution : 800/1200/1600 CPI
- Battery: 2 x "AAA" batteries (not included).
- Power save function in sleep mode when not in use
- Supports Windows XP SP3/Vista/7/8/10, MAC OS X 9.x or later

Package Contents:

1. Wireless Mouse.
2. Nano USB Receiver.
3. Instruction Manual.

How To Install

1. Remove the mouse and USB receiver out of the packaging.
2. Insert the USB receiver into the computer's USB port.
3. Insert the 2 x "AAA" batteries into the mouse, following the polarity guides in the battery compartment.
4. Press any button to activate the mouse.

1



Reconnection

There is a identification code of the mouse. Wireless connection may be affected by high temperatures, magnetic fields or vibration. Re-connect the mouse using the following steps:

1. Remove the USB receiver from the computer and re-insert after a few seconds.
2. Press and hold the scroll wheel and the right click button simultaneously for a few seconds and then release. The device will be able to be used again.

NOTE:

1. 2.4 GHZ wireless radio wave transmits up to 10 meters. The transmission distance will be shorter if there is an obstruction.
2. For the best possible responsiveness of the mouse, it is recommended that it is used on a flat surface and/or with a mouse pad.

2

Caution:

Any alteration or amendment of this device is prohibited for user without any explicit permission from responsible authorities.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

3

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australian customers) or 0800 945 995 (New Zealand customers) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

4