

anko UPRIGHT STROLLER

INSTRUCTION MANUAL

6+
months



IMPORTANT! KEEP FOR FUTURE REFERENCE - READ CAREFULLY

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

Images in the manual are for visual purposes only. Actual product may vary slightly. The manufacturer reserves the right to change any specification or feature without prior notice.

 
Please read these instructions carefully and keep for future reference. Your child's safety may be affected if you do not follow these instructions.

⚠️ WARNING: TO AVOID INJURY OR DEATH

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS AT ALL TIMES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.
- NOT RECOMMENDED FOR A CHILD UNDER 6 MONTHS OLD.

- Please ensure that the safety harness is adjusted and used at all times.
- A harness can form loops that may be a strangulation hazard. Never leave harness straps connected when not fitted to a child in the stroller.
- Check the stroller is fully erected and all safety locks are engaged before placing a child in the stroller, otherwise they may be injured.
- Do not attempt to carry the stroller with your child in it.
- The weight of the children using this stroller should not exceed 15 kg.
- The stroller is not suitable for running or skating.
- Check the storage latch is engaged before you lift and carry the stroller.
- Do not allow children to stand on the product.
- Do not use the stroller near an open fire, barbecue, or exposed flame.
- Use only those accessories which are supplied by the manufacturer, and approved for use with the stroller.
- Avoid placing stroller on parquet, linoleum or carpet floors as wheels may cause stains.
- The stroller is designed for use on flat and gently sloping surfaces and maybe unstable on higher sloping and uneven surfaces. Extra care is needed on steep slopes to prevent the stroller tipping over.
- Care shall be taken if the stroller is used on stairs or escalators.
- Do not leave your child exposed to the sun. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.
- Take care when unpacking and during assembly.
- Dispose of all packing materials carefully after assembly.
- Any additional or replacement parts should only be obtained from the manufacturer or distributor.
- Never substitute parts.

COMPONENTS

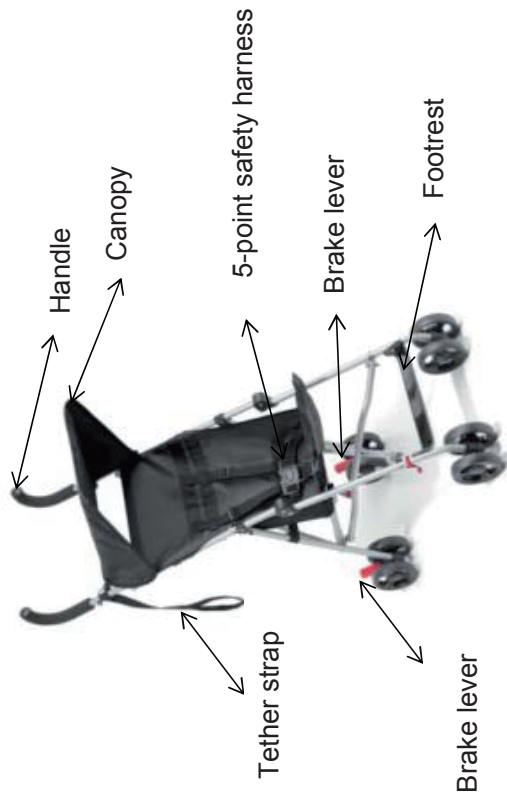

TO OPEN THE STROLLER

- If the stroller has a security tie, please remove it.
- Place the stroller on the floor with the handles facing downward.



- Release the storage latch.

 


TO OPEN THE STROLLER (CONTINUED)

- Lift the handle upwards away from the front legs.
- Continue this action until the frame is fully open.



- Engage the lower frame lock by pressing them down into the locked position.
- The upper frame lock will be automatically engaged.

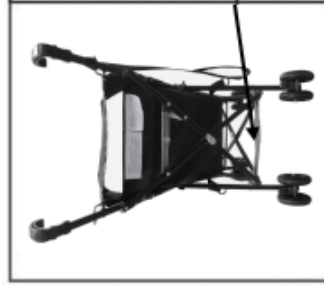

Lower Frame Lock:
Press down into the locked position.

- Ensure that the upper and lower frame locks have fully engaged.

 
 


WARNING:

- DUE CARE SHOULD BE EXERCISED WHEN FOLDING, UNFOLDING, OR ADJUSTING THE STROLLER TO PREVENT FINGER/BODY PART ENTRAPMENT OR PINCHING.
- KEEP CHILDREN AWAY FROM STROLLER WHEN FOLDING OR UNFOLDING.

SAFETY HARNESS

- To secure your child in the harness, push the shoulder strap buckle prongs into the waistband buckle housing.
- Push the buckle prongs (A)+(B) into the buckle housing until they snap into position.

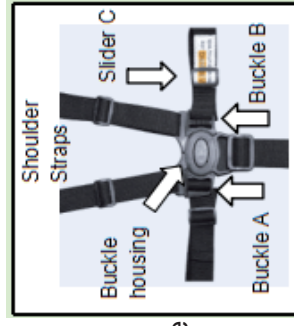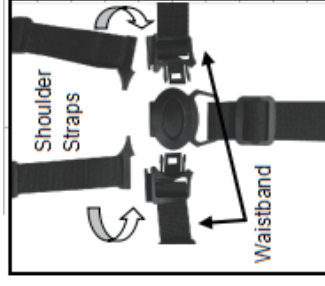

- Adjust slider (C) to ensure a snug fit for your child. Repeat for the other side and also for the shoulder straps. After making adjustments to the seat always readjust the harness.



WARNING:

- USE THIS HARNESS AT ALL TIMES.
- HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD. NEVER LEAVE THE HARNESS CONNECTED WHEN NOT FITTED TO A CHILD IN THE STROLLER.

BRAKES

- To apply the brakes, press down firmly on the brake pedals. Ensure that both brakes have fully engaged in each wheel.
- To release, lift the brake pedal until the brake has fully disengaged from each wheel.

 


⚠️ WARNING:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

CANOPY

- Flip the canopy forward, then attach the grip fastening tabs together.

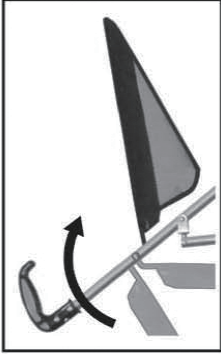

TETHER STRAP

- A wrist tether strap is provided near the handle grip. Slide your hand through the tether strap loop whenever you use the stroller.
- Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.



⚠️ WARNING:

USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

TO FOLD THE STROLLER

- Flip the canopy to the rear.
- Lift the lower frame lock upwards.
- Lift the upper frame lock upwards.

 
 


Upper Frame Lock



Lower Frame Lock

- Push the handle forward to fold the stroller.
- Continue this action until the stroller is folded.
- Engage the storage latch.

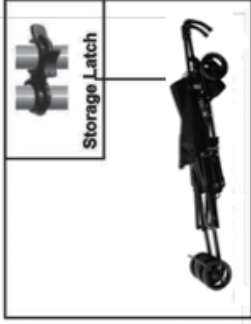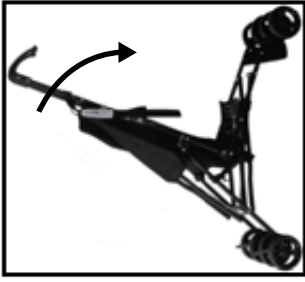

Storage Latch

⚠️ WARNING:

- DUE CARE SHOULD BE EXERCISED WHEN FOLDING, UNFOLDING, OR ADJUSTING THE STROLLER TO PREVENT FINGER/BODY PART ENTRAPMENT OR PINCHING.
- KEEP CHILDREN AWAY FROM STROLLER WHEN FOLDING OR UNFOLDING.

CARE AND MAINTENANCE

- Inspect the product before assembly and periodically during use. Never use this product if there are any loose or missing fasteners, joints or broken parts.
- Plastic and metal parts: Wipe with a damp cloth.
- Removable and non-removable fabric: Wipe clean with a damp cloth. Do not bleach. Do not iron. Do not dry clean ☒.
- Do not use abrasive pads, bleach or strong household cleaners.
- Dry in shade thoroughly before use and avoid direct heat and sunlight.
- Dry thoroughly before storing.
- Always store in a clean and dry place.
- Occasionally clean and lubricate wheels and axles with light lubricating oil.

Keycode : 42332985

MADE IN CHINA

©KMART AUSTRALIA LIMITED

ANKO, KIDS&CO. & BABY SOLUTIONS® ARE TRADEMARKS OF KMART AUSTRALIA LIMITED. THEY ARE USED IN NEW ZEALAND BY KMART NZ HOLDINGS LIMITED TRADING AS KMART IN NEW ZEALAND.

KMART AUSTRALIA - 690 SPRINGVALE RD, MULGRAVE, VIC 3170 AUSTRALIA.

KMART NEW ZEALAND - REGIONAL OFFICE C/O KMART PAPATOETOE STORE HUNTERS PLAZA, GREAT SOUTH RD, PAPATOETOE, AUCKLAND, NEW ZEALAND.