

anko

Food Processor

FP9053KB-GS

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions, and save it for future reference.
2. Before using, check that the voltage of wall outlet corresponds to that shown on the rating label on the product.
3. Do not let cord hang over edge of table or counter.
4. To protect against risk of electrical shock, do not put the motor base into water or other liquid. To disconnect, turn speed control to “off”, then remove plug from wall outlet by grasping the plug, not the cord.
5. Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to persons or damage to the Food Processor. A scraper or spatula may be used, but must be used only when the Food Processor is not running and disconnected from mains power.
6. Avoid contact with moving parts.
7. Never feed food by hand. Always use the food pusher.
8. Before removing the lid from the jar from the power unit, switch OFF the unit, wait until the blades have come to a complete stop.
9. To prevent injury, do not use fingers to scrape food away from discharge disc while appliance is operating.
10. Ensure the lid is securely locked into place before operating appliance.
11. Ensure to turn the speed selector to “0” - OFF position after each use. Make sure the motor stops completely before disassembling. And the power cord plug is removed from mains power outlet.
12. Do not put your fingers or other objects into the unit opening while it is in operation. If food becomes lodged in opening, use food pusher or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor OFF and disassemble to remove the remaining food.
13. Do not attempt to defeat the cover interlock mechanism.
14. The metal blades and disk is extremely sharp, handle with care. Always hold the blade assembly by the finger grip or stem, away from the cutting edge, both when handling and cleaning.
15. To reduce the risk of injury, never place processing blade or circle blade assembly on drive shaft without the jar locked properly in place.
- 16. IMPORTANT! Do not leave food processor unattended while it is operating.**
17. Care is needed when handling cutting blades, especially when removing the blade from the bowl, emptying the bowl and during cleaning.
18. Never operate this product if it has a damaged power cord or plug, is not working properly, has been dropped or damaged, or if the motor base has been exposed to water or other liquids. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform servicing. Take the product to an appliance repair shop of your choice for inspection and repair.
19. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
20. To prevent damage, DO NOT pour boiling water into bowl.
21. Do not use this appliance for other than its intended use.
22. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
23. Switch OFF the appliance and disconnect from supply before changing accessories or approaching parts that move in use.


24. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
25. This appliance is intended to be used in household use only. Do not use outdoors.
26. Unplug from mains power outlet when not in use, before putting on or taking off parts, and before cleaning.
27. If the supply cord is damaged, it must be replaced by qualified electrical person in order to avoid a hazard or the product must be disposed.
28. **CAUTION: never immerse in water, unplug before inserting or removing parts.**
29. **CAUTION: DO NOT OPEN THE LID UNTIL THE BLADE HAS COME TO A COMPLETE STOP.**
30. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
31. Children should be supervised to ensure that they do not play with the appliance.
32. Warning: Misuse may cause injury.




Warning: The maximum operating time is 90 seconds. Allow it to rest for 2 minutes before using it again. After 3 cycles of operation, allow the electric motor to cool down to room temperature for approximate 30 minutes before using it again.

CAUTION! DO NOT use hot liquid in the food processor. Hot liquid can be ejected out of the appliance due to a sudden steaming and cause burns.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

KNOW YOUR FOOD PROCESSOR

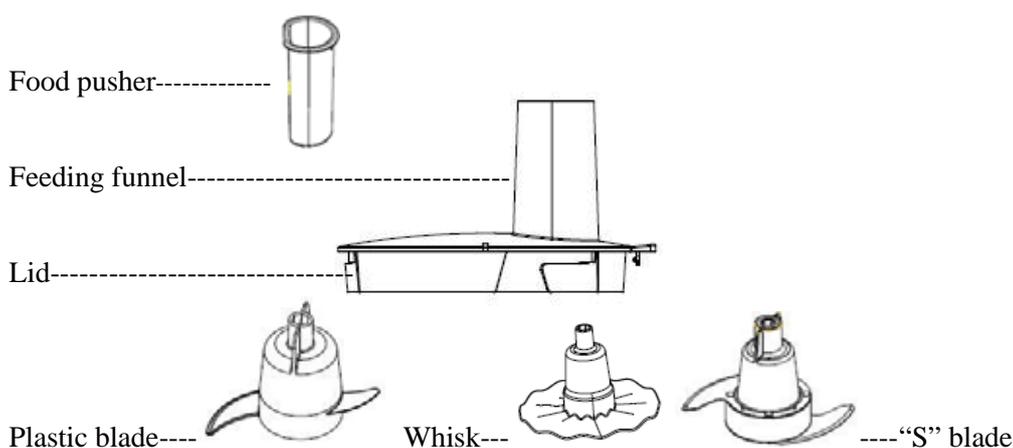

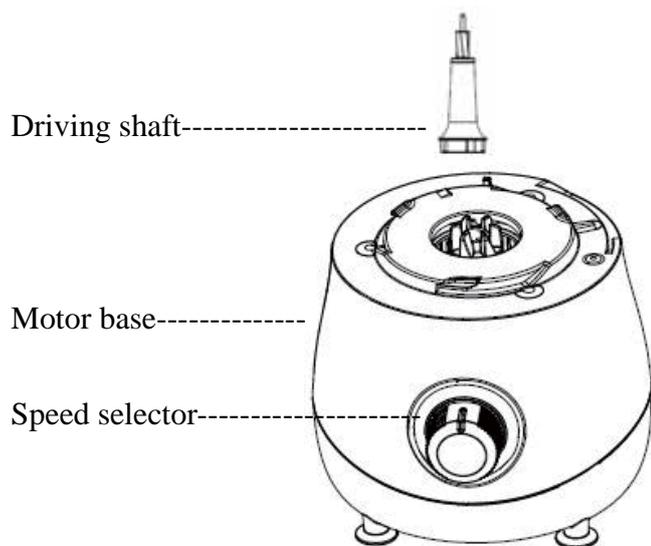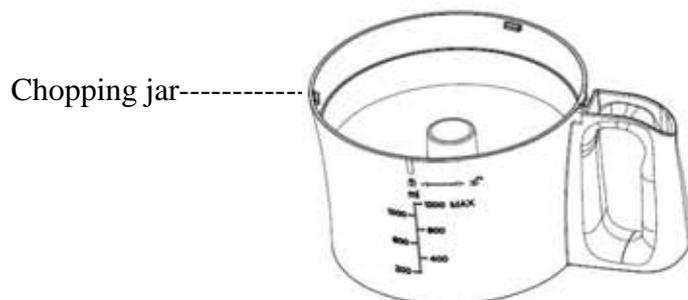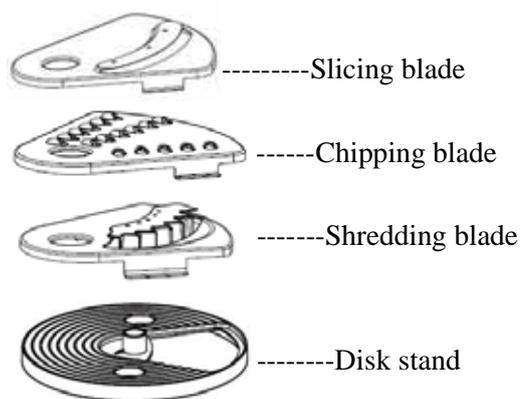

BEFORE FIRST USE

Before first use, carefully unpack the food processor and its attachments and remove any package material or label or stickers. Clean all the parts except the motor base following the instructions in **CLEANING AND MAINTENANCE**. Handle the “S” blade or circle blade assembly with extreme care as they are sharp. The food processor can be used for kneading, beating and whisking, chopping the meat or vegetable and fruit, shredding, slicing and chipping the vegetables or potatoes, blending smooth soup, sauces, creams, fruit purees, milk and so on, by using different accessories to perform different tasks.

CHOPPING

1. Firstly, assemble the driving shaft into the motor base. Make sure it is clipped into position.
2. Place the chopping jar on the motor unit, aligning the arrow symbol on the chopping jar with the unlock symbol on the motor unit. Slightly turn the chopping jar clockwise until the chopping jar locks into the lock position on the motor base. Make sure it is assembled in place correctly, otherwise the appliance will not operate.
3. Insert the “S” blade into the driving shaft in the chopping jar securely. Make sure it is locked into position.
4. Then place the prepared chopping food into the jar. The food must be cut into small sizes first (such as 2cm*2cm*6cm for beef). During chopping, you can add food through the feeding funnel with the pusher, never use food or fingers to push the food into the feeding funnel.
5. Place the lid onto the jar and turn it clockwise until the tab of the lid clicks into slot in the jar handle. Make sure it is locked in position correctly, otherwise the appliance will not operate.
6. Connect the appliance to power supply and set speed selector to your desired speed.
7. There are four setting: P, 0, 1, 2. The “1” setting is the low speed, the “2” setting is the high speed. Turn the selector to “P” position and hold it to pulse actuate motor for delicate chopping. Release it to return the “0” position. The Pulse mode allows you to create a burst of power for quick, efficient blending. You can chop up to 400g of the following foodstuff.



Hard substance: cheese, dried fruits, and certain vegetables (carrots, celery...),

Soft substance: certain vegetables (onions, spinach...)

Raw and cooked meat (boned and sliced)

Warning: The maximum operating time is 90 seconds. Allow it to rest for 2 minutes before using it again. After 3 cycles of operation, allow the electric motor to cool down to room temperature for approximate 30 minutes before using it again.

8. Turn the speed selector to “0” position and unplug the appliance after chopping. Open the top lid and grasp blade by its hub and remove. Unlock chopping jar by turning it in anti-clockwise away from motor base, and lift it off. Empty the processed food.

CAUTION: The “S” blade is extremely sharp, handle with care.

CLEANING

1. Disconnect the power supply before cleaning.
2. Empty the chopping jar, dismantle all detachable parts and rinse them in warm soapy water. Extreme caution must be taken when handling the blade as it is very sharp. All the accessories, except the motor base are dishwasher safe components, but the temperature setting shall not exceed 70°C. Then dry thoroughly.
3. Wipe the outside of base with damp cloth. Never immerse it in water as electric shock is possible to occur. Then dry thoroughly. Ensure the interlock area is free of food particles

FOR A QUICK WASH UP

Between processing tasks, pour in some warm water into the chopping jar, turn and hold the speed selector to “P” position a few seconds for quick cleaning.

KNEADING/MIXING

1. Firstly, assemble the driving shaft into the motor base. Make sure it is clipped into position.
2. Place the chopping jar on the motor unit, aligning the arrow symbol on the chopping jar with the unlock symbol on the motor unit. Slightly turn the chopping jar clockwise until the chopping jar locks into the lock position on the motor base. Make sure it is assembled in place correctly, otherwise the appliance will not operate.
3. Insert the plastic blade into the driving shaft in the jar securely.
4. Measure the flour with food pusher and put them into the jar. The maximum quantity of flour is 375g.
5. Place the lid onto the chopping jar and turn it clockwise until the tab of the lid clicks into slot in the jar handle. Make sure it is locked in position correctly, otherwise the appliance will not operate.
6. Insert the food pusher into the feeding funnel.
7. Add one tablespoon oil into the appliance from feeding funnel. Connect the appliance to power supply. Turn the speed selector to the “2” setting.
8. Then add water (the maximum water quantity is 225g) from the feeding funnel slowly within 20s.



- NOTE: the food pusher also can be used as measuring cup for measuring oil or water.
9. The proportion of the flour and water is 5:3. Make sure the quantity of the water is not more than the maximum specified water quantity.
- Note:** Add some more water if the processing speed slows down during operating so as to make the motor run smoothly, otherwise the motor may be damaged. During kneading/mixing, to avoid shaking, press the lid with one hand, and the other hand holding the handle.
10. Stop the process by turning the speed selector to “0” position as soon as the pastry starts to form a ball.

Warning: The maximum operating time is 90 seconds. Allow it to rest for 2 minutes before using it again. After 3 cycles of operation, allow the electric motor to cool down to room temperature for approximate 30 minutes before using it again.

11. Unplug the appliance, detach the cover, remove the plastic blade, then remove the dough.

CLEANING

1. Disconnect the power supply before cleaning.
2. Empty the jar and remove the lid, the plastic blade, and pusher. Immerse them in water and clean them with a damp cloth or soft brush.
3. Wipe the outside of base with a damp cloth. Never immerse the motor base in water as electric shock is possible to occur. Then dry thoroughly. Ensure the interlock area is free of food particles.

BEATING AND WHISKING

1. Firstly, assemble the driving shaft into the motor base. Make sure it is clipped into position.
2. Place the chopping jar on the motor unit, aligning the arrow symbol on the chopping jar with the unlock symbol on the motor unit. Slightly turn the chopping jar clockwise until the chopping jar locks into the lock position on the motor base. Make sure it is assembled in place correctly, otherwise the appliance will not operate.
3. Insert the whisk into the driving shaft in the jar securely.
4. Place the ingredient into the bowl. You can use it to prepare mayonnaise, sauces, egg whites, meringues (up to 10 egg whites), and whip cream.
5. Place the lid onto the chopping jar and turn it clockwise until the tab of the lid clicks into slot in the jar handle. Make sure it is locked in position correctly, otherwise the appliance will not operate.
6. Set the speed selector to the “2” setting.

Note: Never use this whisk to knead dough or mix cake mixtures.

Warning: The maximum operating time is 90 seconds. Allow it to rest for 2 minutes before using it again. After 3 cycles of operation, allow the electric motor to cool down to room temperature for approximate 30 minutes before using it again.



CLEANING

1. Disconnect the power supply before cleaning.
2. Empty the jar and remove the lid, the whisk, pusher, then immerse them in water and clean them with a damp cloth or soft brush.
3. Wipe the outside of base with a damp cloth. Never immerse the motor base in water as electric shock is possible to occur. Then dry thoroughly. Ensure the interlock area is free of food particles.

SLICING/CHIPPING/SHREDDING

1. Firstly assemble the driving shaft into the motor base. Make sure it is clipped into position.
2. Place the chopping jar on the motor unit, aligning the arrow symbol on the chopping jar with the unlock symbol on the motor unit. Slightly turn the chopping jar clockwise until the chopping jar locks into the lock position on the motor base. Make sure it is assembled in place correctly, otherwise the appliance will not operate.

CAUTION: The blade is extremely sharp, handle with care.

3. Fit the shredding blade or slicing blade or chipping blade (coarse or fine) into the disk stand, place them in the bowl.

Note: For assembling the blade into the disk stand, firstly push the side without tab into the disk stand, then push the other side in position. For disassembling, firstly push the side with tab outwards and then push the other side out of the disk stand.



4. Place the lid onto the chopping jar and turn it clockwise until the tab of the lid clicks into slot in the jar handle. Make sure it is locked in position correctly, otherwise the appliance will not operate.

5. Turn the speed selector to “1” or “2” setting to start.

Note: the shredding/slicing/chipping disks can slice thickly-potatoes, onions, thinly-cucumbers, beetroot, apples, and carrots...

1. Use the food pusher to feed food into the feeding funnel. The food shall be cut into proper size (approx. L: 120mm, W: 60mm, H: 25mm) suitable for the feeding funnel. You can slice/chip up to 500g of food.

2. **Warning: The maximum operating time is 90 seconds. Allow it to rest for 2 minutes before using it again. After 3 cycles of operation, allow the electric motor to cool down to room temperature for approximate 30 minutes before using it again.**

3. Turn the speed selector to “0” position and unplug unit after processing. Remove the blade assembly. Unlock jar by turning it in anti-clockwise away from its base, and lift it off. Empty the processed food.

CLEANING

1. Disconnect the power supply before cleaning.

2. Empty the chopping jar and remove the disk stand from the bowl. Then remove the shredding/ slicing/ chipping blade from the disk stand, the pusher from the lid, and the lid from the bowl. Immerse the lid, pusher, chopping jar, disk stand and the shredding/slicing/chipping blade in water and clean them with a soft brush.

CAUTION: The blade is extremely sharp, handle with care.

Note: For assembling the blade into the disk stand, firstly push the side without tab into the disk stand, then push the other side in position. For disassembling, firstly push the side with tab outwards and then push the other side out of the disk stand.

3. Wipe the outside of base with cloth. Never immerse it in water as electric shock is possible to occur. Then dry thoroughly. Ensure the interlock area is free of food particles

Note: Some food may discolor the disk stand. This is normal and will not harm the plastic or affect the flavor of food. Rub with cloth dipped with vegetable oil to remove discoloration

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 500W

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

