

home
&CO

Steam Iron User Manual



Model: KB-602E2

IMPORTANT SAFETY INSTRUCTIONS

Read this user manual carefully before first use and save it for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer is not responsible and the guarantee will not apply.
- The iron operates on 220-240 AC and must be used on a power outlet socket connected to earth. If unsure check with an electrician.
- Ensure before each use that the electric cord or any other important part is not damaged.
- Keep the iron and its cord out of reach of children when it is energized or cooling down.
- Never direct the steam towards persons or animals. Never direct the steam jet towards any other electrical or/and electronic appliances.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking water.
- If the appliance shows evidence of breakdown, malfunction, water leaks or other abnormality, do not use.
- Always make sure the appliance is switched off, unplugged and cooled down before filling the reservoir with water, when cleaning and before storing.
- **IMPORTANT!** This iron must not be left unattended while it is connected to mains power and before it has cooled down.
- Do not unplug the appliance by pulling on the cord or on the appliance.
- Never immerse the iron, the stand, the cable or the plug in water. Never hold them under the water tap.
- The soleplate of the iron can become extremely hot and may cause burns if touched. Do not allow the supply cord to come in contact with the soleplate.
- If the supply cord is damaged, it must be replaced by a qualified electrical person only or the product must be disposed of.
- Disconnect from mains power when filling the reservoir in the iron with water.
- The iron must be used and rested on a flat, stable surface.
- Always place and operate the iron on a flat, solid, clean and dry surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- For additional protection, this appliance should be connected to a household residual current device (safety switch) with a rating of no more than 30mA. If unsure consult your electrician for advice.

BEFORE FIRST USE

Unpack the appliance and check if all parts are there and undamaged. Should this not be the case, return the product to Kmart for replacement.

The packaging contains:

- One steam iron
- One filler cup

Clean all parts before first use. See **Cleaning and Maintenance**

Heat up the iron to its maximum temperature and iron over a piece of damp cloth for several minutes. This will burn-off any manufacturing residue from the iron. **Smoke and odour may occur for a short period during this process, which is normal.**

FEATURES

Your iron has an Anti-Drip system, Anti-Scales system and Auto-Off function.

Anti-Drip system: This is to prevent water from escaping from the soleplate when the iron is cold. **During use, the anti-drip system may emit a loud clicking sound, particularly when heating up or cooling down. This is normal and indicates that the system is functioning correctly.**

Anti-Scale system: The built-in anti-scale cartridge is designed to reduce the build-up of lime scale which occurs during steam ironing and will prolong the working life of your iron. The anti-calc cartridge is an integral part of the water tank and does not need to be replaced.

Auto-Off function: Automatically switches off the steam iron if it has not been moved for a while.

PARTS



- 1 Spray button
- 2 Temperature Set button (decrease)
- 3 LCD panel
- 4 Water Filling inlet
- 5 Spray nozzle
- 6 Temperature set button (Increase)
- 7 Variable Steam/Self-clean knob
- 8 Steam shot button
- 9 Supply cord

OPERATION

Filling the water tank

- Ensure that the iron is cold and not connected to mains power.
- Open the water filling inlet (4) by lifting the cap.
- Hold the iron in a tilted position and fill the tank with plain water, using the filler cup supplied.
DO NOT exceed the max level on the tank.
- Close the water filling inlet (4) by pressing down the cap until you hear a click. To avoid water spillage, ensure that the water tank is properly closed.

NOTES:

To avoid calcium deposits, we recommend you use distilled water for your steam iron. To avoid damage or blockage of your steam iron, do not use any scented water or additives.

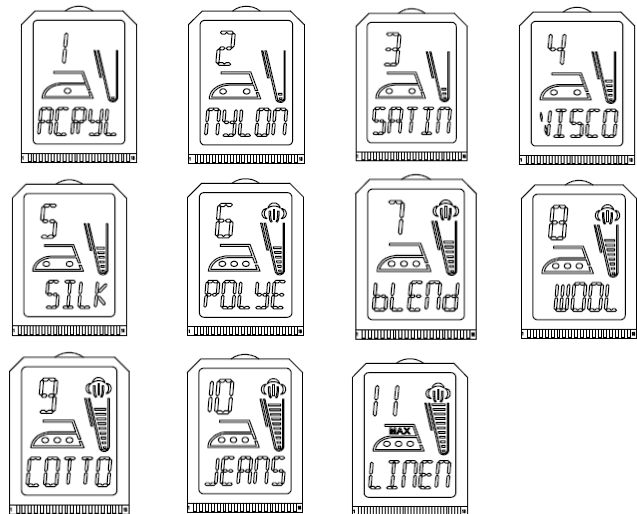
Steam Ironing

- Fill the water tank
- Position the iron vertically on its stand on a suitable flat stable surface.
- Ensure that the variable steam knob (7) is on OFF position
- Connect the supply cord plug to a suitable mains power outlet socket. The LCD (3) will display “Stdby”, indicating the iron is connected mains power.
- Press the temperature select button (6) to increase the temperature or (2) to decrease the temperature, or to select the desired fabric type/temperature. Refer to the ironing temperature table.
- The LCD display will display the selected fabric type. The fabric icon will start flashing while the soleplate starts to heat up.
- The fabric icon will stop flashing as soon as the selected temperature is reached.
- Set the variable steam knob (7) to your desired steam output and begin ironing.





Dry Ironing

- Position the iron vertically on its stand on a suitable flat stable surface.
- Ensure that the variable steam knob (7) is on OFF position
- Connect the supply cord plug to a suitable mains power outlet socket. The LCD backlight will come on, indicating the iron is connected mains power.
- Press the temperature select button (6) to increase the temperature or (2) to decrease the temperature, or to select the desired fabric type/temperature. Refer to the ironing temperature table.
- The LCD display will display the selected fabric type. The fabric icon start flashing while the soleplate starts to heat up.
- The fabric icon will stop flashing as soon as the selected temperature is reached.
- Now dry ironing can begin.

LCD SCREEN



Ironing temperature table.

FABRIC TYPE	IRON MARK (temperature)
1. Acrylic	 Approx. 100°C
2. Nylon 3. Satin 4. Viscose 5. Silk	 Approx. 125°C
6. Polyester 7. Wool Blends 8. Wool 9. Cotton 10. Jeans	 Approx. 150°C
11. Linen	 Approx. 200°C

Ironing Temperatures

IMPORTANT! Always follow the recommended ironing instructions found on the garment.

If there are no ironing instructions on the garment, use the heat settings in the table as reference.

- Make sure the fabric icon has stopped flashing before you use the steam iron.

NOTE: Steam function can only be used when the “steam” symbol is displayed. i.e. fabric type 6-11

Using the spray button

- Press the spray button (1) a couple of times to moisten the garment. Before spraying make sure that there is enough water in the water tank.

NOTE: Do not spray water on silk.

Using the steam shot button

- Press the steam shot button (8) to instantly provide a powerful burst of steam to eliminate stubborn wrinkles. Steam shot can be activated when temperature setting is in the steam range. i.e. fabric type 6-11
- The steam shot button (8) can also be applied when holding the iron in a vertical position. This is useful for removing creases from hung clothes, curtains, etc.

CAUTION: To protect against burns or injury to persons, do not iron or steam fabrics while being worn on the body. Do not direct steam towards the body or a person when ironing.

Anti-drip function

- When the iron has been used for a long time, the soleplate temperature will fall. In that case the iron will stop emitting steam automatically to avoid water droplets from forming on the soleplate.

Auto-off function

- Steam iron will shut off automatically when left unattended for a period of time. (around 7 minutes)
- A 'beep' sound will be heard and "Stbdy" icon will flash in LCD screen.
- To let the iron heat up again: pick up the iron or move it slightly. The LCD panel will switch back to the original status.

After ironing

- After use, disconnect the iron from the mains power outlet.
- Stand the iron on its heel and let the iron cool down fully.
- Pour away the excess water from the water tank.

CLEANING AND MAINTENANCE

Unplug the iron from mains power and allow it to cool down completely before cleaning and storing.

Cleaning

- Clean the upper part of iron with a damp cloth. If necessary, use a mild detergent.
- Do not use alcohol, acetone, benzene, scouring cleaning agents, etc., to clean the iron. Do not use hard brushes or metallic objects.
- Remove any deposits on the soleplate with a damp cloth. To avoid scratching the finishing, never use a metallic pad to clean the soleplate, and never place the iron on a rough surface.
- To remove synthetic residue from the soleplate, iron over an old cotton rag in high setting.
- Always store the emptied iron horizontally on a stable surface with a cloth protecting the soleplate.

Self-clean function

The self-cleaning function should be used on a regular basis, depending on usage and the hardness of water used in the iron.

WARNING: Never pour white vinegar or any liquid cleaners into the water tank!

- Fill the water tank. *Refer to OPERATION: Filling the water tank.*
- Position the iron vertically on its stand on a suitable surface.
- Ensure that the variable steam knob (7) is in OFF position.
- Connect the plug to a suitable power outlet.
- Set to maximum ironing temperature. i.e. fabric type 10 or 11
- Once the soleplate temperature is reached, unplug the iron from the mains.
- Hold the iron over a sink, *move and hold* the variable steam knob (7) in the **SELF CLEAN** position. Boiling water and steam will now emit from the holes in soleplate.
- Carefully shake the iron forwards and backwards to allow any scale and other deposits being expelled with the boiling water and the steam.
- Release the variable steam knob (7) when the water tank is empty.
- Select a temperature setting and leave in operation for at least two minutes to dry the soleplate.
- Unplug the iron and let the iron cool down fully.

Anti-Calc function

- The KB-602E2 is fitted with a decalcification feature. Insoluble calcium ions are absorbed and soluble sodium ions are produced to soften the water in the tank. This feature slows down the process of calcium deposits and prolong the life of the iron.

TECHNICAL DATA

Rated voltage: 220-240V~ 50/60Hz

Rated power: 2020-2400W

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.