


home
&CO


Cordless Water Kettle
Instruction
Manual

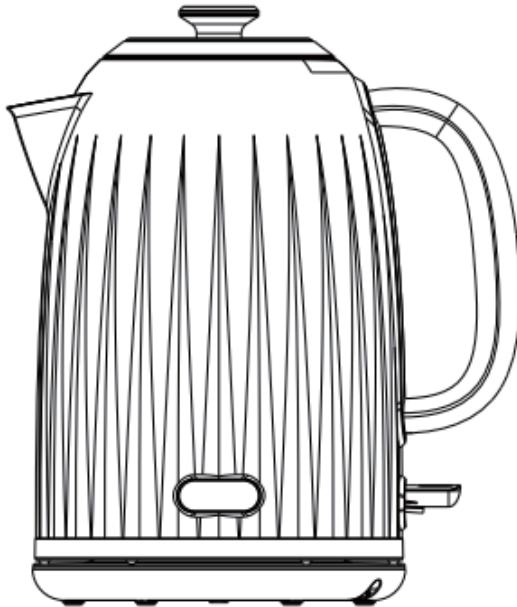

WK8512

220-240V 50/60Hz 1850-2200W

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE
REFERENCE

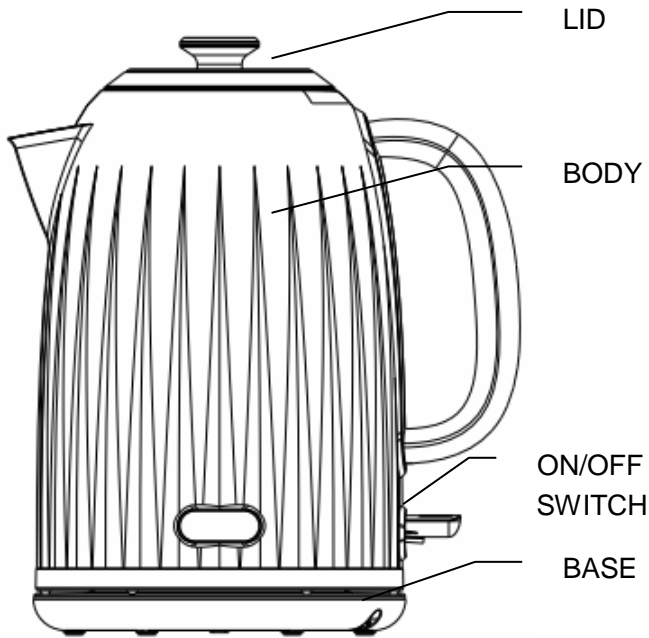

IMPORTANT INSTRUCTIONS

- Please read these instructions carefully before using the water kettle for the first time.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand

the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised by an adult.

- Keep the appliance and its cord out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced

by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- If the kettle is overfilled, boiling water may be ejected. Do not fill water above the maximum water level mark.
- Kettle is only to be used with the stand provided.
- This appliance is intended to be used in household and similar applications such as :
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Do not operate the kettle if damaged, after an appliance malfunctions or it has been damaged

in any manner. Any repairs to the kettle must be carried out by qualified electrical person only.

- Before you connect the kettle to mains power, make sure that the voltage indicated on the rating plate, located on the bottom of the water kettle matches the mains voltage in your home. If it does not, do not use the kettle.
- The kettle will switch OFF automatically when the water has boiled. If you want to stop the heating process before the kettle automatically switches OFF, lift the ON/OFF switch up.
- After the kettle has switched OFF automatically (or has been switched OFF manually) it may need time to cool down. After 15 - 20 seconds, the kettle can be switched ON again.
- Always fill the kettle with water before switching it

ON.

- The kettle if fitted with a dry boil protection device to switch the kettle OFF automatically if the kettle is used without any water.
- If the dry boil protective device is activated, allow the kettle to cool down for 15 minutes. This will reset the kettle to normal condition. And then refill the kettle with water to boil.
- Place the kettle on a stable flat surface.
- Do not use this appliance outdoors.
- **CAUTION:** Ensure that the kettle is switched OFF before removing it from its base.
- Do not remove the kettle from its base during

operation.

- Never immerse the appliance or cord in water or any other liquid. Do not allow liquid to penetrate the

electrical parts of this kettle.

- Prevent children from pulling on the mains cord or knocking the kettle over.
- Avoid spilling liquids on the connector.
- Misuse may cause injury.

CAUTION: The heating element surface is subject to residual heat after use.

CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed with water. Do not move the kettle while the kettle is switched ON.

CAUTION: To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.

- Only operate the appliance from a power source of the same voltage, frequency, and rating as

indicated on the product identification plate.

- Never let the power cord hang over the edge of table.
- The outside surface of the kettle may get hot during use. Please take care when using the kettle.
- Never fill in water more than the maximum water level mark.
- Never use the kettle with the lid open.
- Do not open the lid when steam is coming out of the spout.
- Before cleaning disconnect the kettle from mains power and wait until it has completely cooled down.

Before first use

Before first use, it is recommended to operate the kettle for 2 or 3 times following the instructions below. This will remove any dust or residues remaining from the manufacturing process.

- Remove the kettle jug from the base before filling with water.
- To fill the kettle jug, open the lid and fill it with water to the desired level (Min. 0.75L - Max. 1.7L). Close the lid until it 'clicks' into place.
- Plug the power supply cord into mains power. Turn ON the kettle by pressing the power On/Off switch down. The power indicator will light up.
- When the water has boiled, the kettle will automatically switch OFF. You can stop the boiling process at any time by lifting the On/Off switch up.

The power indicator light will switch OFF.

Cleaning

- Avoid using abrasive cleaning agents.
- Empty the kettle and allow it to cool down. Open the lid and remove the filter. Rinse the filter under warm water and brush off any impurities.

CAUTION: To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.

Descaling

- Fill the kettle with water until it is half-full and add 20 mL of lemon juice to the water.
- Boil this mixture and allow it to stand for 15 minutes. Re-boil the mixture and allow it to stand a

further 15 minutes. Re-boil this mixture a third time and rinse the kettle thoroughly with water.

- Alternatively use a commercially available kettle Descaling product and follow the instructions on the bottle.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via [Customer Help](#) at Kmart.com.au - for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.