

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

# anko

## **Blender DZ-1613 User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

# IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



## READ ALL INSTRUCTIONS BEFORE USE.



**WARNING-- To reduce the risk of fire, electric shock, or serious personal injury:**

- Always ensure the product is unplugged from the electrical outlet before relocating, assembling, disassembling, or cleaning it. Always unplug the product from the electrical outlet when it is not in use.
- This product is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the products by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- Keep the product out of the reach of children and pets. This product is not intended for use by children. Close supervision is necessary when using this product near children.
- Do not leave the product unattended while it is in use, especially when children are present.
- Do not let cord hang over edge of table or counter or touch hot surface including stove.
- Do not immerse power cord, plug, or product in water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet. **Do not touch or reach into the water.**
- Keep the Power Cord and product away from heated surfaces.
- The use of attachments not supplied with the product may cause injury to persons or damage to property.
- Handle the blades with care as they are **extremely sharp**. Use caution when attaching or detaching the Blades.
- Care is needed when handling cutting blades, especially when removing the blade from the jug emptying the jug and during cleaning.
- Do not touch the moving parts (e.g., the blades) while the product is in use.  
**WARNING: Do not touch the cutting blades or insert any object, such as knives, forks, spoon etc. into the jug while the blender is in operation.**
- **Keep hands and utensils away from the moving blades while operating the product.** A scraper may be used but only when the product is not operating.
- Do not plug/unplug the product into/from the electrical power outlet with a wet hand.
- To disconnect the product from an electrical outlet, pull directly on the plug; do not pull on the power cord.
- Always operate the product with the glass jug lid in place.  
**WARNING: DO NOT process boiling liquids or hot ingredients. Allow hot ingredients to cool before placing them in the glass jug.**  
**To prevent damage to the Glass jug ensure it is not exposed to boiling hot water when washing or cleaning.**

- To disassemble the glass jug for thorough cleaning, turn the blade base counterclockwise and remove it, take out the gasket from the blade assembly carefully. Use a small brush (not included) to remove particles of food lodged underneath the blades. To reassemble, replace the gasket in the blade assembly put on the glass jug and then turn the blade base clockwise until tighten onto the glass jug (refer to the Parts illustration on page 4).

### Storage

1. Unplug and clean unit.
2. Ensure all parts are properly dried.
3. Store in original box or in a clean, dry place.
4. Never store the blender while it is hot or while connected to mains power.
5. Never wrap the cord tightly around the product. Never place any stress on the cord, especially where the cord enters the unit, as this could cause the cord to fray and break.

### Electrical Specifications

Voltage: 220-240V~ 50/60Hz  
Power: 500W

**CAUTION:** Do not operate the product until it is properly assembled.

1. Ensure the product is unplugged from the electrical outlet.
2. Pour liquid ingredients into the glass jug.
3. Wash all solid ingredients and cut them into pieces small enough to fit into the measuring cup.  
**CAUTION:** The glass jug has a two and half cups (19.2 oz. /0.6 liter) capacity. Do not over-fill it.  
**CAUTION:** Do not use the product for mashing or grinding heavy foods (e.g., potatoes or meats) or to stir thick mixtures (e.g., dough).
4. After filling the glass jug with ingredients, place the lid with measuring cup securely onto the glass jar.
5. Plug the product into a standard 220-240volt AC electrical outlet.
6. Turn the Dial to "1" or "2" setting or hold the dial switch in "P" position.

**CAUTION:** Never operate the product empty.

**Warning!** The maximum operating time is 1 minute. Allow it to rest for at least 2 minutes before using it again. After 5 cycles of operation, cool down the motor to room temperature, allow to cool down for approx. 30 minutes before using it again.

**NOTE:** If the blades are not operating smoothly, stop the product and add some liquid, or reduce the contents in the glass jar.

7. To blend food for a short time, pulse operation can be selected by turning the dial switch to "P" setting. Hold the dial switch at "P" setting for this function. To stop blending, release the dial switch.
8. To use the ice crush function, hold the dial switch at "P" setting. Release the dial switch to stop crushing.

**IMPORTANT!** Use ice cubes only approximately 2cm<sup>3</sup> in size.

9. Turn off the product by turning the dial to "0" position, and then unplug the product from the mains power outlet.

**WARNING:** Always unplug the product when it is not in use or when left unattended.

10. When the Blades have stopped turning, the glass jar can be removed from the motor housing.  
**IMPORANT!** To prevent premature wearing on the fly-wheel remove the glass jug from the motor housing only when the blades have come to a complete stop.

### Care and Maintenance

**WARNING:** Always ensure the product is unplugged from the electrical outlet before relocating, assembling, disassembling, or when cleaning.

**CAUTION:** Before disassembling the product for cleaning, ensure the blades have completely stopped and use caution when attaching or detaching them, as they are extremely sharp.

- Always clean the product immediately after each use. Wash all parts except the Motor Housing in warm, soapy water and then rinse and dry thoroughly. **Never immerse the motor housing in water or other liquids.** Never use abrasive cleaners on any part of the product. **DO NOT** place any parts into a dishwasher or extremely hot water.

- Be careful if hot liquid is poured into the food blender as it can be ejected out of the appliance due to a sudden steaming.
- Never place the blade assembly on the base unless it is attached to the Jar.
- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.

**IMPORTANT!** Never operate the blender when the jug is empty and **DO NOT** remove the jug lid before the blades come to a complete stop.

- Switch OFF the product and disconnect from mains power supply before changing accessories or approaching parts that move in use.
- If the supply cord is damaged, it must be replaced by qualified electrical person in order to avoid a hazard or the product must be disposed of.
- Misuse may cause injury.
- This product is for **household use only**, not designed for commercial use.

**WARNING:** The maximum operating time is 1 minute. Allow it to rest for at least 2 minutes before using it again. After 5 cycles of operation, allow the blender (electric motor) to cool down to room temperature, allow it to cool down for approx. 30 minutes before using it again.

**Failing to follow the above instructions will cause electric motor burnout.**



**CAUTION-- To reduce the risk of personal injury or product/property damage:**

- This product is intended for indoor, non-commercial, non-industrial use in processing foods for human consumption. Do not use the product outdoors or for any other purpose.
- Always operate the product on a flat, stable surface.
- Do not attempt to open any part of the Motor Housing.
- Do not let cord hang over edge of table or counter where it may be tripped over or pulled.
- **CAUTION:** Ensure that the blender is switched OFF before removing it from the stand.

### **SPECIAL INSTRUCTIONS:**

A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. Extension cord may be used if care is exercised in their use:

- The marked electrical rating must be at least as great as that of the product;
- If the product is of the grounding type, the extension cord must be a grounding-type 3-wire cord;
- Place the longer cord in a way that it will not drape over a countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## Parts

1. Stopper
2. Lid
3. Glass Jug
4. Blade Assembly
5. Motor Housing
6. Dial Switch
7. Power Cord




**NOTE:** Parts 3-4 are initially assembled.

## To Assemble


**WARNING:** Handle the blades with care as they are extremely sharp. Use caution when attaching or detaching the Blades.

1. Place the blade assembly on the bottom of the glass jug, turn it anticlockwise until it is in position.

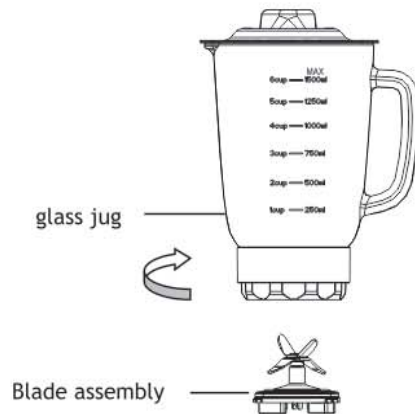

**IMPORTANT!** To prevent leaking **DO NOT** forget to place the sealing gasket.

2. Place the Main Body on a flat, stable surface, and then place the assembled jug onto the top of the Main Body until it is firmly in place.

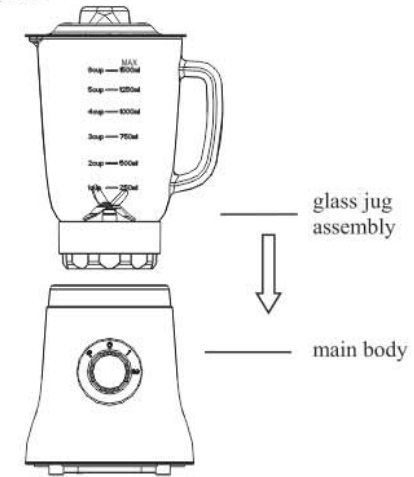

## Before use the blender

1. Before using the product for the first time, wash all the parts except the motor housing in warm, soapy water, and then rinse and dry thoroughly.

**CAUTION:** Never immerse the motor housing in water or other liquids. Never use abrasive cleaners on any part of the product. **DO NOT** place any parts into a dishwasher or extremely hot water.

2. Place the blade assembly (4) on the bottom of the jug (3) and then screw it on tightly.  
**IMPORTANT! Do not forget to check the gasket in the blade assembly.**
3. Place the motor housing on a flat, stable surface, and then place the assembled glass jug onto the top of the motor housing, turn it clockwise until locks in place.  
**NOTE: if the glass jug in not locked-in properly to the base (motor housing) the blender will not work.**
4. Place the lid (2) with measuring cup (1) onto the glass jug.

## To Use the blender

**WARNING! DO NOT** process boiling liquids or hot ingredients. Allow hot ingredients to cool before placing them in the glass jar.

**IMPORTANT! DO NOT** fill the glass jar above the maximum level as indicated on the jar. Some mixtures increase in volume during blending and create pressure in the jar.