 


anko

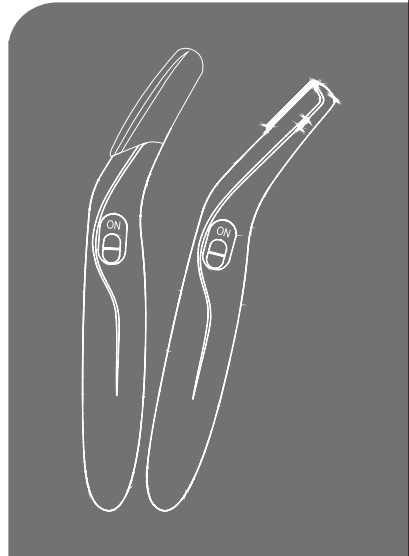 


FACIAL BEAUTY TRIMMER

TB-858

INSTRUCTION MANUAL

STRUCTURE:

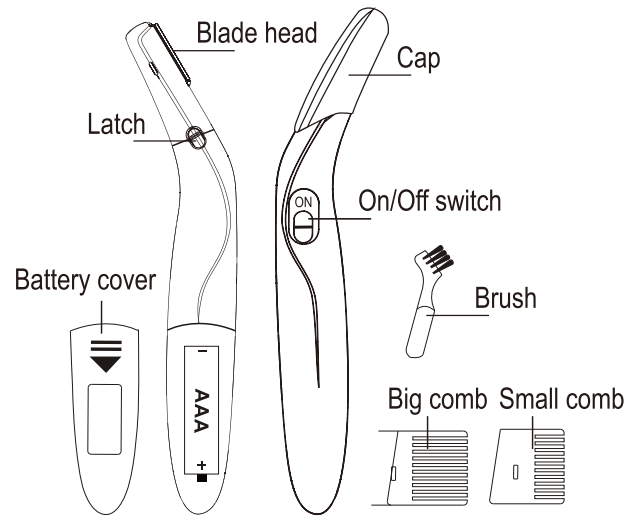


FEATURES:

1. Gently, quickly and painlessly removes and trims hair without irritation. Also safe for sensitive skin.
2. Ideal for removing hair from Bikini area and also eyebrows, face, underarms and whole body.
3. Tilted cutting head is good for holding and trimming.
4. With 2 combs. The big comb for body hair trimming and the small comb for eyebrow.
5. Sleek and compact, this shaver fits easily in your purse and cosmetic bag.
6. x 1 AAA battery required (not provided).

HOW TO USE:

 
• How to install battery:

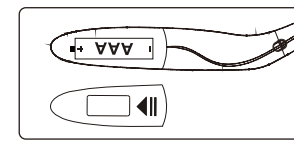

Slide the battery cover down and insert 1 AAA battery as shown above. Replace the cover. (Battery not included)

• How to use:

 1. Remove the cap before use.
2. Slide the power switch up to the "ON" position to turn on the unit.
3. Close the blade head to your skin and remove unwanted hair by moving it in the opposite direction of hair growth.
4. Attach the big comb or small comb to the blade head for body hair trimming or eyebrows.
5. Slide the power switch down to turn off the unit after each use.

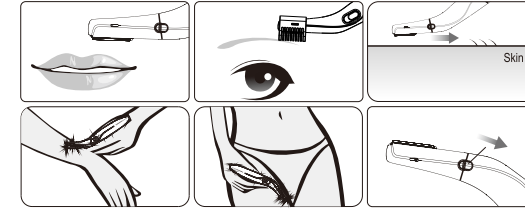

• How to clean:

1. Use the cleaning brush to remove any hair that has accumulated on the blade.

2. If necessary for cleaning, the blade head may be removed by sliding the latch down away from the tip.
3. Clean the main body with wet/dry cloth or tissue if dirty.
4. This product is not water resistant. Don't wash it with water.

ATTENTION:

1. Remove battery if the product will not be used for an extended period.
2. Keep out of reach of children.
3. DO NOT disassemble the main body .

TROUBLE CLEARING:

Feature	Fault Cause	Processing Method
Poor trimming effect	The blade was deformed or damaged.	Replace with a new blade.
	Worn blades.	
Does not work	Battery installed incorrectly.	Reinstall battery correctly.
	Low battery.	Install new battery.
Blade loose	The blade head not locked correctly.	Lock the blade head correctly.

BEAUTY TIPS:

1. Wet hair with warm water and dry the hair before trimming to make trimming easier.
2. Apply moisture cream to hair after trimming for care.
3. Avoid doing a facial after removing facial hair.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us