

anko INSTRUCTION

CAUTION:

CAUTION-THIS PRODUCT CONTAINS FUNCTIONAL SHARP EDGES, TAKE EXTRA CARE WHEN HANDLING. KEEP OUT OF REACH OF CHILDREN

Before First Use: Wash all parts in warm soapy water, rinse with clean water and dry with a soft cloth



BLADE OPTION:



USAGE:



Put the machine on a clean, flat surface. Press down suction lock firmly.



Select your desired Blade and carefully slide it into the slicer's Blade Holder until it snaps into place. Be careful to avoid directly touching the blade's sharp surfaces.



Cut the ends off the food and place the flat ends between the circular holder and spiked food holder.



With one hand on the Crank Handle. Lightly push the crank handle forward while rotating in a clockwise direction. Keep the collection container in position to catch the cutting food.

TIP: Hold the base of the spiralizer when spiralizing hard vegetables such as carrots.

13.5X25.3cm