 


FRONT PAGE

■ "ZERO" OR "TARE" FUNCTION

To weigh different loads consecutively without removing loads from the scale. Put first load on the scale, get weight reading. Press button to reset the LCD reading to "0" before adding next load. You can repeat this operation.

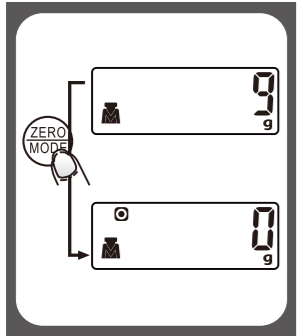

- **Condition 1: "ZERO" function**
When total sum of all loads on scale $\leq 4\%$ of scale's max. weight capacity. (4% = 80g when capacity is 2kg; 200g when capacity is 5kg)

 
LCD will show "----" or "0g" each time is pressed. "----" means not stable, please wait for a moment. "0g" and meanwhile an icon "o" on the left of LCD mean "ZERO" function is active. Max. weight capacity remains unchanged.

- **Condition 2: "TARE" function**
When total sum of all loads on scale $> 4\%$ of scale's max. weight capacity. (4% = 80g when capacity is 2kg; 200g when capacity is 5kg)

LCD will show "----" or "0g" each time is pressed. "----" means not stable, please wait for a moment. "0g" and meanwhile an icon "T" on upper left corner of LCD mean "TARE" function is active. Max. Weight capacity is reduced by total weight of all loads.


- **Under this condition:**

By pressing , you can see the total weight of all loads on the scale. If you want to weigh more loads, just press to reset LED reading to '0' again.

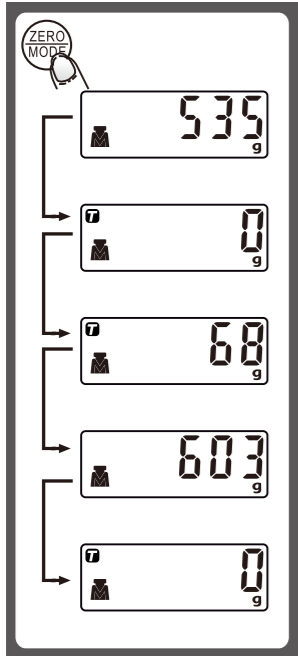


5

 ■ AUTO SHUT OFF

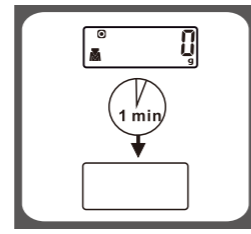

Auto shut-off occurs if display shows '0' or shows the same weight reading for 1 minute.

 ■ WARNING INDICATORS

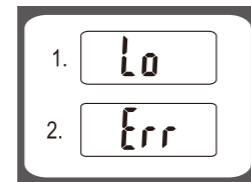

1. Replace new battery.
2. Scale overload. Remove item to avoid damage. Max. weight capacity is indicated on the scale.

▲ CLEANING AND CARE

1. Clean the scale with a slightly damp cloth. DO NOT immerse the scale in water or use chemical / abrasive cleaning agents.
2. All plastic parts should be cleaned immediately after contact with fats, spices, vinegar and strongly flavored / colored foods. Avoid contact with acids citrus juices.
3. Always use the scale on a hard, flat surface. DO NOT use on carpet.
4. DO NOT strike, shake or drop the scale.
5. The scale is high precision device. Please take care of it.
6. Please keep it dry.
7. Please check whether battery is installed or in high level if scale can not be turned on.
8. The scale is for family use only, not for commercial purpose.

6

WARNING!

The battery must be installed by an Adult. Keep batteries out of reach of young children.



anko

ELECTRONIC KITCHEN SCALES

INSTRUCTIONS FOR USE



42616450

 
BACK PAGE

■ FEATURES

1. Indicate volume of water and milk
2. Two weight unit systems g, lb:oz convertible
3. Two volume unit systems ml, fl:oz convertible
4. Low battery power/Overload indication
5. High precision strain gauge sensor
6. Tare function
7. Auto off

■ TO INSTALL OR REPLACE BATTERY

1x3V CR2032 lithium batteries (included). Remove isolation sheet before use;

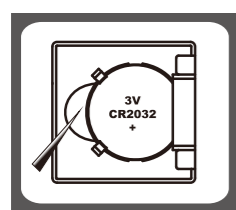

PIC 1

- Open the battery case cover at the bottom of scale:
- A. Take out the used battery with the aid of a sharp object, as shown in picture.
 - B. Install new battery by putting one side of the battery beneath the battery baffle and then pressing down the other side. (Battery positive is upward)

1

 
■ LCD



■ BUTTONS ILLUSTRATION

- 1. Press the button to reset LCD to "0"/"T"
- 2. Press it for 3 seconds to choose working mode, press it consecutively to realize fast conversion
- Press the button to convert between Metric and Imperial (Setted at the bottom for some scales.)


■ WORKING MODES

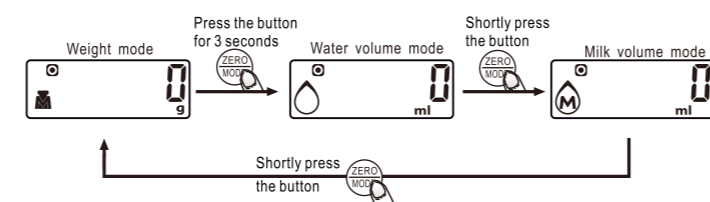

■ TO CONVERT WEIGHT UNIT


If the scale is with both unit systems of Metric (g, ml) or Imperial (lb:oz, fl:oz), press button to choose working mode (weight, milk volume, water volume), then press button to convert between two systems. Take the conversion of weight unit for example:

 2

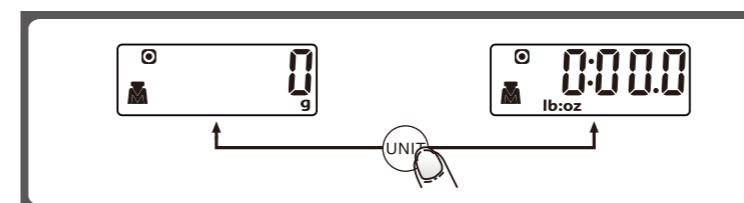

- * When setting g as weight unit, the default volume unit is ml;
- * When setting lb:oz as weight unit, the default volume unit is fl:oz.

 
■ TO START WEIGHING

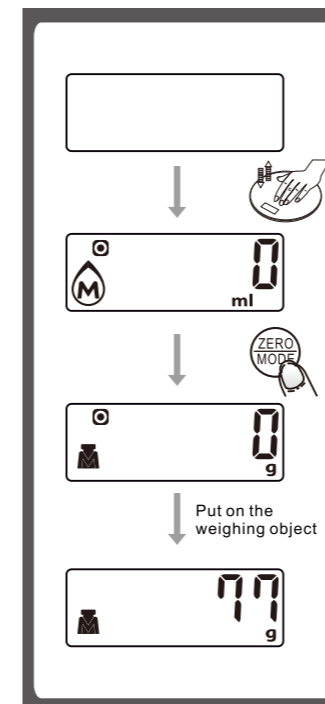

1. Weighing mode

- A. Place the scale on a solid and flat surface.
- B. Place bowl (if used) on the scale before turning on the scale.
- C. Gently press on the scale by hand to turn on
- D. Wait until LCD shows "0" to start weighing. Press to convert to weight mode if needed.
- E. Load weighing object on to start weighing, LCD will show the weight reading.
- F. If the weighing object is water or milk, press button to choose volume mode and view the volume of weighing object.

 3

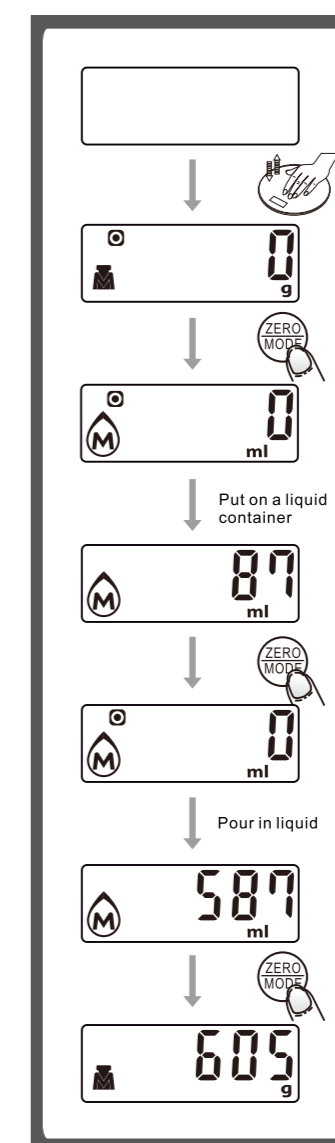

2. Volume indication mode

- A. Place the scale on a solid and flat surface.
- B. Gently press on the scale by hand to turn on
- C. Wait until LCD shows "0", and press button for a while to choose "Water" or "Milk" mode.
- D. Put a liquid container onto the scale platform.
- E. Press button to reset LCD to "0".
- F. Pour liquid (water or milk) into the container, LCD shows the volume of the liquid.
- G. Press button to choose "Weight" mode and view the weight of liquid.

4