

anko

 
INSTRUCTION MANUAL
BLUETOOTH SPEAKER

42662631



DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

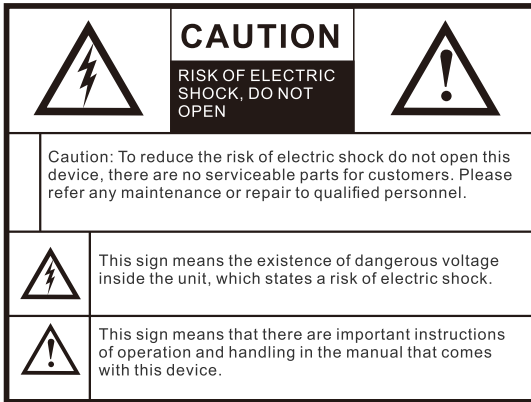

Contents

Caution	01	Connect with AUX Line in	07
Safe volume level	01	Specification	07
Introduction	02	USB play ability information	07
What's in the box	02	Supported MP3 disc formats	07
Overview of the main unit	03	Production information	07-08
Overview of the remote control	04	Troubleshooting	08
Get started	05	Warranty	09
Connect power	05		
Prepare the remote control	05		
Turn on	05		
Play	05		
USB play	05		
Basic play operations	05		
Play from USB	06		
Adjust sound	06		
Listen to radio	06		
Turn to FM radio stations	06		
Connect with Bluetooth	07		

Caution:

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Minimum distances 100 cm around the apparatus for sufficient ventilation.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To be completely disconnected the power input, the mains plug of apparatus shall be disconnected from the mains completely.
- The main plug of apparatus should not be obstructed or should be easily accessed during intended use.
- The use of apparatus in moderate climates.
- Attention should be drawn to the environmental aspects of battery disposal.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly. Without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss. Be sure to use your equipment reasonably and take appropriate breaks. Be sure to observe the following guidelines when using your headphones.
- Listen at reasonable volumes for reasonable periods of time. Be careful not to adjust the volume as your hearing adapts. Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc., it may create a traffic hazard and is illegal in many areas.

Notice

Any changes or modifications made to this device that are not expressly approved by Consumer Lifestyle may void the user's authority to operate the equipment.

Introduction

With this unit, you can:


- Enjoy audio from USB storage Devices, and other external device;
- Listen to radio stations.

What's in the box

Check and identify the contents of your package:

- Main unit
- Remote control
- User manual
- Line-in Cable
- FM Antenna Cable


Overview of the main unit

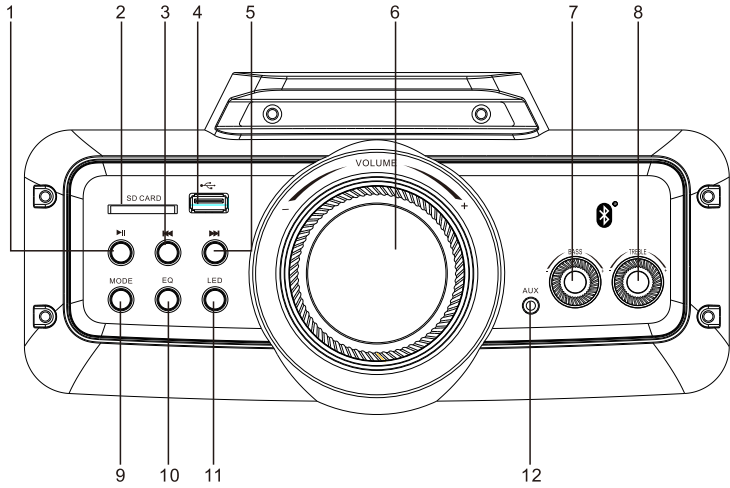

1. Play/Pause function key
2. SD Card Slot
3. Previous function key
4. USB Drive Slot
5. Next function key
6. Volume control
7. Bass adjustment
8. Treble adjustment
9. Mode
10. Equalizer
11. LED function key
12. AUX In

P-05

Overview of the remote control

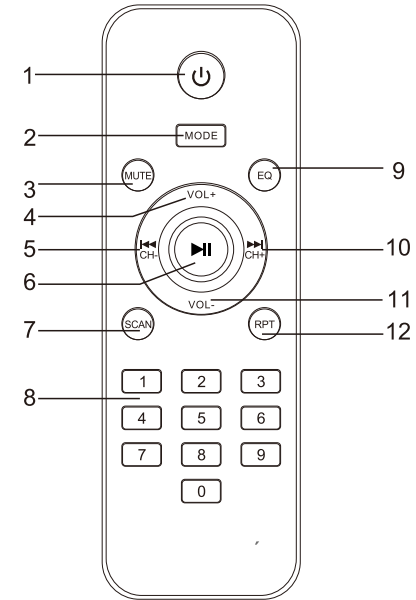

1. Power Function Key
2. Mode Function Key
3. Mute Function Key
4. Volume + Function Key
5. Previous Function Key
6. Play/Pause Function Key
7. Scan Function Key
8. 0-9 Function Key
9. Equalize
10. Next Function Key
11. Volume - Function Key
12. Repeat Function Key

P-06

Get started


Always follow the instructions in this chapter in sequence.

Connect power

! Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on back or the underside of the unit.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before you connect the AC power cord, make sure that you have completed all other connections

Connect the power cable to the wall socket:

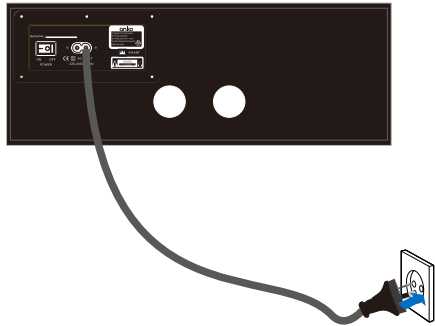

Prepare the remote control



To insert the remote control batteries:

1. Open the battery compartment.
2. Insert 2 x AAA batteries with correct polarity (+/-) as indicated. The 2 x AAA battery not include in our products, please purchase from Authorized Seller.
3. Close the battery compartment.

Please Note:

- If you are not going to use the remote for a long time, remove the batteries.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

How to Turn on the unit

1. Connect the AC power cable and plug to the wall socket;
2. Press the "POWER" switch on the rear panel to "ON" status.
3. Press the "POWER" switch on the rear panel or "Power Function Key" on the remote control again to turn off the unit.

Caution:

If you do not use this unit for long period of time, Press the "POWER" button to "OFF" and disconnect the AC power.




Play

USB play

1. Press **◀◀** or **▶▶** key to select
2. Press **▶||** key to play or pause

Basic play operations

You can control play through following operations

Key	Function
	LED Press LED button to open or close light effect
	EQ Press EQ button to change different sound effects
	Press to PLAY/PAUSE and press against resume to play.


Play from USB

≡ Note:

Make sure that the USB storage device contains playable audio contents for supported formats.

Insert the USB drive into the USB socket. The unit will switch USB mode and start playing.

Press **▶||** to start play

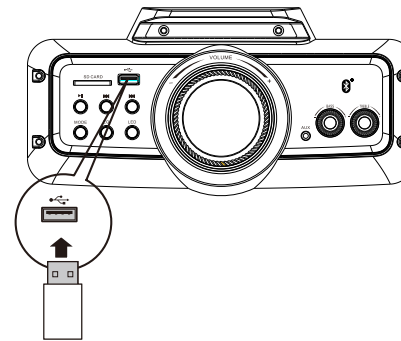

Important: The USB port is intended only for data transfer, other devices cannot be used with this USB connection. The use of USB extension cords is not recommended.

Note: The MAX. memory size of USB: 16G

Note:

1. FM Mode: Press PLAY/PAUSE key on the remote control to search automatically.
◀◀ / ▶▶ key is "CH+" / "CH-" ;
2. Press **◀◀ / ▶▶** key for a long time can be the key of volume +/- ;
3. This unit is with the power off memory function

Adjust sound

During play, you can adjust volume through following operations.

Key	Function
VOL	To increase/decrease +/-
MUTE	To mute/restore sound
Bass +/-	To turn on or off dynamic
Treble +/-	bass/treble enhancement.


Listen to radio

Turn on FM radio stations

≡ Note

- Make sure that you have connected and fully extended the supplied FM antenna.

1. Press MODE button on the remote control or on the main unit to switch to FM MODE.
2. Press SCAN button to search and program radio stations automatically.
3. Press **◀◀ / ▶▶** to select programmed radio stations.

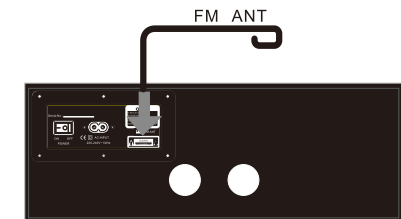


Connect with Bluetooth

1. Press MODE Button on the Top Control panel or on the remote control to switch to the BLUETOOTH CONNECT mode, (BT) will be displayed and blink on the screen.
 2. Open the Bluetooth on the external device (must have Bluetooth function), search the Bluetooth device name "42662631". Select and pair with this unit.
 3. Once connected. You will hear a connected sound.
 4. You can use the ◀▶ or ▶▶ button on the front panel to control the songs of the external device.
- Note: This model do not need the password.

Connect with AUX Line in

1. Press AUX Button on the Top Control panel or on the remote control to press Mode button to switch to the AUX CONNECT mode, (AUX) will be displayed on the screen.
2. Connect this unit with a 3.5mm AUX cable, insert the jack into device Earphone jack by provided AUX cable.
3. Once connected, turn on your external device music

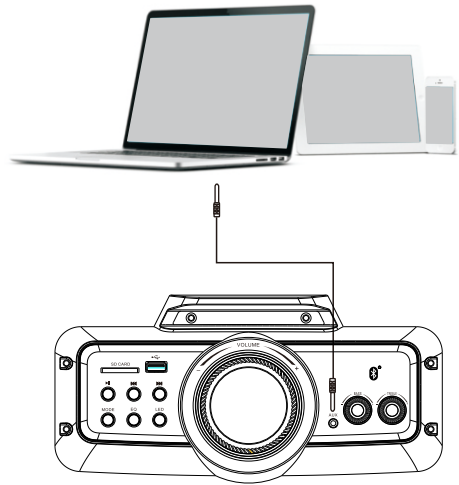

USB and SD Card Play back.

Compatible USB storage devices:

- USB flash memory (USB 2.0 or USB 1.1)
- USB flash players(USB 2.0 or USB 1.1)

Supported for formats:

- USB or memory file format FAT12,FAT16,FAT32 (sector size:512 bytes)
- MP3 bitrate (data rate):32-320Kbps and variable bitrate
- Directory nesting up to a maximum of 8 levels
- Number of albums/folders:maximum 99
- Number of tracks/titles:maximum 999
- File name in Unicode UTF8 (maximum length:32 bytes)

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3.
- Unsupported the file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.

Product information

Specifications

Amplifier

Output power 30W

Frequency Response 20Hz-20KHz

Line input 800mV

Tuner

Turning range FM:87.5-108MHz

Step 0.1MHz

Speakers

Full Frequency Speaker Impedance 4ohmx2

General information

AC Power AC 220V-240V 50HZ

Dimension

Main unit (WxHxD) 380*250*200MM

Weight 3.45kg

Troubleshooting

Warning

Never remove the casing of this apparatus. If you encounter problems when using this apparatus, check the following points before requesting service.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.

No sound or poor sound

- Adjust the volume.
- Disconnect the headphones.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

No response from the apparatus

- Disconnect and reconnect the AC power plug, then turn on the system again.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities(+/- signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

Cannot display dome files in USB device

- The Number of folders or files in the USB device has

exceeded a certain limit. This phenomenon is not a malfunction.

- The formats of these files are not supported.

USB device not supported

- The USB device is incompatible with the unit. Try another one.

Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Full extend the FM antenna.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.