

## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

3

# anko

## Desktop Wireless Combo Instruction Manual

Keycode: 42665656



### Features:

2.4Ghz wireless technology  
Up to 800/1200/1600 CPI and three resolutions for optional mouse sensitivity  
Ergonomic design  
Built-in nano receiver

### How to install

1. Remove the mouse, USB receiver and keyboard out of the packing.
2. Insert the USB receiver into the computer's USB port
3. Insert the 2x "AAA" batteries into the mouse, and 2x "AAA" batteries into the keyboard, following the polarity guides in the battery compartment.
4. The LED light will shine for a period of time, then they will be able to be used.



USB Receiver

### Advanced Functions:

To change the CPI (mouse sensitivity)  
There are 3 types of CPI settings: 800/1200/1600. The default CPI setting is 1200.

1. Press the CPI button on the top of the mouse to change the sensitivity
2. Long press the left key + middle key 3 seconds = switching CPI

### Low Battery Reminder

When the battery is low, the RED LED will flash. Please replace with new batteries.

1

### Auto Sleep Function:

The mouse will switch to sleep mode once inactive for 8 minutes. Press any button to activate the mouse from sleep mode again. Remove the battery from the mouse if it is not being used for a long period of time.

### Re-connection

Wireless connection may be affected by high temperatures. Magnetic fields or vibration. Re-connect the mouse using the following steps:

1. Remove the USB receiver from the computer and re-insert after a few seconds.
2. Press and hold the scroll wheel and the right click button. Simultaneously for a few seconds and then release. The device will be able to be used again.
3. For the keyboard, press the ESC key and "K" key simultaneously for a few seconds and then release. The keyboard will be able to be used again.

### NOTE:

1. 2.4GHZ wireless radio wave transmits up to 10 meters. The transmission distance will be shorter if there is an obstruction.
2. For the best possible responsiveness of the mouse, it is recommended that it is used on a flat surface and/or with a mouse pad.

### Caution:

Any alteration or amendment of this device is prohibited for user without any explicit permission from responsible authorities.

2