



skitz

turbo

USER MANUAL

GSTURBO-USB

Thank you for choosing the Turbo Scooter. Please read the user manual carefully before riding. This manual aims at helping you to assemble, use and maintain the scooter.


Suitable Age: 2-9 years

SAFETY WARNING

1. Please read this user manual carefully before riding.
2. **WARNING.** Protective equipment should be worn. Not to be used in traffic.
3. Must be completed by an adult, make sure all parts are tightened and secure before every ride.
4. Dispose of all packaging material to prevent any danger of child consumption.
5. This product is designed for children 2-9 years. Maximum weight capacity is up to 50 kg.
6. The battery must be charged for approximately 2.5 hours prior to first use.
7. Adult supervision is recommended while in use.
8. Only one rider must ride this scooter at all times.
9. Cold water must ONLY be used. It is recommended to add approximately 100ml of water in to each engine tank, if the tank is over flowing it may cause the engines to leak. (water or leaking water will not cause any danger to the rider or damage the scooter).
10. It is not advisable to replace any part of the product as it may cause damage to the rider and the product may not function correctly.
11. Please check every connection & parts regularly and make sure they are all tight and secure before every use.
12. Please check every screw & part and make sure they are all tight and secure before every use.
13. Rider must wear protective clothing at all times. Including as a safety approved helmet, gloves, elbow & kneepad.
14. Rider must wear closed shoes while riding.
15. Do not ride scooter in wet and or uneven terrain conditions such as gravel, pot holes and bodies of water.
16. Please check your local laws for information about areas where the scooter can be ridden. Do not ride scooter on roads.
17. Not to course any harm or damage, do not ride scooter near stairs or fire or any other forms of strongly heated areas.
18. Ride scooter in safe and supervised areas and where the law is permitted in your state.
19. It is strongly advised not to ride scooter at night and in low visibility areas.
20. No stuntng, tricks, dragging, towing while riding this scooter.
21. It is important to practice and develop skills to avoid falling over while riding.
22. The power must be switched off when scooter is not in use.
23. Do not replace or move any part on the scooter that does have any movement.
24. Do not allow scooter to get wet or left outside in the rain as it will damage to the battery and wire system.


1. INSTALLATION

1. Check you have all these parts before installation.

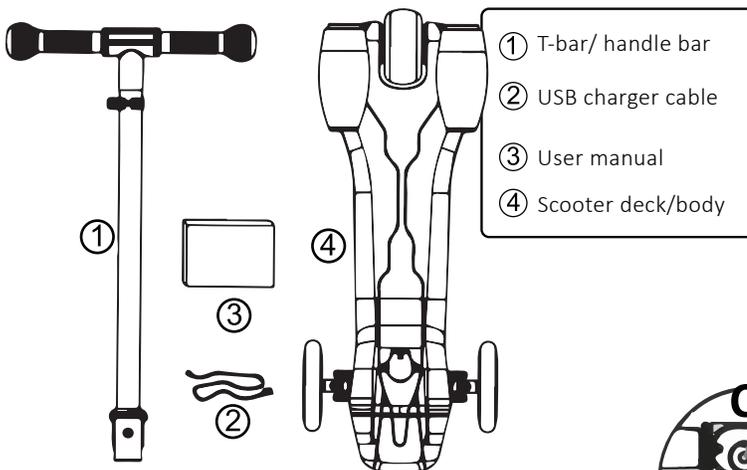


2. Install the T-Bar/Handle Bar:

Install the T-Bar/ Handle Bar into the front insert of the Scooter Deck/Body. Be cautious of the direction the T-Bar/Handle is to be inserted correctly. If not inserted correctly it could result in the T-Bar/ Handle Bar disconnecting from the Scooter Deck/Body.

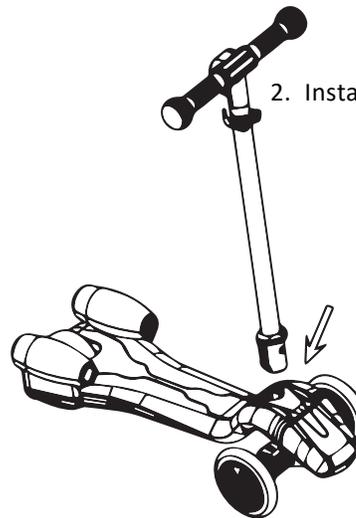

1. Change the height of the handle:
(a) Open "E" set up valve and set the handle altitude according to the height of the rider. Press spring switch, move up to fixed hole^①, or down to fixed hole^②.
2. Lock "E" step up valve.
If you cannot open or lock it, you can use the wrench to do it.

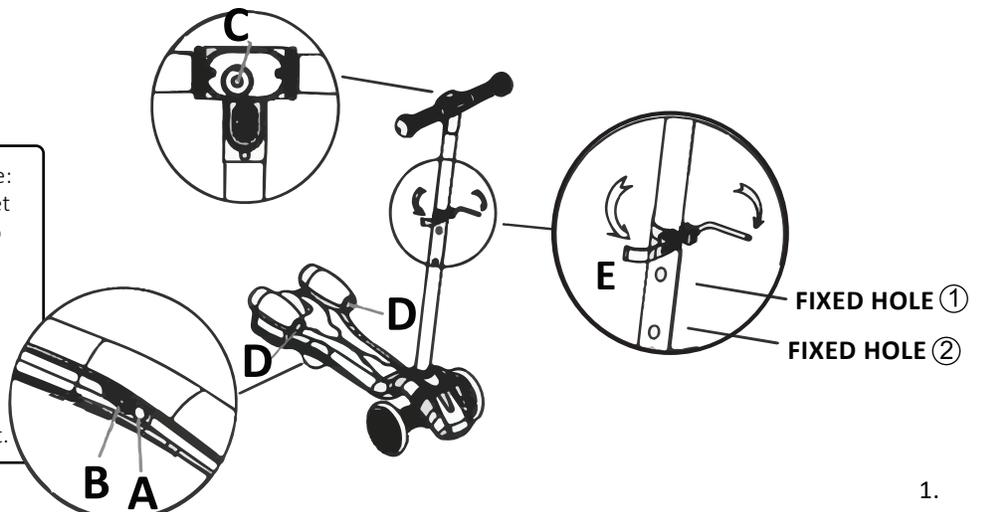

3. MAINTENANCE

A. Power button

B. LED charger indicator light

C. ON/OFF button

D. Button push to add water

(1) Battery Charging

Batteries are to be charged via a USB charging cable (included)

Insert the USB Cable into your Turbo Scooter, then connect the USB cable's other end to a charging device such as a computer USB port, Laptop USB port or a ~5V USB Wall Charger (not included).

(2) The battery must be charged for approximately 2.5 hours prior to first use.

(3) Adding water

Cold water must **ONLY** be used. To add water push and hold down "D" (add water button) and pour water into gap then release button. It is recommended to add approximately 100ml of water to each engine tank, if the tank is over flowing it may cause the engines to leak. (water or leaking water will not cause any danger to the rider or damage the scooter).

(4) Push "A" Power button located on the right side of the scooter, then push "C" ON/OFF button located center upper handle bars. The two engines will begin to spray with illuminated lighting, the head light and wheels will also illuminate.

(5) After approximately 90 seconds the engines will stop and you will need to push the "C" button to restart the engines. If you push "C" button while the engines are running, the engine will stop.

(6) If you want to add water to the engine, you must turn off the "A" Power button first.

(7) If the battery has no electrical power, the engine won't work. You will need to fully charge the battery.

3. TROUBLESHOOTING

1. If you push "A" (Power button) and "C" (ON/OFF button) but the engine and front lights still don't work, you need to check the following:

(a). Have you recharged the battery?

(b). Batteries may be flat and need to be fully charged.

2. If the engine is illuminating light but does not spray, you need to add water.

3. If the engine does not spray or/after several months, some accessories may be broken and it is recommended to replace them. Please contact place of purchase.

4. It is advisable to check the tyres and add gear oil regularly. If you see any ropes or dirt inside, you must clean the tyres immediately and replace if it is damaged.



GoSkitz is a trademark owned by Go Easy Australia PTY LTD.
Copyright© 2013-2018 Go Easy Australia PTY LTD. All rights reserved. Skitz and GoSkitz logo designs are among the
registered trademark of Go Easy Australia and/or affiliated companies in Australia and selected foreign countries.

Product designed in Australia

Made in China

1/25 Westwood Drive, Ravenhall
Melbourne, Victoria 3023
Australia
www.goskitz.com.au