

OPERATING
INSTRUCTIONS:
DIGITAL WATCH



- FEATURES:**
- Hour/Minute/Second
 - Display light
 - Stop watch function
 - Alarm
 - Hourly chime
 - Stainless steel back and buckle
 - Day/Date
- Watch must not be used in water.
Do not use chemical solutions to clean the watch.
Use a clean dry cloth only.

Direct contact with sprays such as hairsprays, perfumes may cause damage to your watch
Leather straps and PU straps deteriorate at different rates depending on climatic conditions, sweat acidity and levels of wear and tear
Battery type: Please refer to the case back for the battery information
For battery replacements contact your local watch repairer.
Exhausted batteries should be removed and safely discarded

SETTING THE WATCH:
In normal display settings
-Press "MODE" 3 times to display "second" settings
-Press "START" to set second.
-Press "RESET" 1 time to display "minute" settings.
"minute" settings.
Press "START" to set minute.

SETTING THE HOUR:
Press "RESET" 1 time to display "hour" settings.
Press "START" to set hour.
SETTING THE DAY OF THE WEEK:
Press "RESET" 1 time to display "day" settings
Press "START" to set day of the week.
SETTING THE MONTH:
Press "RESET" 1 time to display "month" settings.
Press "START" to set month.

WARNING!



Button cell batteries can cause serious injury or death if swallowed.
Dispose of safely!
Store batteries out of reach of children!

Visit TheBatteryControlled.com.au

"START" button to either activate or de-activate.
Release both buttons to save.
Depending on the model, either the "ALM" (alarm) and "CHI" (hourly chime) will be displayed OR a bell symbol will be displayed.

DAY/DATE DISPLAY:
-In the normal time display mode, press and hold "START" to see the date and month.
-Release the "START" button and the display will return to normal time display.

ALARM SETTING:
-In normal display setting, press "MODE" twice for the hour setting
-Press "START" to set hour
-Press "RESET" once for the minute setting
-Press "START" to set minute
Press "MODE" once to store settings.

ACTIVATING THE HOURLY CHIME & ALARM CHIME:
In the normal display mode, press and hold the "RESET" button.
While the "RESET" button is pressed, also press the

SETTING THE DATE:
Press "RESET" 1 time to display week settings.
Press "START" to set date.
Press "MODE" once to store settings.

STOPWATCH SETTING:
-Press "MODE" once to display stopwatch setting.
-Press "START" once to start
-Press "START" to pause
-Press "RESET" to reset.