 


anko

Bluetooth Wireless Charger Clock Radio

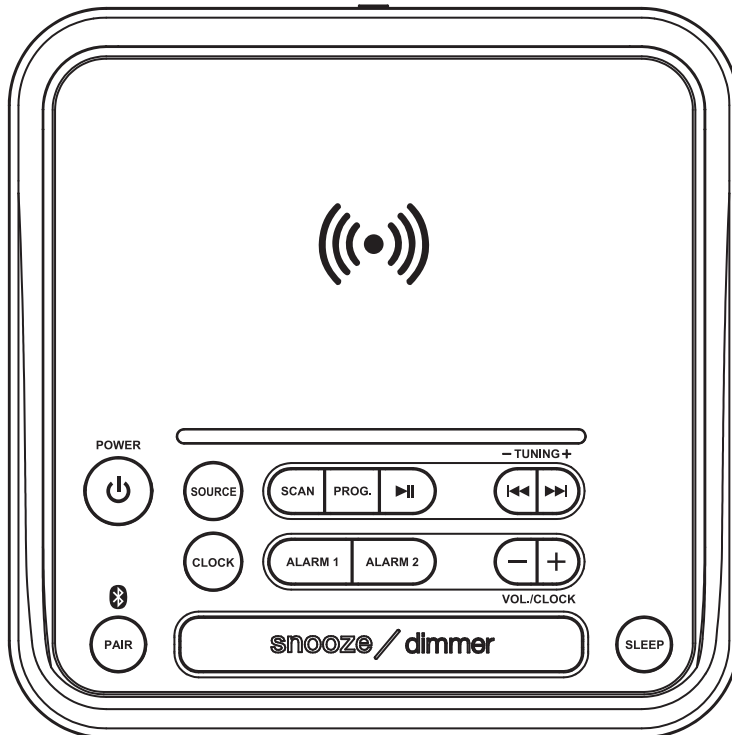

 
MODEL:42706687

PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT
KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

- Please read this instruction manual thoroughly before using this appliance! Follow all the safety instructions to avoid damage caused by improper use.
- Keep the instruction manual for future reference. Should this appliance be given to a third party,
- This appliance is intended for household use only.
- Only use this appliance indoors.
- **Danger of electroshock!** Do not immerse the appliance, power cord or power plug in water or in other liquids.
- Do not place the appliance in the direct vicinity of liquids - e.g. bathtubs and sinks, in a damp basement or close to a swimming pool.
- Do not start up the appliance with damp hands or if you are standing on a wet floor. Never grasp
- The manufacturer assumes no liability for possible damages that may have been caused by incorrect usage or mishandling of the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Keep the appliance away from all hot surfaces and naked flames.
- Do not place any objects on the appliance. Don't put objects with naked flames (such as candles) on or next to the appliance.
- The appliance shall not be exposed to dripping or splashing and no object filled with liquids, such as vases, shall be placed on the appliance.
- Do not expose the appliance to direct sunlight.
- Do not use the appliance if it is damaged. To avoid hazards, defective components must only be replaced by the manufacturer, his customer service or similar qualified persons.
- Do not dismantle and repair the appliance by yourself.
- Do not insert any foreign objects into the housing.
- Do not cover the appliance while in use.
- This appliance should be only operated with the type of power source indicated on the marking label. The marketing label is located at the bottom enclosure of the appliance.
- Always turn the power off before plugging the appliance into the power outlet or unplugging it.
- Prevent damage to the power cord by not squeezing, bending or rubbing it on sharp edges. Keep the cord away from hot surfaces and open flames.
- Always pull the plug, not the power cord when disconnecting the appliance from a power outlet.
- Plug the appliance into an easily accessible socket, so that you can disconnect it quickly from the mains, in the event of an emergency. Unplug the appliance from the power socket to switch it off completely. Use the mains plug as a disconnecting appliance.
- If the appliance malfunctions due to electrostatic discharge or short-term overvoltage, disconnect it from the power supply and connect it once again.
- Unplug the appliance during lightning storms or when unused for a long period of time.
- **WARNING:** Only uses with accessories recommend or provided.
- **WARNING:** The battery (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or under the windshield.

PRODUCT OVERVIEW

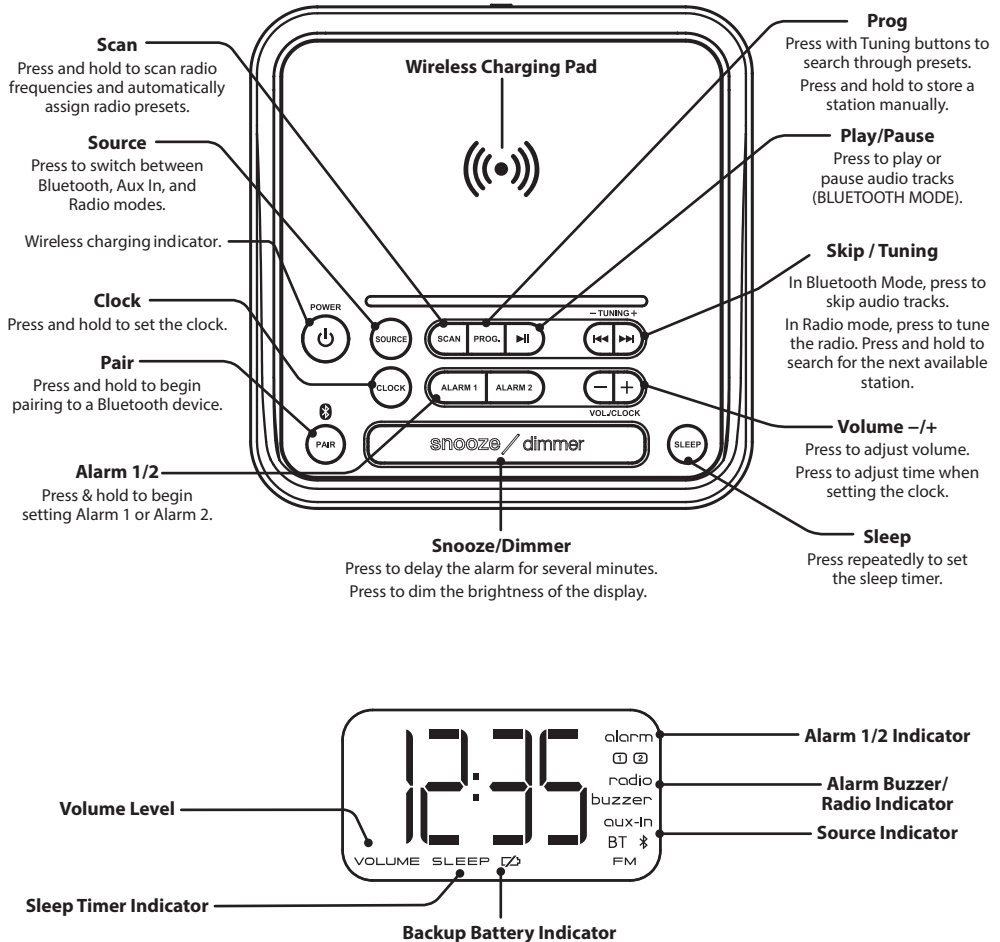

NOTE: After powering on the unit, if there is no any signal input or operation for about 20 minutes, the unit will enter standby mode.

WIRELESS CHARGING

 
Wireless/Fast Charging

Note : Use only included AC/DC power adapter. Unauthorized power adapters may cause damage or the wireless charger may malfunction.

Wireless/Fast charging is only compatible with supported devices and the included AC/DC power adapter.

On supported devices, if the "wireless charging" or "fast/rapid charging" feature is not active, you may need to enable it from your device's Settings, Power, or Battery menu. Consult the user manual for your specific device.


During charging, the power button will light red, when fully charged, the power button will be solid red (Note: if Samsung cellphone is fully charged, the power button will turn off).

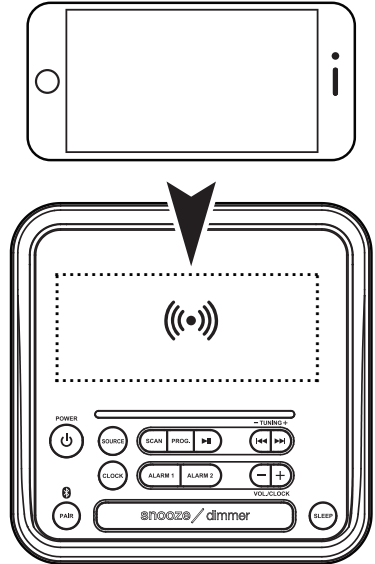

Cautions:

1. Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage.
2. Do not place too close with magnetic stripe or RFID card (ID card, credit cards, etc.) to avoid magnetic failure.
3. Please keep the distance at least 30cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the wireless charger, to avoid potential interference with the medical device.
4. Some phone case may affect the charging performance. Ensure there is no any metal object between your phone cases. The wireless charger will stop charging if any metal object detected. In case of this issue, remove the phone case before charging.
5. Do not place any metal object on the wireless charging pad. e.g. keys , metal clip.

 USB Charging Port

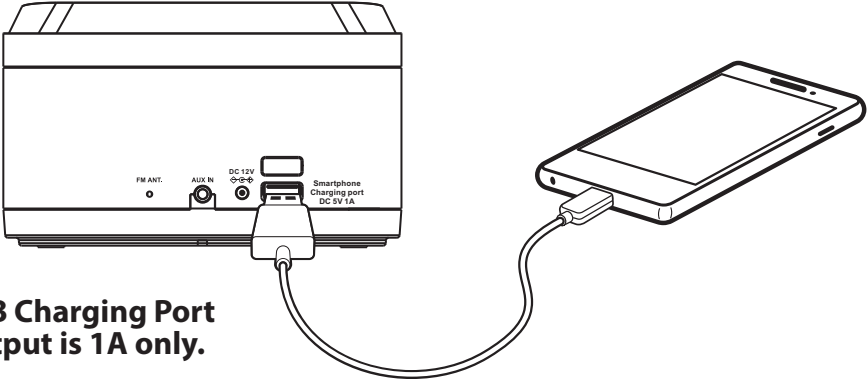


USB Charging Port Output is 1A only.


USB charging cable (not included)

POWER

 Plug the AC adapter into a standard power outlet.

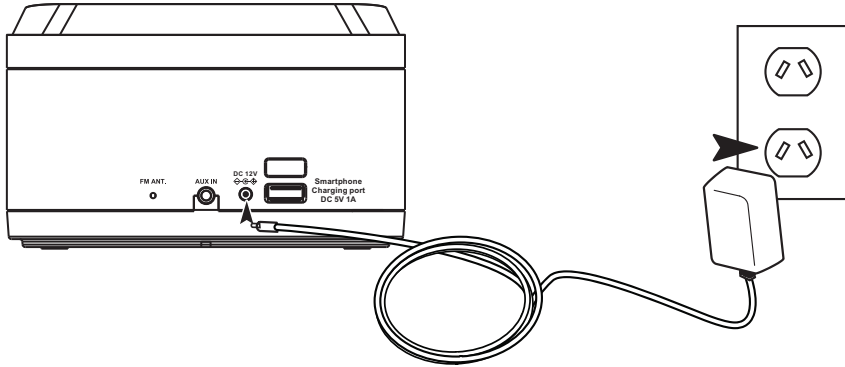

 Requires 2 AAA, 1.5V batteries (not included). For clock backup.

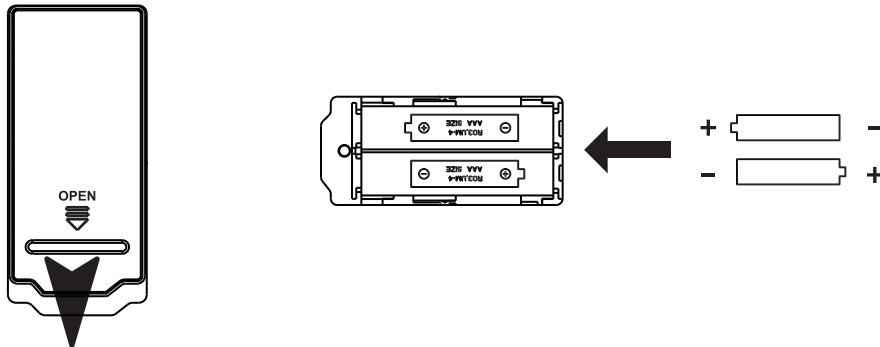

BATTERY PRECAUTIONS



Follow these precautions when using batteries in this device:

1. Warning – Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
2. Use only the size and type of batteries specified.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. A reversed battery may cause damage to the device.
4. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
5. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
6. Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)
7. Remove batteries promptly if consumed.
8. Clean the battery contacts and also those of the device prior to battery installation.

BLUETOOTH OPERATION

Pairing to a Bluetooth Device and Playing Audio

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or if any pairing issues should occur, remove the unit from your Bluetooth settings and follow these steps again.

1. Press the **Source** button to switch to **Bluetooth mode**. Press and hold the **Pair** button, the **BT**  symbol on the display will begin flashing and a voice prompt will sound from the speaker. *When pairing, remain within 3 feet of the unit.*
2. Using the controls on your Bluetooth device, select **42706687** from your Bluetooth settings to pair. When successfully paired, the **BT**  symbol on the display will turn solid and a voice prompt will sound. *You can refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
3. Audio played through the connected Bluetooth device should now be heard through the speakers. Use the controls on the connected Bluetooth device to select and begin playing audio. Play, pause or skip audio using the controls on the device or the unit.

CLOCK

Setting the Clock

1. With the unit OFF, press and hold the **Clock** button until the hour begins flashing.
2. Press the **Volume +/-** buttons to adjust the hour. *Note the AM/PM indicators on the display.*
3. Press the **Clock** button to proceed.
4. Press the **Volume +/-** buttons to adjust the minute.
5. Press the **Clock** button to finish setting the time.

ALARM AND SLEEP TIMER

Setting the Alarm

1. With the unit OFF, press and hold the **Alarm 1** button until the Hour begins flashing.
2. Press the **Volume +/-** buttons to adjust the hour. *Note the AM/PM indicators on the display.*
3. Press the **Alarm 1** button.
4. Press the **Volume +/-** buttons to adjust the minute.
5. Press the **Alarm 1** button.
6. Press the **Volume +/-** buttons to set the alarm for Radio or Buzzer.
7. Press the **Alarm 1** button.
8. Press the **Volume +/-** buttons to set the volume level for the alarm.
9. Press the **Alarm 1** button to finish setting the alarm time. Once the set alarm time is reached, the alarm will sound.
10. **To set Alarm 2, follow the above steps using the Alarm 2 button.**

Snooze and Alarm Reset

After the alarm sounds:

- Press the **Snooze** button to delay the alarm for several minutes.
- Press the **Power** button to turn the alarm off until the set alarm time is reached again.

Disabling the Alarm

Press the **Alarm 1** or **Alarm 2** buttons to turn the alarm ON or OFF. Note the indicator in the display.

Setting the Sleep Timer

1. Press the **Sleep** button to set the sleep timer (90, 80, 70, 60... min or OFF).
2. Once the set sleep time has expired the clock radio will automatically power off.

FM RADIO

Tuning the FM Radio

1. Press the **Power** button to turn the unit on.
2. Press the **Source** button to switch to **Radio mode**, then press the **Tuning +/-** buttons to select the desired frequency, or press and hold to quickly scan the frequencies.


Saving Radio Presets

1. Press and hold the **Scan** button to automatically scan and set radio presets.
2. To manually set a preset, tune to the desired frequency (see above steps).
3. Press and hold the **Prog** button. The display will begin flashing a preset. *Ex: "P01"*.
4. Press the **Tuning +/-** buttons to select the preset to be saved. (*P01 to P20*).
5. Press the **Prog** button to save that preset.
6. To cycle through presets, press the **Prog** button, then the **Tuning +/-** buttons to select.

AUX IN

Requires a 3.5mm audio cable (not included).

 1. With the unit powered ON, connect a 3.5mm audio cable to the **Aux In** on the rear of the unit and the **audio output** on an audio device.
2. Press the **Source** button to select Aux-In Mode. Use the controls on the connected device to play your audio through the unit.

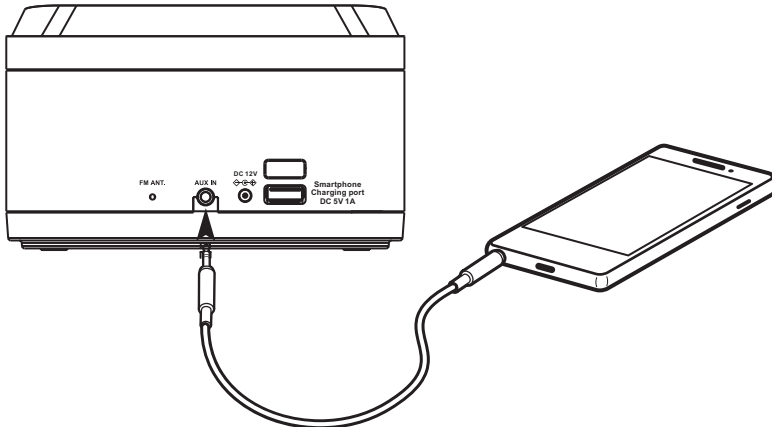

TROUBLESHOOTING

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	The adapter is not plugged or AC outlet is not switched on.	Connect the adapter to the AC outlet and switch on the outlet.
No sound or sound weak	Volume level in minimum position	Raise the volume level by pressing the + Button on the unit
	Volume level of paired/connected device is in low level	Raise the volume level of the paired/connected device
	Input source incorrect	Press the SOURCE button on the unit to switch to desired mode
Sound distortion	Volume level too high	Reduce the volume level by pressing the - Button on the unit
	Volume level of the connected/paired device too high	Reduce the volume level of the connected/paired device
Bluetooth not functioning	The Bluetooth device had not pair with the unit	Pair the Bluetooth device with the unit
	The external Bluetooth device too far from the unit	Place the external Bluetooth device close to the unit
Weak radio reception		Extend the FM antenna wire on the rear of the unit and replace it to get better reception

SPECIFICATIONS

Power source	DC 12V  1500mA 
Bluetooth Version:	4.1
Bluetooth Working Range:	About 10m in open area
Audio Output:	2 x 2 W
Wireless Charging Output:	Up to 10W

PACKAGE INCLUDES

- 1 X Main Unit
- 1 X User Manual
- 1 X AC/DC Adapter

WARRANTY CARD

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.