

**#14592**

**Rechargeable Air Pump**

**KC 42721369**



**Owner's Manual**

303021196456



## OPERATION INSTRUCTIONS

- NOTICE:** READ CAREFULLY BEFORE OPERATING AND SAVE THESE INSTRUCTIONS.  
NOTE: The pump must be charged for 8 hours to be fully-charged.  
THIS PUMP MUST TO BE FULLY CHARGED AND DISCHARGED FOR 3 TIMES IN THE FIRST USE TO ACTIVATE THE BATTERIES.
- CAUTION:** TO AVOID THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THE PUMP TO WATER OR RAIN. KEEP THE PUMP DRY. FOR HOUSEHOLD USE ONLY. THE AIR PUMP CAN ONLY BE USED WITH PROVIDED CHARGER OR CAR CHARGER.

Technical Specifications:

Rechargeable battery: 1.2Vx5 cells, Ni-MH, 1500mAh

### **WARNING:**

- 1.** The batteries cannot be removed or replaced.
- 2.** To avoid the risk of electric shock do not use damaged power cords. Damaged power cords should be discarded. If the output wire of cigarette lighter connector is damaged or fuse link is broken, it should be replaced by a qualified electrician.
- 3.** Motor run time should not exceed 5 minutes. Allow to cool for 15 minutes between uses.
- 4.** When the power of batteries in the air pump is not adequate to drive the motor, please recharge the batteries immediately.
- 5.** Children are strictly prohibited from operating the pump.
- 6.** Keep inflation and deflation ports free from debris during use.
- 7.** Never leave the pump unattended while the pump is in use.
- 8.** The appliance must be stored in a dry location and make sure the switch is off.
- 9.** This appliance is not intended for use by persons( including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 10.** The appliance is only to be used with the power supply unit provided with the appliance.
- 11.** The appliance must only be supplied at safety extra low voltage.
- 12.** The battery must be removed from the appliance before it is scrapped.

- 13.** The appliance must be disconnected from the supply mains when removing the battery.
- 14.** This appliance contains battery that is non-replaceable.
- 15.** The battery is to be disposed of safely.
- 16.** **WARNING:** For the purpose of recharging the battery, only use the detachable supply unit provided with this appliance.
- 17.** Use only with RSS1002-020078-W2A supply unit when charged by the Battery Charger.  
Use only with RSS1002-020078 supply unit when charged by Cigarette Lighter Connector.

**NOTE 1:** Not all air valves can be deflated; some one-way valves require manual deflation.

**NOTE 2:** Some items have a special air-tight inner safety valve, which prevent air loss. We recommend these items be deflated by simply unscrewing the valve to deflate.

### **End of Product Life Battery disposal:**

If the air pump is to be disposed of the batteries should be removed.

The battery is to be disposed safely.

Used batteries should be taken to a recycling station and not disposed of with household waste.

To remove the batteries, please proceed according to the following instructions:

**IMPORTANT:** Always fully discharge the batteries before removal and ensure the charger is unplugged.

- 1.Run the air pump until batteries are completely empty.
- 2.Remove the screws in the main body to open the air pump
- 3.Disconnect the cables
- 4.Remove the batteries from the housing

**Note:** Contact your local council waste disposal service for proper disposal facilities available for your area when disposing the appliance and the batteries.

CHARGE

