

# Product Manual

Single Colour printed (BLACK)

100gsm paper

## CHANGE LOG CREST INTERNAL USE ONLY

v9: Changes to text on page 3

### 12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at [kmart.com.au](http://kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

**WARNING** › Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. Do not handle your device with wet hands.

anko

# Bluetooth® Speaker Operating instructions




includes:

- › Bluetooth speaker
- › Charging cable (micro USB cable)
- › Audio cable (3.5mm AUX cable)



42-750-444

## Function overview:

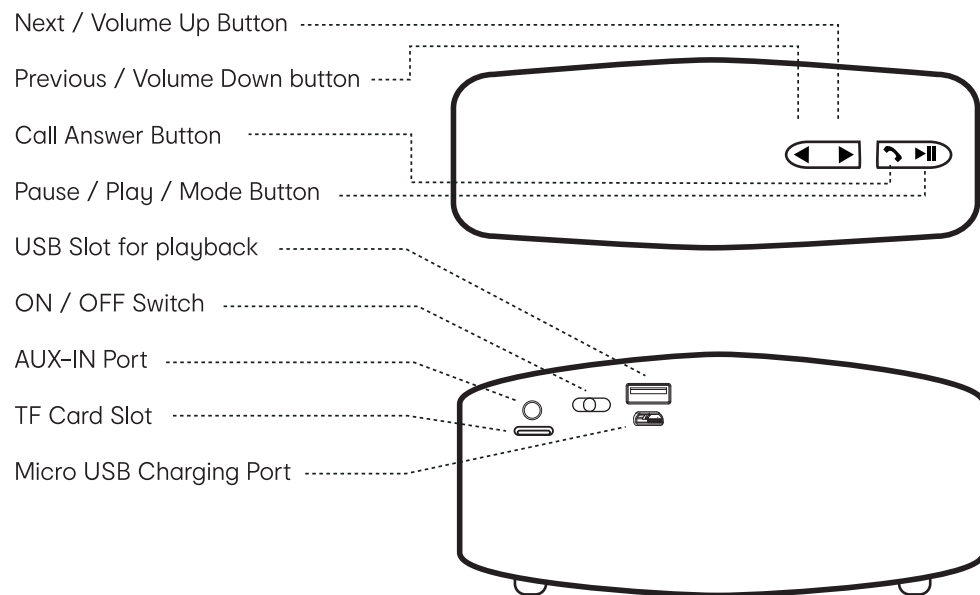

## How to use this speaker:

### Function Operation

**Pause** Press ►|| button

**Play** Press ►|| button

**Answer Call** Press ☞ button

**End Call** Press ☞ button

**Next Song** Short press ► button

**Previous Song** Short press ◀ button

### Safety instructions:

1. Device may become warm while charging.
2. Do not press the buttons too hard as it could damage the product.
3. Only use a dry cloth to keep product clean from dust.

**Volume Up** Long press ► button – when the volume is adjusted to maximum you will hear a voice indication tone

**Volume Down** Long press ◀ button

**Power OFF** Slide switch to OFF

**Power ON** Slide switch to ON

4. Do not use chemicals on this product.
5. Avoid dropping the product, as harsh impacts could damage the product.

### Pairing the Speaker with Bluetooth devices

- › Slide the On/Off Switch to on. The Blue indicator LED will flash rapidly, indicating they are ready to pair with a Bluetooth device.
- › In the Bluetooth menu on the media device search for the Speaker's Bluetooth name: "KM42750444". If prompted type the password: "0000" or "1234" to successfully connect to the Speaker.
- › Once the Speaker is successfully paired and connected, the LEDs will flash slowly and you can now play music through the Speaker.

### Phone calls

When there is an incoming call, the unit will pause the playback and ring to alert you of the call. To answer the call, press the phone button. To end a call, press the phone button again. On completion of the call the speaker will automatically recommence playback.

### AUX function

Use the 3.5mm AUX-IN cable to connect your media device through the AUX-IN port. When the AUX cable is connected you can now play music through the Speaker.

### USB play

Play music from a USB flashdrive by inserting the USB into the USB port. Supports MP3 format files. Press the play button to start playback.

### TF Card Play

Play music from a TF Card by inserting the card into the TF card port. Press the play button to start playback.

### Battery charging

This Bluetooth Speaker is powered by a rechargeable Li-ion battery. Please use the micro USB cable to recharge the battery. Plug the micro USB end of the cable into the USB port on the unit and the USB A end into a PC USB port, wall charger or other 5V charging device.

## Specifications:

**Model No:**  
42750444

**Version:**  
V5.0 Multimedia hi-fi Bluetooth chipset

**Working Distance:**  
10 Meters

**Output:**  
3W Speaker

**Music Time:**  
>6 Hours

**Talk time:**  
>6 Hours

**Standby time:**  
>100 Hours

**Charging voltage:**  
5V d.c.

**Charge time:**  
1.5 Hours

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.

