

# anko

## Bluetooth® Selfie Stick Tripod with Remote

Keycode: 42750505

### Instruction Manual



## Safety Instructions:

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.

- ▶ Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- ▶ Keep the device away from all hot surfaces and naked flames.
- ▶ Do not immerse the device in water or in other liquids.
- ▶ Do not use the device in wet conditions.
- ▶ Do not use the tripod in windy conditions or on an uneven surface.
- ▶ Do not use the device if it is damaged.
- ▶ Only use the included charging cable to charge the remote control.
- ▶ This device is not a toy. Children should be supervised to ensure they do not play with the device.

## Before first use:

1. Unpack the device and check if all parts are there and undamaged. Should this not be the case, return the product to Kmart for replacement.
2. **Danger of suffocation!** Keep all packaging materials away from children.
3. Remove all protective foils and packaging material prior to use.

## Charging the remote control

The remote control is powered via an integrated rechargeable battery. The battery cannot be removed or replaced.

The remote control must be turned off to recharge.

1. Connect the charging cable (included with delivery) with the Micro plug to the USB port on the side of the remote and the USB plug to a suitable USB port on your computer.
2. The blue LED lights up and switches off when fully charged.

## Parts:



phone holder with width/length adjustment screw



telescopic rod

mount with hinge screw



remote control compartment

mini tripod

remote control

## REMOTE CONTROL



USB charging cable (not pictured)

## **Bluetooth connection**

If you have used Bluetooth connection before, as soon as you switch on the remote control, the system will start searching for the device last connected. When the device is found, it will re-connect automatically. If you want to switch between devices, you have to turn off Bluetooth on the device last connected.

NOTE: Only one Bluetooth device can be connected to the remote control at one time.

## **First Bluetooth connection**

1. Push the ON/OFF switch of the remote control to position ON. The blue LED starts blinking.
2. Turn on Bluetooth on your smart phone. Refer to its user manual for instructions on pairing and connecting Bluetooth devices.
3. Select "KM42750505" from the device list.
4. The blue LED turn off when the device is connected.
5. If you loose connection, press any remote control button to reconnect.

## **Use**

1. Turn on your smartphone, make sure the Bluetooth connection is established and open your camera app.
2. Mount the phone holder on the selfie stick.
3. Adjust the width/length and place your smart phone in the phone holder. Carefully tighten the screw to provide a secure grip for your smartphone.
4. Loosen the hinge screw and set the tilt of the phone holder. Tighten the hinge screw again.
5. Extend the telescopic rod to the desired length.
6. Hold the stick or unfold the tripod to place it on a flat surface.
7. Press the shutter button to take a picture.
8. After use, slide the ON/OFF switch to OFF.

Please note: The selfie stick automatically switches to sleep mode and can be reactivated by pressing any remote control button.

## **+ / - button**

With some Android phones the +/- button can be used for zooming. This function must be supported by your phone.

## Care and maintenance

1. After use push the ON/OFF switch to OFF.
2. Wipe all parts with a dry soft cloth.

## Technical Data

Power supply:	Rechargeable battery
Input:	DC5V 100mA
Length:	Collapsed: 20.5cm, extended: 58.5cm
Maximum load:	220g