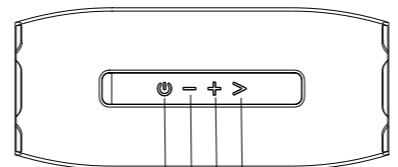 
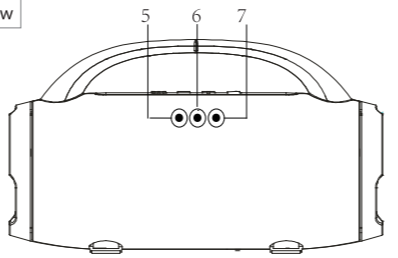 
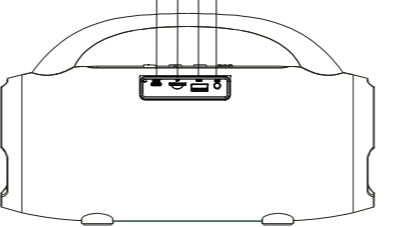 
 

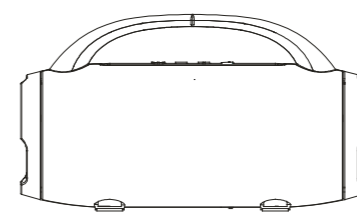 


<p style="text-align: center;">1</p> <h3>Before You Begin...</h3> <p><b>CAUTION</b></p> <ul style="list-style-type: none"> <li>THIS IS NOT A TOY, Please keep away from children.</li> <li>Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.</li> <li>Keep away from water and extreme temperatures.</li> <li>Low power may cause poor Bluetooth connection or sound distortion.</li> <li>Do not overcharge the battery.</li> <li>Do not submerge in water.</li> <li>Do not open this product or attempt to repair the unit yourself should it not be working.</li> </ul> <p><b>In the Box</b></p> <ul style="list-style-type: none"> <li>Speaker (x1)</li> <li>AUX In Cable (x1)</li> <li>Micro-USB Charging Cable (x1)</li> <li>User's Manual (x1)</li> </ul> <p><b>Product Specification</b></p> <ul style="list-style-type: none"> <li>Bluetooth version: V 5.0</li> <li>Lithium battery: 4000 mAh</li> <li>Charging time: 4-5 hours</li> <li>Music playtime: up to 6 hours (volume @50%)</li> <li>Input: DC 5V 1.5A</li> <li>Output: DC 5V 500mA</li> </ul> <p><b>Product View</b></p> <ol style="list-style-type: none"> <li>Power / Mode</li> <li>Volume Down / Previous Track</li> <li>Volume Up / Next Track</li> <li>Play / Pause / Bluetooth</li> <li>LED Indicator- Green for AUX/TF/USB mode</li> <li>LED Indicator- Blue for Bluetooth mode</li> <li>LED Indicator- Red for Charging</li> <li>DC 5V Charging Port</li> <li>Micro SD Card Slot</li> <li>USB Input Port/Charging Out Port</li> <li>3.5 mm Auxiliary Input</li> </ol>	<p style="text-align: center;">2</p> <p>Top view</p>  <p>Front view</p>  <p>Back view</p> 	<p style="text-align: center;">3</p> <h3>Getting Started</h3> <p><b>Important Note on Outdoor Use</b> This speaker is IP65 rated dust and splash proof. This IP rating is only applicable when the silicone port cover is closed. Please make sure the cover is closed and secure before using in wet environments. Important: DO NOT submerge the speaker in water. If the speaker gets wet, dry it thoroughly before using it again.</p> <p><b>Charging the Speaker</b> Insert the small connector of the supplied micro-USB charging cable into the DC 5V charging port under the rubber cover on the back of the product. Insert the large connector into the USB port on a computer, a USB charging device, or a 5V USB adapter (not included). The Charging indicator will turn red while charging and off when fully charged. On low power, a tone will be heard indicating that the speaker should be recharged.</p> <p><b>Powering on/off</b> Press and hold the (⏻) button to turn on/off the speaker.</p> <p><b>Changing Modes</b> Press (⏻) button to switch input modes. Insert a USB flash drive, Micro SD card, or an aux cable, to have the corresponding modes available, otherwise, these modes will be skipped while changing modes.</p> <p><b>Bluetooth Pairing</b> 1. Turn on the speaker and select Bluetooth mode. A tone will be heard and the LED indicator will flash Blue quickly. 2. Enable the Bluetooth function and scan on your Bluetooth device, select K-Large on the available list. 3. After a successful pairing, a tone will be heard and the LED indicator will stop flashing. 4. You can press and hold the (⏸) button to unpair your current device and search for new devices.</p> <p>TIP: You can skip to Bluetooth mode by pressing and holding (⏸) button.</p>	<p style="text-align: center;">4</p> <p><b>Adjusting Volume</b> Volume can be adjusted by pressing the (+) and (-) buttons or the controls on your connected media-playing device.</p> <p><b>Adjusting Playback</b> Press the (⏸) button to pause or resume playback. Press and hold the (+) and (-) buttons to skip to previous and next track.</p> <p><b>Using Handsfree</b> When the unit is connected and paired to a Bluetooth-enabled device like a smartphone, the unit allows you to make or receive phone calls with its built-in microphone. Press (☎) to accept a call. To end a call press (⏸). To reject a call, press and hold (⏸) for 2 seconds.</p> <p><b>Using with a Wired Device</b> Plug one end of a 3.5mm auxiliary cable into the 3.5 mm AUX input under the rubber cover on the back of the speaker. Plug the other end into the headphone jack on your media-playing device. This will switch your bluetooth speaker to Aux in mode. The LED indicator will light green. If the speaker does not switch to USB mode automatically, press the (⏻) button repeatedly to select it.</p> <p><b>Using a Micro SD Card</b> Insert a micro SD (TF) card into the card slot under the rubber cover on the back of the speaker, with its label side facing up and this will switch your speaker to Card Player mode. The LED indicator will light green. If the speaker does not switch to Card Player mode automatically, press the (⏻) button repeatedly to select it.</p> <p>NOTE: Micro SD cards can only be inserted in one direction. If the card does NOT easily slide and "clip" into place, remove, turn it around, and re-insert into the slot.</p> <p><b>Using the USB Input</b> Insert your USB flash drive into the USB port under the rubber cover on the back of the speaker, and this will switch your speaker to USB mode. The LED indicator will light green.</p>
<p style="text-align: center;">5</p> <p>If the speaker does not automatically switch to USB Input Mode, press the (⏻) button repeatedly to select it.</p> <p><b>Charging External Mobile Devices</b> The built-in battery can charge mobile devices as a power bank. Turn on the speaker, connect the large end of the USB cable (supplied) to the USB port under the rubber cover on the back of the speaker, and connect the small end to your external device, this speaker will charge your device.</p> <p>NOTE: The supplied USB cable is not available for all external devices, depending on their connector types.</p> <p><b>Pair a Secondary Speaker via TWS</b> You can pair with a secondary speaker (not supplied) via TWS pairing technology to enjoy true wireless stereo sound. Before pairing, make sure the secondary speaker is of the same specifications and Bluetooth pairing ID, with Kmart keycode 42787273, 42807087, or 42807070 etc.</p> <ol style="list-style-type: none"> <li>Turn on both speakers.</li> <li>Press twice the (⏸) button on the top of either of the speakers. The pressed speaker will search for the other one to pair.</li> <li>A tone will sound after the two speakers are paired successfully. The LED indicators will light solid blue. The paired two speakers will then work as one stereo speaker system, with the pressed one as host speaker for left channel, the other for right channel.</li> </ol>  <ol style="list-style-type: none"> <li>Connect the host speaker to a Bluetooth device by following the instructions on Bluetooth Pairing, to enjoy true wireless stereo sound.</li> <li>Press twice the (⏸) button on the top of either of the speakers to unpair them. Both the speakers will go back to Bluetooth mode with LED indicators flashing blue.</li> </ol>	<p style="text-align: center;">6</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>TWS pairing function is available only in Bluetooth mode.</li> <li>TWS pairing needs both speakers powered on.</li> <li>Make sure neither of the speakers is connected to a Bluetooth device before pairing.</li> <li>The paired speakers will pair automatically next time when both of them are turned on. (This resume pairing function may not be available in case they have previously connected to an iPhone with iOS system version exceeding 12.2, connecting to a Bluetooth device with other operation system will resolve).</li> </ul> <p><b>Troubleshooting</b></p> <p><b>Unable to power on:</b></p> <ul style="list-style-type: none"> <li>Check that battery is not too low or discharged completely.</li> </ul> <p><b>Unable to pair with a Bluetooth device:</b></p> <ul style="list-style-type: none"> <li>Check that you are in Bluetooth mode.</li> <li>Ensure that you are within range of the Bluetooth speaker for Bluetooth functionality, 10 metres or less (33 feet or less).</li> <li>Move the Bluetooth speaker and Bluetooth device away from other Bluetooth devices/electrical equipment.</li> <li>If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.</li> </ul> <p><b>No sound / Sound distortion:</b></p> <ul style="list-style-type: none"> <li>Adjust the volume.</li> <li>If you are using a Bluetooth connected device, check the volume on the secondary device and on your Bluetooth speaker.</li> <li>Your Bluetooth speaker may need to be recharged.</li> </ul> <p><b>Unable to play TF card/USB flash drive:</b></p> <ul style="list-style-type: none"> <li>Check that card/USB is formatted in FAT32, not NTFS.</li> <li>Check that your card/USB capacity does not exceed 32 GB.</li> <li>Check that your audio files are in MP3/WMA formats. (Not all formats are supported by the speaker).</li> </ul>	<p style="text-align: center;">7</p> <h3>12 Month Warranty</h3> <p>Thank you for your purchase from Kmart.</p> <p>Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.</p> <p>Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.</p> <p>Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.</p> <p>Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.</p> <p>For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.</p>	<p style="text-align: center;">8</p> <div style="text-align: center;">  <p><b>USER'S MANUAL</b></p>  </div> <p><b>Bluetooth Speaker</b></p> <p>Keycode: 42787273 42807087 42807070 42829690</p> <p style="text-align: center;">PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE</p>
<p style="font-size: 2em;">304mm</p>		<p style="font-size: 2em;">76.00 mm</p>	<p style="font-size: 2em;">127.00 mm</p>

要求：双面印刷  
尺寸：304mm\*127mm  
折叠方式：红色线为风琴折  
字体：按设计要求，不得改变  
材质：铜版纸  
排版：序号1印刷至序号8的背面，序号2印刷至序号7的背面，序号3印刷至序号6的背面，序号4印刷至序号5的背面