

 
Keycode: 42829317 IM and 12 month warranty

说明书用80克书写纸彩色双面印刷

diecut CMYK Size:290x180mm

正面

Connection Options:

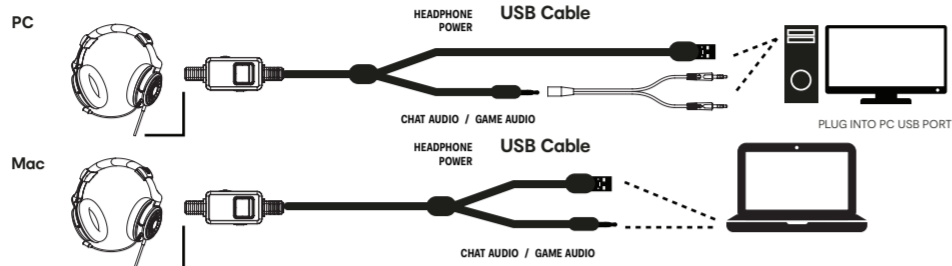

Switch "2" MIC to "ON", "1" to adjust the game volume.
 USB cable supplies power to the LED light on the headset earpads.
 Plug the 3.5mm cable into the Mac.
 Note: If your PC uses separate Green/Pink connectors for audio, you will need a PC adapter cable (3.5mm to 2X3.5mm Audio Cable).

12 Month Warranty

Thank you for your purchase from Kmart.
 Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
 Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.
 Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at kmart.com.au for any difficulties with your product.
 Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.
 Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
 For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING ● Do not dispose of unit in fire or water. ● Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. ● Keep your device and all accessories out of the reach of children and animals. Small parts may cause choking or serious injury if swallowed. ● Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). ● Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. ● Do not allow your device to get wet—liquids can cause serious damage. Do not handle your device with wet hands.

Xbox are registered trademarks of Microsoft Corporation.
 PS4 are registered trademarks of Sony Computer Entertainment, Inc.

anko

Gaming Headset With Detachable Mic For Xbox One, PS4, PC & Mac

Operation Instructions

- Includes:
 > Gaming Headset
 > PC adapter cable (3.5mm to 2X3.5mm Audio Cable)



Keycode: 42829317

说明书用80克书写纸彩色双面印刷

diecut CMYK Size:290x180mm

背面

Product Overview:

1. Gaming headset
2. LED light on earpads
3. Microphone jack
4. Detachable microphone

Specifications:

 
Model No.: 42829317
 Driver: 40mm
 Impedance: 32 Ohm
 Sensitivity: 95±3dB
 Frequency Response: 20Hz - 20kHz
 Cable Length: 2.3m
 Headset Cable Plug: USB plug + Single 3.5mm stereo plug



Cable Included:
 PC adapter cable (3.5mm to 2X3.5mm Audio Cable)

Inline Audio Controller:


1. Volume Control +/-
2. MIC ON/OFF Button
 MIC ON: Push the MIC button to the middle position of the audio controller.
 MIC OFF: Push the MIC button to the edge position of the audio controller.
3. Answer Call Button

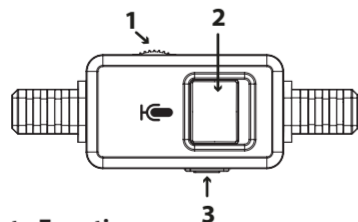


Call Remote Functions

To	Press the Answer Call Button
Phone Calls	
Answer a call	Once
End a call	Once
Reject a call	Hold 2 seconds then release.

 - Not all functions are available, depending on your operating system.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using earphones, especially for extended periods of time.
- When the microphone is muted, the hand free function will also disable.

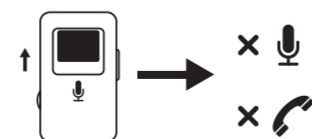


Connection Options:

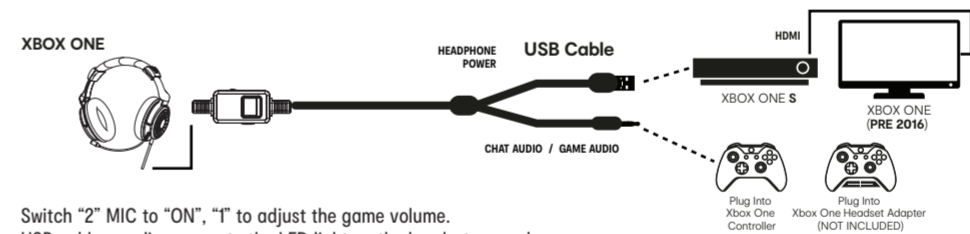 

Switch "2" MIC to "ON", "1" to adjust the game volume.
 USB cable supplies power to the LED light on the headset earpads.
 Insert the 3.5mm plug of the headset into the bottom of the Xbox One controller with 3.5mm jack.
 Note: Adapter required for Xbox One controllers with no 3.5mm port.
 (Adapter sold separately, and do not included in this gaming headset's package).

 - Volume setup:**
1. Press the Xbox Button on your controller
 2. Go to the **System tab**
 3. Select **Audio**
 4. Set Headset Volume to maximum
 5. Slowly control the inline volume control to a comfortable level

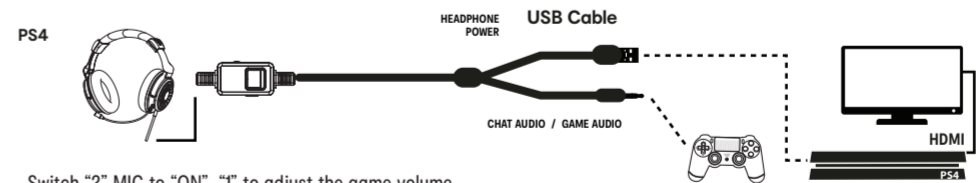

Switch "2" MIC to "ON", "1" to adjust the game volume.
 USB cable supplies power to the LED light on the headset earpads.
 Plug the 3.5mm cable into PS4 controller.

- PS4 Setup:**
1. Go to **Settings >> Devices >> Audio Devices**
 2. Set **Input & Output Device** to Headset Connected to Controller
 3. Set **Output to Headphones** to **All Audio**
 4. Set **Volume Control (Headphones)** level to maximum
 5. Select **adjust microphone level** and follow the on-screen instructions to calibrate your microphone

- On the headphones, LED will not light up since the USB cable do not connect with the Xbox One/PS4 devices and has not enough power to support.
- Only the 3.5mm cable connect into the Xbox One/PS4 controller, this gaming headset will be working too, but the LED will not light up.