

SG-1705说明书

指令单号	采购单号	客户代码	客户订单号	产品/物料代码	产品条码	品牌	客户型号	工厂型号	颜色	订单数量
		AU121		42829560	9341106928487	ANKO	SG-1705	CR20		

说明书从下页开始

基本 要求	尺寸:	120x90mm	其它 要求				
	材质:	铜纸板					
	颜色:						
	字体:	按设计					
	数量:						
	工艺:						
	位置:		审 批	制图	工程审核	业务审核	批准
				Bella			

90 mm

anko

ALARM CLOCK RADIO USER MANUAL



Table of Contents

Functions	2
Important Safeguards	2 - 3
Product View	3 - 4
Before First Use	5
Power Supply	5
Basic Operations	5
Settings	6 - 7
Radio Operation	8
Cleaning and Care	8
Technical Data	8
Warranty Card	9

42829560

120 mm

Dear Customer,

Thank you for choosing anko Alarm Clock Radio. For correct operation and maintenance of this appliance, please read this User Manual carefully. Please pay particular attention to the Safety section.

FUNCTIONS

- Clock
- Four Alarms
- Buzzer or Radio Alarm
- Snooze and Sleep Functions
- Radio: FM: 87.5 –108 MHz / AM: 531 --1602 KHz,
- 40 Preset Stations (20 FM, 20 AM)
- Dimmer Control

IMPORTANT SAFEGUARDS


Please read this instruction manual thoroughly before using this appliance! Follow all the safety instructions to avoid damage caused by improper use.

- Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.
- Use this appliance solely for its intended purpose.
- This appliance is intended for household use only.
- Only use this appliance indoors.
- Danger of electroshock! Do not immerse the appliance, power cord or power plug in water or in other liquids.
- Do not place the appliance in the direct vicinity of liquids - e.g. bathtubs and sinks, in a damp basement or close to a swimming pool.
- Do not start up the appliance with damp hands or if you are standing on a wet floor.
- Never grasp the power plug with damp or wet hands.
- The manufacturer assumes no liability for possible damages that may have been caused by incorrect usage or mishandling of the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they don't play with the appliance.
- Keep the appliance away from all hot surfaces and naked flames.
- Do not place any objects on the appliance. Don't put objects with naked flames (such as candles) on or next to the appliance. Never put items containing liquid (such as vases) on or next to the appliance.
- Do not expose the appliance to direct sunlight.
- Do not use the appliance if it is damaged. To avoid hazards, defective components must


- only be replaced by the manufacturer, his customer service or similar qualified persons.
- Do not dismantle and repair the appliance by yourself.
 - Do not insert any foreign objects into the housing.
 - Do not cover the appliance while in use.
 - This appliance should be only operated with the type of power source indicated on the marking label.
 - Always turn the power off before plugging the supplied AC/DC adapter into the power outlet or unplugging it.
 - Prevent damage to the power cord by not squeezing, bending or rubbing it on sharp edges. Keep the cord away from hot surfaces and open flames.
 - Always pull the AC/DC adapter, not the power cord when disconnecting the appliance from a power outlet.
 - Plug the appliance into an easily accessible socket, so that you can disconnect it quickly from the mains, in the event of an emergency. Unplug the AC/DC adapter from the power socket to switch it off completely.
 - If the appliance malfunctions due to electrostatic discharge or short-term overvoltage, disconnect it from the power supply and connect it once again.
 - Unplug the appliance during lightning storms or when unused for a long period of time.

PRODUCT VIEW


Front View

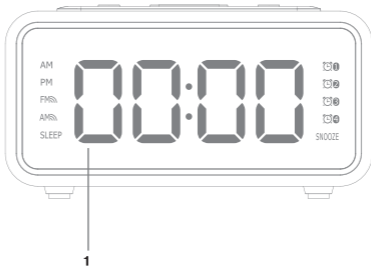

Top View

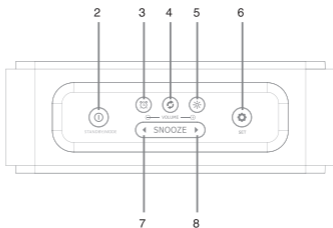

Rear View

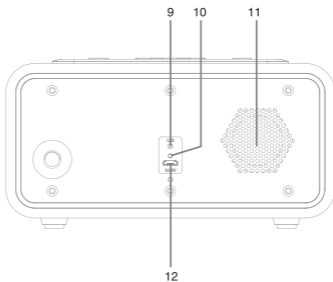 

- 1 LED display
- 2 Standby/Mode/Power On
- 3 ALARM ON/OFF
- 4 SHIFT button
- 5 DIMMER button
- 6 SET button

- 7 VOL- / ALARM- / TUNE-
- 8 VOL+ / ALARM+ / TUNE+
- 9 LED light
- 10 RESET
- 11 Speaker
- 12 Micro-USB power input

BEFORE FIRST USE

- Unpack the appliance and check if all parts are there and undamaged. Should this not be the case, return the product to Kmart for replacement.
- Danger of suffocation! Keep all packaging materials away from children.
- Dispose of the packaging materials properly. Inform yourself at the local authorities regarding collection points or garbage separation.
- Remove all protective foils and packaging material prior to use.

POWER SUPPLY

1. Connect the AC/DC adapter with a suitable electrical outlet. Make sure that the power supply voltage is the same as needed for the AC/DC adapter.
2. Connect the micro-USB DC end of the AC/DC adapter with the DC 5V port (12), the LED light (9) will turn on (red).

BASIC OPERATIONS

Standby / Power on

- After connecting the power supply, the unit will be in Standby mode.
- To get into standby mode without disconnecting the AC/DC adapter, press and hold the Standby button (2) for two seconds. The LED display (1) will turn off in Standby mode.

Changing working modes

- Press Standby button (2) repeatedly to change working modes: Clock, Alarm, FM radio, or AM radio.

Display mode

- Press the Standby (1) button to switch the radio function on. The display will show the current radio frequency for five seconds and then the current time.

Dimmer control

- Press DIMMER button (5) to toggle the brightness level of display (1).

Volume control

- In FM/AM radio mode, press Shift (4) button to display the current volume, e.g. U22 (Vol 22), then press the VOL + (8) and VOL - (7) buttons to adjust the volume level.

Changing time display mode

- In Clock mode, press and hold SET (6) button for 2 seconds to toggle time display mode between 12-hour and 24-hour.

SETTINGS

Note: Press and hold the VOL + (8) and VOL - (7) buttons for fast-changing of settings.

Setting the Clock

(Applies in Clock mode only)

1. Press SET button (6), and the number of hour will flash.
2. Press the VOL + (8) and VOL - (7) buttons to change the setting of hour.
3. Press the SET button (6) to confirm the setting of hour, the number of minute will flash.
4. Press the VOL + (8) and VOL - (7) buttons to change the setting of minute.
5. Press the SET button (6) to confirm the clock time setting, or do not press any button for a few seconds, the hour / minute digits stop flashing and the set time shows in the display (1).

Note:

- The AM or PM will display when the time display mode is set as 12-hour.

Setting Alarms 1 to 4

1. Press Standby (2) button to switch to Alarm mode, 'ALA1' will display.
2. Press VOL + (8) and VOL - (7) buttons to select your desired alarm number 1-4 to set, it's current waking up mode settings will display, press VOL + (8) and VOL - (7) buttons to select one of the following options:
 - BEEP: Set buzzer as alarm bells, ringing for 1 minute;
 - Fn (FM radio): Set last radio station as alarm sound, lasting for 3 minutes;
 - OFF: Turn off the alarm.
3. Press SET (6) button to confirm the selection, and the number of hours will flash, prompting you to set it.
4. Press VOL + (8) and VOL - (7) buttons to set the hours of alarm time, then press SET (6) button to confirm the setting, and the number of minutes will flash, prompting you to set it.
5. Press VOL + (8) and VOL - (7) buttons to set the minutes of alarm time, then press SET (6) button to confirm and exit the settings.
6. The unit will then return to the clock time display after five seconds.

Note:

- The Alarm 1-4 logos will display when they are set as Beep or FM radio.

Waking up with Buzzer or Radio Sound

1. When the preset alarm time is reached, the alarm will sound in the selected mode.
2. To stop the alarm, press any button except SNOOZE. The alarm will sound again at the same time the next day.

Note:

- The beep alarm volume is fixed and cannot be adjusted.

Disabling Alarm Functions

1. Press Alarm On/Off (3) button to turn off **all** alarms, it **will** display "OFF" for several seconds, and **all** the alarm indicators **will** disappear.
2. Press Alarm On/Off (3) button again to resume your alarm settings, and it **will** display "ON" for several seconds, and the alarm indicators **will** display when they were previously set as "ON".

Snooze Function

1. When the alarm sounds, press the SNOOZE button (7 & 8) to stop the alarm temporarily. The Alarm indicator **will** flash, and the alarm **will** sound again after 5 minutes.
2. To cancel the SNOOZE function and repeat the alarm the next day, press any button except SNOOZE.

Sleep Function

This function **allows** you to program the unit so that the radio switches off automatically after a certain period of time (up to 120 minutes).

1. In AM/FM radio mode, press and hold SET button (6) repeatedly to select the period of time (in minute) after which the clock radio **will** turn off automatically. The SLEEP indicator **will** display.
2. When the preset sleep duration has elapsed, the radio turns off automatically.
3. To cancel the sleep function before the preset time elapses, press and hold the Standby (2) button to turn the radio off immediately.

RADIO OPERATION

Listening to the Radio

1. Press Standby (2) button to power on the clock radio, and press again to enter into AM or FM mode.
2. For automatic tuning, press and hold the TUNE + button (8) and TUNE - button (7) for two seconds. Release the button, the tuner will scan and stop for the first strong station. Repeat until the desired station is reached.
3. For manual fine-tuning, press the same buttons repeatedly to adjust the frequency step by step.

Achieving Optimum Reception

1. In FM mode, extend and position the wire FM antenna to achieve optimum reception.
2. In AM mode, rotate the unit to achieve optimum reception.

Preset Radio Stations

You can store up to 20 stations each for FM and AM.

1. Go to your desired station.
2. Press and hold the SET button (6) for two seconds, the program number will flash in the display. Press TUNE + button (8) and TUNE - button (7) to change the program number where you would like to store the station. Press and hold SET (6) again to confirm the setting.
3. Repeat steps 1-2 to store any other desired stations.

Listen to a Preset Station

1. When listening to the radio, press the SET (6) button repeatedly to select a preset radio station.

CLEANING AND CARE

Danger of electroshock! Do not immerse the appliance in water or in other liquids.

1. Always pull the plug and remove the battery before storage.
2. Wipe the housing with a dry, soft cloth.
3. Do not use petrol, alcohol or other abrasive cleaners to clean the device.

TECHNICAL DATA

Power: AC 100 V - 240 V ~ 50/60 Hz
DC 5V / 1A

Frequency range: AM 531 - 1602 kHz
FM 87.5 - 108 MHz

WARRANTY CARD

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.