

Manual and Warranty Folded 105 x 150mm

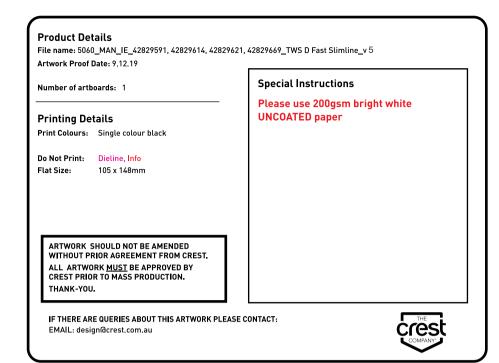

© The Crest Company 2019. All rights reserved.

CHANGE LOG CREST INTERNAL USE ONLY

FRONT

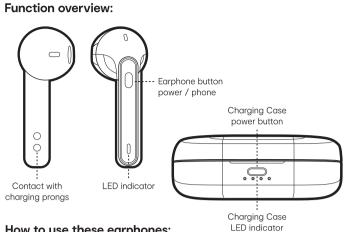

How to use these earphones:

Earphone Function Operation Power ON

Pause Press either ∩ button

Plau Press either ∩ button

Next Track Press and hold the right **1** button for 3 seconds

Previous Track Press and hold the left () button for 3 seconds

Answer Call

Press either **0** button

Reject Call Press and hold either **()** button

Press either **()** button

Press and hold **0** button (on each Earphone) for 3 seconds

Power OFF

Press and hold **0** button (on each Earphone) for 8 seconds

Activating Phone Assistant Press either **0** button 3 times in quick successions

Volume Up Press the right () button 2 times in quick successions

Volume Down Press the left 1 button 2 times in quick successions

Pairing the Earphones with Bluetooth® devices

- > Go to "Bluetooth" Settings on your Bluetooth device (phone, tablet, etc.).
- > Turn the Bluetooth ON, on your device.
- > Press the charging case power button, make sure the Earphones are in charaina status. Open the charaina case and remove the Earphones, they will automatically turn on (or they can be turned on manually). The LED indicators on the left and right Earphones will flash blue and red as they automatically sync to each other. Once synced the Earphones will enter pairing mode, which is identifiable by one Earphone LED going out while the other continues to flash Blue and Red.
- > On your Bluetooth Device, select the pairing name of your Earphones on the list of available devices.

White - KM42829591 Champagne - KM42829614

Blush - KM42829621

Black - KM42829669

The Earphone LED will stop flashing Blue and Red once

- You are now connected.
- (Trouble shooting tip: if the Earphones do not connect to your device, turn the Earphones OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process).
- > Your anko TWS Earphones will be synced together already when you first open the pack, however if they are ever disconnected please follow the below instructions to pair
- · Take out both earphones from the case (or turn on manually).
- Both Earphone's LED will flash blue and red.
- After 5-7 seconds, only one Earphone's LED will flash blue and red, which indicates that the Earphones have now been synced and is again ready to pair to your device.

Phone calls

If there is an incoming call on your Bluetooth device, the Earphones will pause any playback and ring to alert you of the call. To answer the call, press either Earphone button. To end a call, press either Earphone button again

Charging the Case

- > Connect the Micro USB charging cable into the socket on the Charging Case.
- > Plug the cable into a standard USB 5V/1A output.
- > The case LED indicator will flash Blue while the case is charging and will stay on when fully charged.
- > When fully charged, unplug the charging cable.

Warning: To avoid damage to the Charging Case, please only use a 5V/1A charger

Charging the Earphones

- > Put the Earphones into the Charging Case, ensuring that the charging prongs make full contact
- > The Earphone LED indicator will stay red while charging. When charging is complete the LED will turn off completely. (Before using the Earphones for the first time, we recommend you fully charge the battery. A full charge takes around 1 hour).
- In order to ensure the battery life, the Earphones and Charging Case should be charged normally once a month.

WARNING: The Earphones can be used with the provided

BACK

Specifications:

Model No:

42829591 White 42829614 Champagne, 42829621 Blush 42829669 Black

Version:

5.0 Bluetooth chipset

Support profiles: A2DP AVRCP HEP

Working distance:

Music time:

>3 Hours

Talk time:

>3 Hours Standby time: **Charging voltage:**

Battery capacity (Charging Case):

Charge time (Charging Case): 1.5 Hours

Battery capacity (Earphones): 2 x 25mAh

Charge time (Earphones): 1 Hour approx

Pairing window time:

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.

WARNING Do not dispose of unit in fire or water. > Never attempt to disassemble and assemble.) Waste electrical products should not be disposed of with household waste device. > Do not allow your device to get wet—liquids can cause serious damage. > Do not handle your device with wet hands.

please recycle where facilities exist. > Check with your local authority for recycle advice. > Keep your device and all accessories out of the reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warrantu. This warrantu will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

anko

True Wireless Earphones Operating instructions

includes:

- > true wireless earphones
- > charging case
- charging cable (micro USB cable)



42-829-591 42-829-614 42-829-621 42-829-669

Bluetooth name is KM42829591 Bluetooth name is KM42829614 Bluetooth name is KM42829621 **Bluetooth name is KM42829669**