 


品号 32280101300001

anko

Alarm Clock Wood

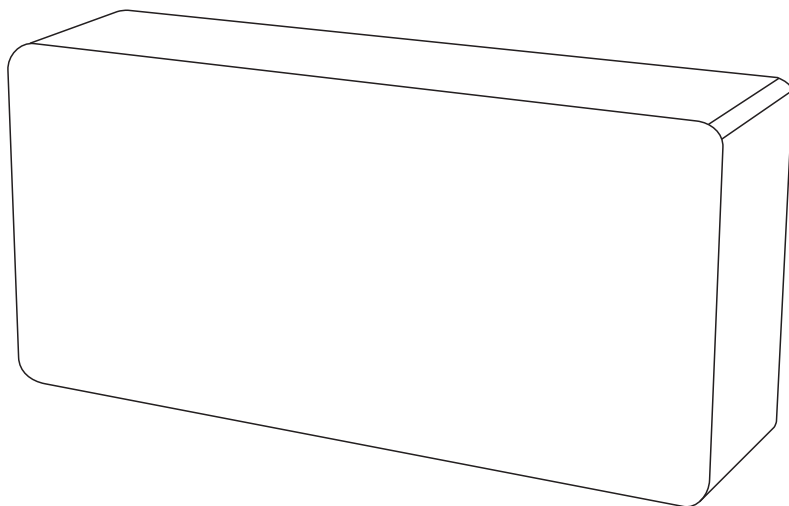

MODEL:42831983

 
PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT
KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS


- Please read this instruction manual thoroughly before using this appliance! Follow all the safety instructions to avoid damage caused by improper use.
- Keep the instruction manual for future reference. Should this appliance be given to a third party,
- This appliance is intended for household use only.
- Only use this appliance indoors.
- **Danger of electroshock!** Do not immerse the appliance, power cord or power plug in water or in other liquids.
- Do not place the appliance in the direct vicinity of liquids - e.g. bathtubs and sinks, in a damp basement or close to a swimming pool.
- Do not start up the appliance with damp hands or if you are standing on a wet floor. Never grasp
- The manufacturer assumes no liability for possible damages that may have been caused by incorrect usage or mishandling of the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Keep the appliance away from all hot surfaces and naked flames.
- Do not place any objects on the appliance. Don't put objects with naked flames (such as candles) on or next to the appliance.
- The appliance shall not be exposed to dripping or splashing and no object filled with liquids, such as vases, shall be placed on the appliance.
- Do not expose the appliance to direct sunlight.
- Do not use the appliance if it is damaged. To avoid hazards, defective components must only be replaced by the manufacturer, his customer service or similar qualified persons.
- Do not dismantle and repair the appliance by yourself.
- Do not insert any foreign objects into the housing.
- Do not cover the appliance while in use.
- This appliance should be only operated with the type of power source indicated on the marking label. The marketing label is located at the bottom enclosure of the appliance.
- Always turn the power off before plugging the appliance into the power outlet or unplugging it.
- Prevent damage to the power cord by not squeezing, bending or rubbing it on sharp edges. Keep the cord away from hot surfaces and open flames.
- Always pull the plug, not the power cord when disconnecting the appliance from a power outlet.
- Plug the appliance into an easily accessible socket, so that you can disconnect it quickly from the mains, in the event of an emergency. Unplug the appliance from the power socket to switch it off completely. Use the mains plug as a disconnecting appliance.
- If the appliance malfunctions due to electrostatic discharge or short-term overvoltage, disconnect it from the power supply and connect it once again.
- Unplug the appliance during lightning storms or when unused for a long period of time.
- **WARNING:** Only uses with accessories recommend or provided.
- **WARNING:** The battery (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or under the windshield.

PRODUCT OVERVIEW

DISPLAY

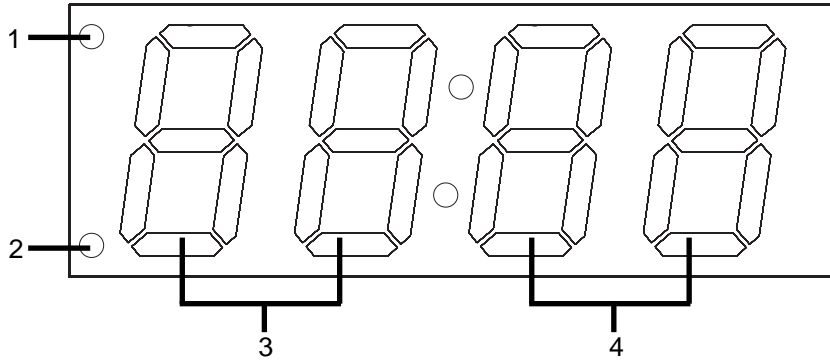


REAR PANEL

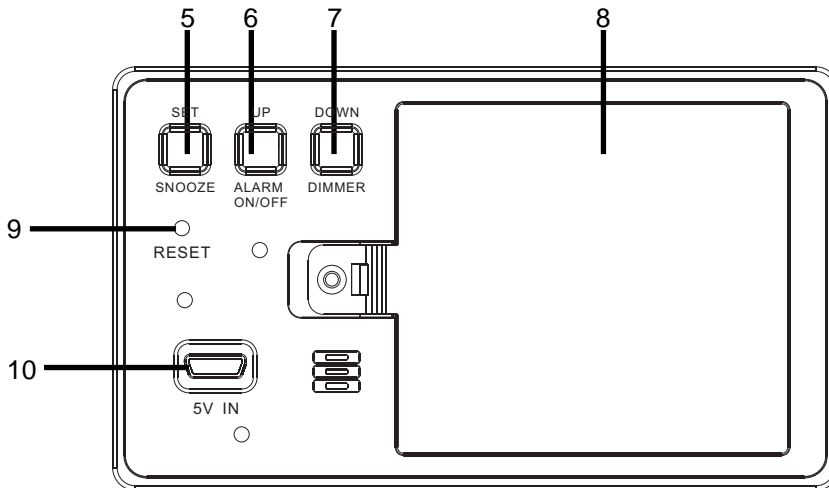 

- | | |
|----------------------|----------------------------|
| 1. PM Indicator | 6. UP, ALARM ON/OFF Button |
| 2. Alarm Indicator | 7. DOWN, DIMMER Button |
| 3. Hour Digit | 8. Battery Door |
| 4. Minute Digit | 9. RESET Hole |
| 5. SET/SNOOZE Button | 10. 5V IN Jack |


POWER SOURCE

 1. Connect the DC IN Plug to the DC IN Jack on the unit.
2. Connect the full sized USB Plug to the USB Charger.
(USB Charger NOT supplied)
3. The clock display will light up.

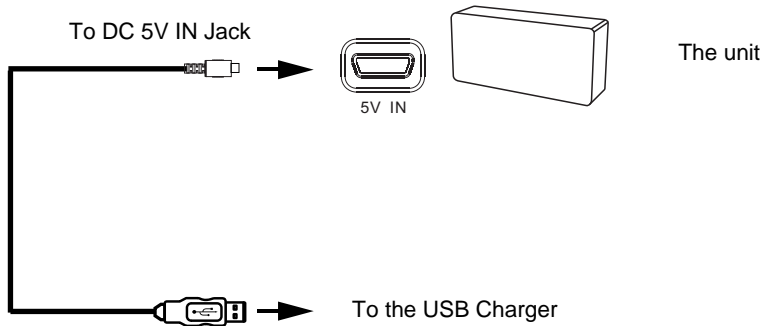

BATTERY INSTALLATION

 1. Drive out the screw on the battery door with a screwdriver and lift up.
2. Put 4xAAA, 1.5V batteries(not included) into battery compartment as indicated.
3. Close up the battery door.

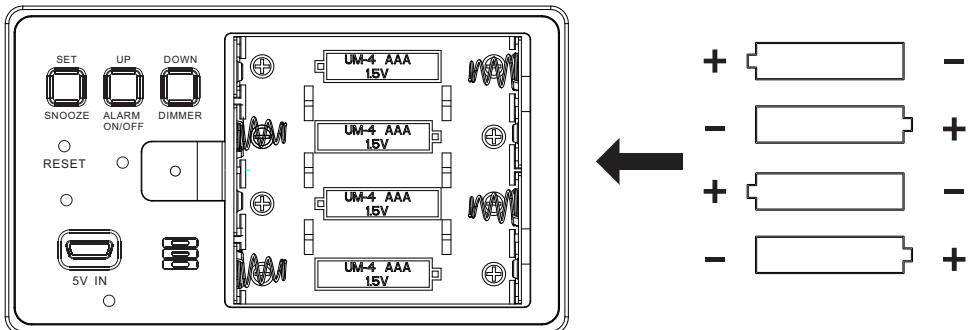

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Warning-Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
2. Use only the size and type of batteries specified.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. A reversed battery may cause damage to the device.
4. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
5. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
6. Do not try to recharge a battery not intended to be charged; it can overheat and rupture. (Follow battery manufacturer's directions.)
7. Remove batteries promptly if consumed.
8. Clean the battery contacts and also those of device prior to battery installation.

OPERATIONS

1. Using USB cable to connect the unit to the wall outlet, or put 4xAAA batteries into the battery compartment to power on the unit. The clock display on front panel will light up.
2. Press the DIMMER button repeatedly to set dimmer level.
3. Press the ALARM ON/OFF button to turn on or off the alarm already set.
4. Clock and Alarm setting:
 - A: Press and hold the SET button, 12H will display with 12 blinking, press the UP or DOWN button to set to 24 H or 12 H, press the SET button to confirm.
 - B: The hour digit will blink, press the UP or DOWN button to set the hour, press the SET button to confirm, the minute digit will blink, using same way to set minute.
 - C: "ONAL" (Alarm On) will blink, press the UP or DOWN button to set the alarm to on or off, if set to on, the alarm indicator will light up.
 - D: The alarm hour digit will blink. Press the UP or DOWN button to set the hour, press the SET button to confirm, the minute digit will blink, using same way to set minute.
5. Press the SNOOZE button on the unit to snooze while alarm ringing, the indicator will blink and the unit will ring again after 9 minutes.
6. Press the UP or DOWN button on the unit to stop alarm ringing.

NOTE: In case of power interruption, press any button to wake up the unit.

TROUBLESHOOTING

Check the following before requesting service:

- No display---The batteries may be consumed---Replace with new batteries
- Using a small metal stick to insert into the RESET hole to reset if abnormal phenomenon appears.

SPECIFICATIONS

Power source: DC 5V

PACKAGE INCLUDES

- 1 X Main Unit
- 1 X User Manual
- 1 X USB Cable for power source

WARRANTY CARD

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

