 


QUICK SETUP INSTRUCTIONS

1. Code Search Function

- 1) Face the remote control directly at the device that you want to control (TV, VCR etc.)
- 2) Press the button of device (TV VCR etc.) once and release then press and hold the SET button until the red indicator light stays on, then release the button.
- 3) Enter the 4 digit code (Select the code from the list of codes shown in this manual specific to your brand of product).
- 4) Check the function on your device by pressing the CH+ button on the remote.


1: Code search function

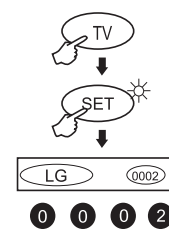

2. Manual Function

- 1) Face the remote control directly at the device that you want to control (TV, VCR etc.)
- 2) Press the button of device (TV VCR etc.) once and release then press and hold the SET button until the red indicator light stays on, then release the button.
- 3) Point the remote at your device and press the CH+/ CH- button repeatedly until the device can be powered off.
- 4) Once the unit is fully functional, press the OK button to save and install the code.


2: Manual function

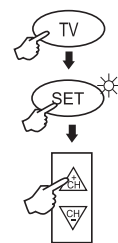

1

INSTRUCTION SHEET

This instruction sheet will provide you with directions for the effective operation of the Jumbo Remote Control. Please read through this manual carefully before operating this product and keep for future reference.

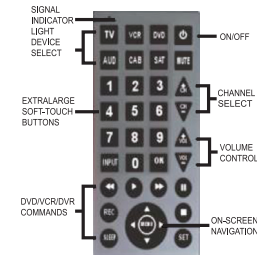

Operating Instructions for TV

- Direct Entry:** First, you have to get your brand code from the code list and follow the steps below:
- 1) With the TV on, face the remote in a straight line in front of your TV at a distance less than 1 metre.
 - 2) Press the button of device (TV VCR etc.) once and release then press and hold the SET button until the red indicator light stays on, then release the button.
 - 3) Enter the 4 digit device code that you can find in the TV code list next to the brand name of your TV.
 - 4) With your device on, press the CH+ button. If the device responds, no further programming is required.

- NOTE:** If some buttons do not operate the TV properly, try another one of the TV codes and repeat the steps above.
- Manual Code Search:** If the remote does not respond after you have tried all the codes for your brand, or you cannot find a code in the code list, you can search manually for your code by following the steps below:
- 1) Manually turn on your unit (TV, DVD player, etc.) that you want to be controlled.
 - 2) Press the button of device (TV VCR etc.) once and release then press and hold the SET button until the red indicator light stays on, then release the button.
 - 3) Point the remote at your device and press the CH+/ CH- button repeatedly until the device can be powered off.
 - 4) Once the unit is fully functional, press the OK button to save and install the code.

2

CAUTION:

Batteries should be removed and replaced by adults only. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Do not recharge standard or alkaline batteries. Be sure to insert batteries with the correct polarities and always follow the battery manufacturer's instructions. Remove batteries and store them in a cool, dry place when not in use. Always remove old and dead batteries from the product. Dispose of used batteries responsibly.

WARNING:

* **DO NOT TAKE THE CONTROLLER APART.**
* **DO NOT TAKE THE CONTROLLER INTO A HIGH TEMPERATURE ENVIRONMENT OR A DIRTY PLACE**

5

TV CODE LIST

Fujitsu	0321,0706,1202
JVC	0607,0204,0321,0508,0617,0326,0993,0802,0108,0308,0715
LG	0002,0606,0502,0102,0117,0814,0324,0435,0802,0307,0609,0217
Magnavox	0807,0002,0502,0919,1914,0224,0430,0247,0402,0408,0109,0715
NEC	0719,0002,0102,0502,0901,0602,0111,0715
Panasonic	0718,0416,0007,0618,0807,0039,0739,0345,0696,0901,0608
Philips	0807,0022,0020,0422,0122,0222,0322,0002,0520,0919,0521,0621,0709,1516,1017,0430,0247,0901,0402,0408,0109,0210,0310,0715
Radio Shack	0704,0002,0406,0506,0906,0618,0502,0324,0835,0601,0802,0705,0805,0111,
Samsung	0112,0309,0209,0512,0302,0502,0002,0102,0110,0818,0895,0437,0802,0103,0609,0012,0212
Sanyo	0506,0311,0612,0002,0428,0802,0412,0619
Sharp	0509,0913,0907,0603,0002,0502,0224,0228,0202,0111,0813
Sony	0414,0902,0801,0708,0639,0816

TV CODE LIST

Toshiba	0517,0419,0512,0613,0719,0112,0506,0111,0618,0627,0437,0041,0094,0802,0111,0313,0715
---------	--

VCR CODE LIST

Akai	0324,0524,0424,0624,0724,0027,0931,0335
Magnavox	0330,0430,0534,0324,0224,0124,0230,0125,0247,0093,0598,0830
NEC	0428,0239,0339,0530,0731,0831,0931,0025,0526
Panasonic	0937,0739,0039,0938,0124,0345,0830
Philips	0330,0430,0036,0136,0738,0439,0939,0247,0230,0830
Radioshack	0124,0224,0324,0525,0126,0428,0835,0037,0737,0937,0426,0726,0027,0029,0830,0631,0335
Samsung	0037,0437,0625,0538,0147,0895,0997,0624,0335
Sanyo	0824,0032,0328,0428,0037,0426
Sharp	0637,0737,0224,0324,0228,0825,0027,0631
Sony	0539,0034,0524,0933,0936,0540,0838,0038,0138,0238,0639
Toshiba	0625,0727,0627,0330,0630,0437,0053,0094,0441,0029,0735

6

Identify Code: The Identify code function can be used after you have already entered the TV/DVD code but have forgotten it. Following the steps below, you will be able to find what your code is.

- 1) Press and hold the button of device (TV VCR etc.) at same time press the OK button then release both of them.
- 2) For example if the code is 1085, the indicator light will blink for one time first then stop for one second, after that indicator light will blink for ten times then stop for one second, then indicator light will blink for eight times then stop for one second, then indicator light will blink for five times then stop for one second.

Sleep Function: The sleep function will turn off your TV automatically after you have programmed the time.

- 1) Press the SLEEP button and TV screen come out time off function.
- 2) Adjust the time according to your need.

NOTE: The sleep function will not activate unless the remote is pointed at the TV.

To turn the sleep timer OFF, press the POWER button to turn the TV off.

3

USING THE REMOTE TO CONTROL YOUR DEVICES

Because this remote can control more than one device, you must select which device you wish to operate. For example, if you want to operate your TV, once the remote is turned on, you must press the TV button to put the remote into TV mode. The remote will stay in the mode you select until you change it. If your remote is in TV mode, you must change it to be able to operate the DVD player, VCR, Satellite Receiver or Cable Box.

For example, if your remote is in DVD mode and you want to turn off your TV, you must press the TV button first before pressing the POWER button.

BATTERY NOTE:

For the best results, please use alkaline batteries. Be sure to check the batteries expiration date so ensure uninterrupted use of the remote. Remove the batteries if the product will not be used for an extended period of time. If the product does not perform properly, check the batteries have not leaked or corroded, have been installed properly or if they need to be changed.

To Replace and Install Batteries

This remote requires 2 "AA" batteries.

- 1) Remove the battery cover on the back of the remote.
- 2) Insert the AA batteries with the correct polarity as indicated in the battery compartment.
- 3) Replace the battery cover.

4

DVD CODE LIST

LG	0142,0898,0392,
PANASONIC	0241,0641,0099,0698,0345,0696,0340
PHILIPS	0441,0442,0943,0177,0599,0799,0699,0247,0447,0598,1211,1214
SAMSUNG	0342,0047,0895,0997,0790,1511,0147
SANYO	0092,0546,0243
SHARP	0341,0391,0492
SONY	0300,0400,0500,0541,0200,0540
TEAC	0042,0546,0142

LASER DISC'S

Sanyo	0824
Sony	0933

TV/VCR,TV/DVD COMBO CODES

Panasonic	0345
Philips	0247
Samsung	0895
TOSHIBA	0094

SATELLITE CODES

Philips	0259,0862,0763,0564,0664,0864,0465,0765,0565,0362,0162
Samsung	0061,0959,0962,0263,0563,0655
Sharp	0062
Toshiba	0765,0864,0465,0564,0664,0362,0858,0064,0164,0764

HDTV/SAT CODES

Samsung	0959,0563
Sony	0963
Toshiba	0362,0765
Zenith	0065
Philips	0864

7