



ELECTRIC UNDER BLANKET QUEEN FLEECY FITTED MODEL NO: TT-1101XQF



INSTRUCTION MANUAL PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

01111

such as high blood circulation, diabetes or high skin sensitivity.

Warning! Avoid extended use of this electric blanket at a high setting. This may result in skin burns.

Warning! Avoid creasing the blanket. Examine the blanket frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, have it inspected by a qualified electrician prior to any further use or the product must be disposed.

Warning! Do not use this electric blanket on or under any waterbed or mechanically adjustable type of bed such as a bunk or sofa bed. Check to ensure that the controller and supply cord cannot become trapped in any bed or bedding. Keep controller outside of the blanket on a single bed. Do not tuck the blanket in.

Warning! Use the power size of blanket for the bed. Do not use for example use a double blanket on a single bed. Do not tuck the blanket in.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit supplied with the item. Do not use other attachments not supplied with the blanket. Do not use other attachments not supplied with the blanket.

Warning! Do not use by children under the age of three.

Supply. This electric blanket must be connected to a suitable 230-240V, 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat.

Warning! Always unplug from the mains supply when not in use.

Supply cord and plug The supply cord or controller is damaged, it must be replaced by the manufacturer or its service agent or a suitably qualified person in order to avoid a hazard.

Children This blanket is not to be used by young children over the age of three unless the controls have been preset by a parent or guardian or unless the child has been adequately instructed on how to operate the controls safely. This appliance is not intended for use by persons (including children) who lack the necessary understanding or lack of experience or knowledge to use the appliance safely. It is the responsibility of the person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.

Warning! Not to be used by young children (0-3 years).

CLEANING **Warning!** When not in use or before cleaning, always disconnect the blanket from the mains power supply.

Spot Clean Sponge the area with a neutral wood detergent or mild soap solution in lukewarm water. Sponge with clean water and dry completely before re-use.

Warning! Do not use by children under the age of three.



SAFETY INSTRUCTION

Carefully read this manual in full before using this electric blanket to ensure that you know how the electric blanket functions and how to operate it. Keep this manual with the electric blanket. If the electric blanket is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper use of the product is always the user's responsibility.

Warning! Do not use this electric blanket if it has been damaged in any way, if it is wet or moist or if the supply cord is damaged. Return it immediately to the retailer. Electric blankets should be checked annually for electrical safety in order to limit the risk of electric shock or fire.

PACKAGE CONTENTS

- 1 x 153cm x 203cm Dual Control Electric Blanket
- 1 x Instruction Manual

Caution! Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

OPERATION

Location and Use

Use the blanket as an under blanket only. This blanket is designed for domestic use only. This blanket is not intended for medical use in hospitals and/or nursing homes.

Fitted Place the blanket on the bed, with the controller at the pillow end, ensuring that the blanket does not overhang the bed edge. Fit the blanket to the bed using the attached skirt. Secure each corner and also the middle. Ensure the blanket is fully fit on the mattress and not bent or creased.

Operation Once the electric blanket has been installed correctly in position and the bedding completed, connect the controller supply plug to a suitable power outlet. Ensure the controller is set to "OFF" before plugging in. Select the desired heat setting on the controller. The indicator lamp will illuminate when the blanket is ON.

Controls The controller has the following settings:

- L. LOW-HEAT
- M. MEDIUM-HEAT
- H. HIGH-HEAT

There is a LED light which illuminates when the blanket is switched ON.

IMPORTANT! The electric blanket is fitted with an automatic timer to switch OFF the blanket after 12 hours of continuous use on any one of the heat settings (i.e. Low, Medium or High). The timer will be reset automatically when the controller is switched ON again by selecting any one of the heat settings. The 12 hour timer is automatic and cannot be adjusted manually.



Hand Washing (Maximum temperature 40°C)

Disconnect the detachable cord from the blanket.



Immerse the blanket only (DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH WATER). Gently wash the blanket in lukewarm water. Do not use any detergent. Rinse the blanket thoroughly in clean lukewarm water, gently squeeze the solution through the blanket. Squeeze the blanket thoroughly in clean lukewarm water, gently squeeze and drain the excess water from the blanket. DO NOT WRING THE BLANKET.

DRYING Dry the blanket across a clothes line and drip dry.

DO NOT dry with a hair dryer or heater.

IMPORTANT! Ensure the controls are in position that will not allow dripping water to fall onto any part of the controller.

Allow the blanket to dry thoroughly.

Connect the detachable cord to the connector on the blanket. Ensure the connector is properly seated.

CAUTION! Electric Shock Hazard. Ensure the electric blanket and connector on the blanket is completely dry, free of any water or moisture, before connecting to mains power.

Warning! During washing and drying the detachable cord must be disconnected or positioned in a safe position to prevent the cord from being pulled into the blanket.

Warning! Do not allow the supply cord or controller to be immersed in any liquids.

Warning! Do not wring the blanket.

Warning! Do not dry clean this electric blanket.

This may damage the heating element or the controller.

Warning! Do not iron this blanket.

Warning! Do not machine wash or machine dry.

Warning! Do not tumble dry.

Warning! Do not use by children under the age of three.

SAFE OPERATION GUIDE

- Fit the blanket over the mattress with the skirt.
- Use this blanket as an under blanket only. Not recommended for futons or similar folding bedding systems.
- When not in use, pack the blanket in its original packaging for best protection and store in a dry place. Do not store the blanket in a plastic bag. Pressing sharp creases into the blanket. Store the blanket only after it has fully cooled.
- When storing, fold neatly but not tightly (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed on top of it.
- Do not crease the blanket by placing items on top of it during storage.

Warning! The blanket should not be used on an adjustable bed.

Warning! The blanket must be fitted securely to the mattress with the fitted skirt. The cord and control must be outside the bedding at all times and away from other heat sources such as heating and lamps.

Warning! Use HIGH setting to pre heat the bed 1 hour before use only. Do not sleep with the control set to the high setting. It is highly recommended that the blanket be set to a minimum Low heat if used overnight or for continuous use.

Caution - First Time Use: For first time use it is recommended that the blanket be set on HIGH setting for the first 10 minutes of use. This will ensure the blanket warms up and moisture out of the mattress, before any initial colour that may occur with first time use.

Warning! Do not sleep with the controller set to HIGH. Use HIGH setting only to pre heat the bed then reduce the heat setting to minimum LOW setting overnight or preferably switched off for safety.

Warning! Remember to switch the blanket controller to "OFF" at the end of use and disconnect from mains power. Do not leave on indefinitely. There may be a risk of fire.

Warning! For added safety it is recommended that this blanket be used with a residual current safety device (safety switch) with a rated residual operating current not exceeding 30mA. If unsure please consult a qualified electrician.



IMPORTANT SAFETY INFORMATION

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Always check that the power supply corresponds to the voltage on the rating plate on the controller.



Warning! Do not use the electric blanket folded.



Warning! Do not insert pins into the electric blanket.

Warning! Do not use the electric blanket if you or your partner or child or any other person is unable to heat and other vulnerable persons who are unable to react to overheating.

Do not use with a helpless or incapacitated person or any person suffering from medical illness



Warning - Do not bleach.

STORAGE

IMPORTANT! Safety Check This blanket should be checked annually by a suitably qualified person to ensure its safety and suitability for use.

Store in a safe place

Warning! Before storage of this appliance allow it to cool down before folding. When not in use store your blanket and instruction manual in a safe and dry place. Roll or gently fold the blanket. Do not crease. Store in a suitable protective bag for protection. Do not store the blanket in a plastic bag.

Warning! Do not use the electric blanket if you or your partner or child or any other person is unable to heat and other vulnerable persons who are unable to react to overheating.

Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused the blanket must be checked by a qualified electrical person for electrical safety, before switching it on again.

TECHNICAL SPECIFICATIONS

- Size 153cm x 203cm
- Power 100W
- Dual controller 030C

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the instructions for use and the manufacturer's warranty is not voided.

This warranty is in addition to any rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is caused by misuse or damage to the product.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning the product can be addressed to our Customer Service Centre at 690

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.