 


AROMA DIFFUSER WITH SPEAKER INSTRUCTION MANUAL

42839484

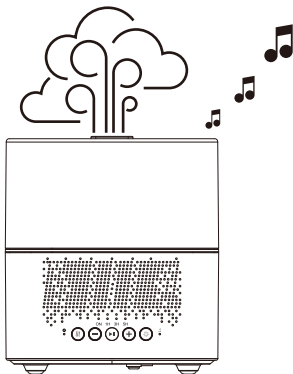

This Aroma Diffuser uses Ultrasonic waves to instantly vaporize water and essential oil in the tank, to produce a cool, dry fragrance.

 
 
Includes

Main Unit

AC Adapter: Input 100~240V.a.c Output 24V.d.c

Names of parts


Ceramic disc

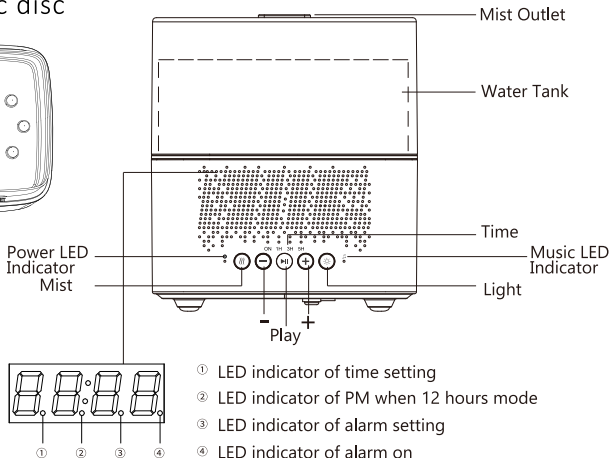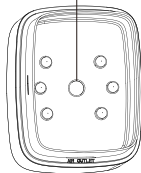

Set Up

Open the top cover.

 Add around 300ML tap water inside the water tank then add 3 to 4 drops of essential oil, depending on your preference of more or less fragrance.

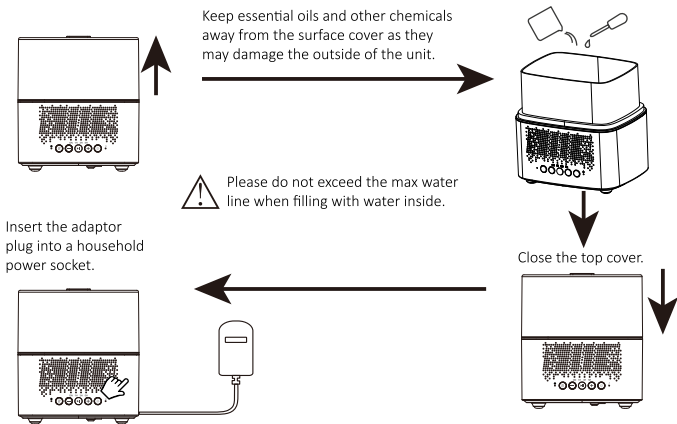

Adjust timer / Light Button

■ Timer Button (Left Side)

Press MIST button to adjust from ON-1H-3H-5H-OFF.

■ Light Button (Right Side)

1. 1st press of the LIGHT button will turn the light on and the colour will change automatically.
2. Continuously press the LIGHT button to switch the colours then OFF.

Bluetooth Connection Section

1. Hold PLAY button for 2 seconds to switch on/off the Bluetooth function.
2. Place Bluetooth Controller within 10 metres, clear of any obstacles which could block the signal.
3. Search for available devices and select "Clock Diffuser".
4. Play your favourite tunes.
5. Press "+" or "-" to shift the tunes.
6. Hold "+" or "-" for 2 seconds to adjust the volume.

 
 
 
 
Set Clock

1. Hold the Mist button for 2 seconds until 12/24 appears on screen. When the LED indicator ② is lit, it will display the PM time for 12hr mode.
 2. Press “+” or “-” to select between 12hr/24hr mode.
 3. Press the Mist button until the digital number flickers.
 4. Press “+” or “-” to adjust the hour step by step / Hold “+” or “-” for fast switching.
 5. Press the Mist button to confirm.
 6. Press “+” or “-” to adjust the minutes step by step / Hold “+” or “-” for fast switching.
 7. Press the Mist button to finish clock setting.
- (NOTE: Pressing the LIGHT button in time setting mode will return to the initial state “00:00”)






Set Alarm

1. Hold the LIGHT button for 2 seconds to enter into alarm setting.
 2. Press “+” or “-” to adjust the hour step by step / Hold “+” or “-” for fast switching.
 3. Press the LIGHT button to confirm.
 4. Press “+” or “-” to adjust the minutes step by step / Hold “+” or “-” for fast switching.
 5. Press the LIGHT button to finish alarm setting.
- (Note: When Alarm is ringing, press any button to turn off the alarm.)

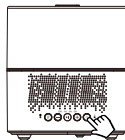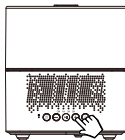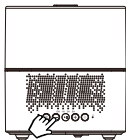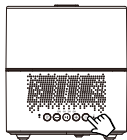

Cancel Alarm

   1. Hold the LIGHT button for 2 seconds to enter into alarm setting.
2. Press the Mist button to cancel alarm and “- - -” appears.
3. Press the Light button to finish alarm cancelation.

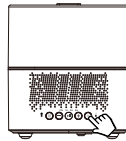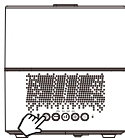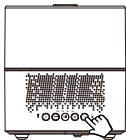

Cleaning & Maintenance

The machine should be cleaned after using for 3-5 days continuously, to keep it working normal and extend the lifetime.

1. Unplug the machine before cleaning.
2. Please clean water tank with cotton swab and white vinegar or the dilution of detergent and warm water. Other part of the plastic cover can be cleaned with a soft cloth.
3. Please do not put the whole machine or base into water. Temperature of water cannot be over 40 degrees to clean.

 
4. When the machine is not used for a long period of time, please pour out the water in the tank and wipe off the drops, then place it in a shady and cool place to avoid direct sunlight.
5. Please do not take apart the noise-reduction cover to clean.

Caution:

1. Please do not pour out water through the air outlet as this can damage the inside of the machine.
2. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

How to pour out the water

To avoid water flowing into the air outlet, please pour out the water correctly.

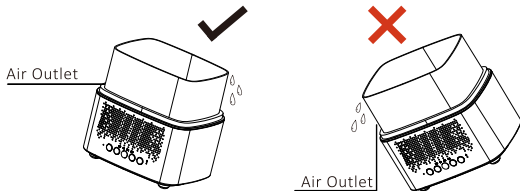

Attention

■ To prevent less or no steam from the diffuser, do not add water above the max level mark.

■ To prevent melting damage, do not add more than 4 drops of essential oil into the container.

1. Do not use as a medical respirator.
2. Do not use the product when there is an abnormal noise or the diffuser is overheating abnormally.
3. Do not cover or block the mist outlet or air inlet.
4. Do not use inferior essential oils. Use 100% pure essential oils.
5. Do not take off the cover during operation of the diffuser.
6. Do not place near an electric device such as computer, TV or audio equipment.
7. Do not use hot water or mineral water. Always use tap water or distilled water.
8. Keep out reach of children and pets.
9. Do not use strong detergents to clean the device.
10. Do not use any hard or sharp objects to press the vibration plate of the device.

Warning

1.Important safety instructions:

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

2. Only use the supplied AC/DC adaptor with model no.GA10-2400650AU manufactured by DONGGUAN GREEN POWER ONE CO.,LTD.

3.The AC/DC adaptor and the apparatus shall not be exposed to dripping or a splashing and that no objects filled with liquids,such as vases,shall be placed on it.

4.To be completely disconnect the power input,the AC/DC adaptor shall be disconnected from the mains.

5.The AC/DC adaptor should not be obstructed or should be easily accessed during intended use.

6.Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

7.Minimum distances 10cm around the apparatus for sufficient ventilations.

8. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
9. No naked flame sources such as lighted candles should be placed on the apparatus.
10. Attention should be drawn to the environmental aspects of battery disposal.
11. Only use the apparatus in moderate climates.
12. Always cut off power source before cleaning.
13. Unplug the appliance during filling and cleaning.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. Care should be taken when using the appliance due to the emission of hot water vapour.
17. For adaptor use with IT/AV product only.
18. Please note product rating label is at bottom of product.

Troubleshooting

If you start up the machine but it doesn't work, please check the following diagnosis.

Problems	Possible Reasons	Handing
No electricity, Not working.	Power not connected.	Connect the power, press the button
	Power wire broken or adaptor burnt out.	Please contact local retailer.
Unable to spray mist or spray is bad.	Is the water level low?	Please fill water.
	Is there too much water inside the tank?	If the water volume exceeds 300mL (max water line), the mist volume will be very small.
	Is the ceramic disc dirty?	Please clean the water tank.
	Is the top cover correctly placed?	Please place top cover in the correct spot.
	Is the bottom air inlet dirty?	Please clear away the dust in the bottom air inlet.
Main body is leaking water	Is the top cover correctly covered?	If the top cover is not correctly covered, the water will splash out and fall onto the machine body or table.
	Condensation water on the body may be caused by low-temperature or a humid environment.	Please avoid low-temperature and humid environments.

12 Month Warranty:

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.