

anko

Wired gaming mouse

Instruction Manual

Keycode: 42848783



Safety Instructions:

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.

- ▶ Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- ▶ Use this device solely for its intended purpose.
- ▶ Only use this appliance indoors.
- ▶ Keep the appliance away from all hot surfaces and naked flames.
- ▶ Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- ▶ Do not immerse the appliance in water or in other liquids.
- ▶ Do not open the housing under any circumstances. Do not introduce any objects into the interior of the housing.
- ▶ Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

Features:

professional gaming mouse

mouse resolution: 1200/1600/2400/3200 DPI


Supports:

Linux, Windows XP SP3/ VISTA 7/8/10 and Mac OS X 9.x or later

Before first use:

1. Unpack the device and check if all parts are there and undamaged. Should this not be the case, return the product for replacement.
2. **Danger of suffocation!** Keep all packaging materials away from children.
3. Remove all protective foils and packaging material prior to use.

Product overview:

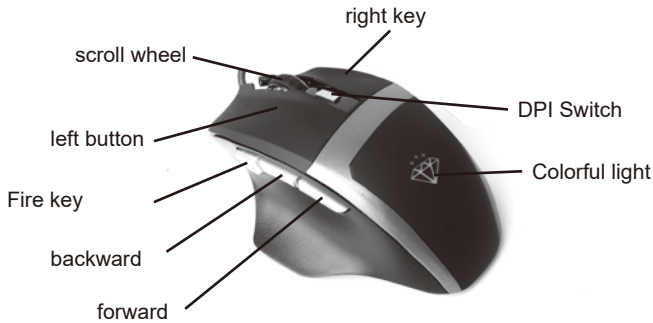

Note: The Forward button & Back button is not available in Mac system.

Connecting the Mouse

1. Plug the USB cable into a free USB port on the computer.
2. The Mouse will connect automatically and can be used immediately.

Forward button

Press the Forward Button to navigate to a recently accessed web page from your internet browser or file path.

Back button

Press the Back Button to navigate to a previously accessed web page from your internet browser or file path.

Changing DPI

The default DPI for the mouse is 1200. Click the DPI switch repeatedly to change the setting in the following order: 1200DPI→1600DPI→2400DPI→3200DPI→1200DPI.

Care and maintenance

Wipe all parts with a dry soft cloth.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.