

anko

Wireless Mouse Black

Instruction Manual

Keycode: 42848820



Safety Instructions:

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.

- ▶ Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- ▶ Use this device solely for its intended purpose.
- ▶ Only use this appliance indoors.
- ▶ Keep the appliance away from all hot surfaces and naked flames.
- ▶ Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- ▶ Do not immerse the appliance in water or in other liquids.
- ▶ Do not open the housing under any circumstances. Do not introduce any objects into the interior of the housing.
- ▶ Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

Features:

2.4GHz wireless technology

800/1200/1600 CPI optical wireless mouse sensor

Working distance up to 10 m (without any obstructions)


Supports:

Linux, Windows XP SP3 / VISTA 7/8/10 and Mac OS X 9.x or later

Before first use:

1. Unpack the device and check if all parts are there and undamaged. Should this not be the case, return the product to Kmart for replacement.
2. **Danger of suffocation!** Keep all packaging materials away from children.
3. Remove all protective foils and packaging material prior to use.

Product overview:

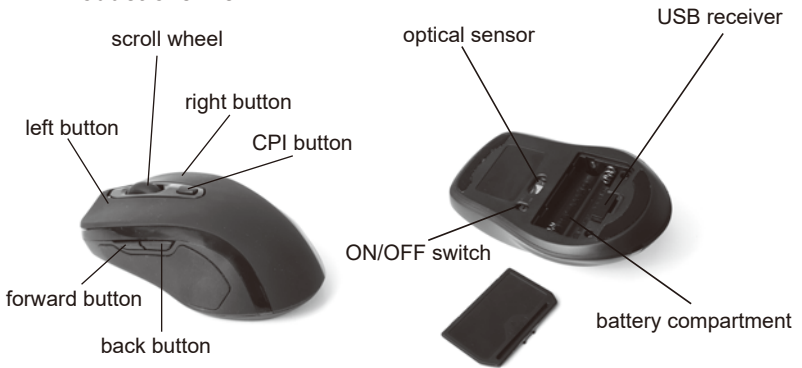

Inserting the Battery

1. Remove the battery compartment cover of mouse and insert 2 x 1.5V AAA batteries. Please note the polarity diagram printed inside the battery compartment. **Caution!** Danger of explosion if the batteries are incorrectly replaced.
2. Replace the battery compartment cover again, making sure it is closed firmly.

Notes on batteries

Only use top-quality batteries. Cheap batteries could leak and damage the device as a result.

If the batteries leak, remove them with a cloth and dispose of them accordingly. Ensure that leaking battery acid does not come into contact with skin and eyes. If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a physician immediately! If battery acid comes into contact with your skin, wash the affected area with lots of water and soap.

If the device is not to be used for an extended period of time, then the batteries should be removed, as the device could become damaged should they leak. If the device functions weaken, replace all batteries.

Batteries do not belong in household waste! Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations. Batteries are very dangerous if swallowed. Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately.

Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited.

Remove the battery prior to disposing of the device.

Connecting the USB Receiver

1. Remove the USB receiver from its compartment inside the mouse.
2. Plug the USB receiver into a free USB port on the computer. The device does not require a driver.
3. Push the ON/OFF switch to ON
4. The Mouse will connect automatically and can be used immediately.

Power saving mode

If the mouse is not being used for 8 minutes, it switches to power saving mode. The optical sensor is turned off to reduce power consumption to a minimum. Just press any key to reactivate it.

Forward button

Press the Forward Button to navigate to a recently accessed web page from your internet browser or file path. Other functions may be available according to the application being used.

Back button

Press the Back Button to navigate to a previously accessed web page from your internet browser or file path. Other functions may be available according to the application being used.

Note: The Forward button & Back button is not available in Mac system

Changing CPI

The default CPI for the mouse is 1200.

Click the CPI switch repeatedly to change the setting in the following order: 1200CPI → 1600CPI → 800CPI → 1200CPI

Care and maintenance

1. After use push the ON/OFF switch to OFF
2. Wipe all parts with a dry soft cloth.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.