 


AGES 8+ YEARS

 
RC HAND CONTROL DRONE MANUAL

Please read the instructions before operating the product.

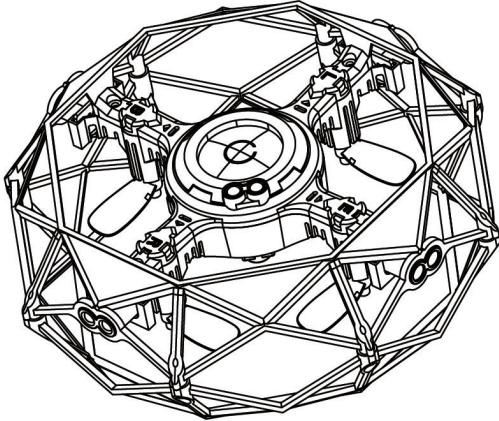


Attention: The drone includes a built-in rechargeable battery that is non-replaceable. The included rechargeable battery is not fully charged prior to shipment and must be charged before the first use.

DRONE

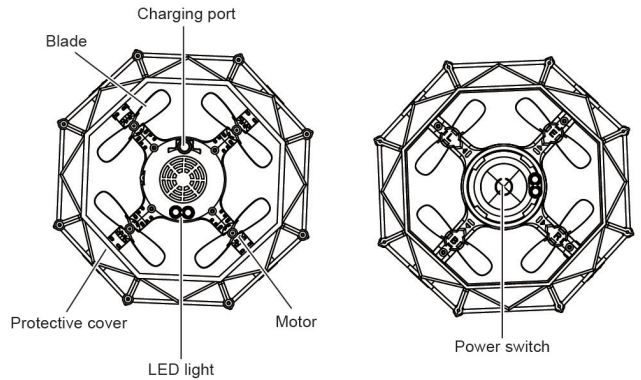


CONTROLLER

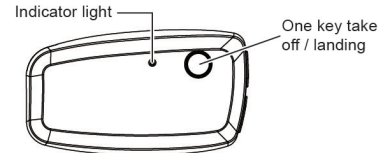 

CONTROLLER BATTERY INSTALLATION

 1. Unscrew to open battery cover, insert 1 x 1.5V AAA battery.
 2. Replace battery cover.
- Attention: Remove batteries after you have finished using your product.

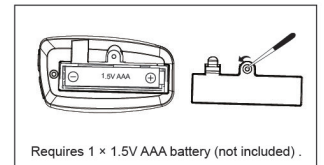


Requires 1 x 1.5V AAA battery (not included).

LITHIUM BATTERY CHARGE INFORMATION

Attention: Do not charge battery immediately after each play, let the battery cool down for a while.

 1. Long press 1-2 seconds to turn off the drone.
2. Connect USB charging cable plug with drone charging interface.
3. Put the cable into the computer USB interface. The USB indicator will lights up when it has started charging.
4. Once the indicator light extinguishes, the drone is fully charged. Unplug the USB charging cable from computer USB interface and disconnect with drone.
5. Charging time: approximately 45-60 minutes.
6. Play time: approximately 5-6 minutes.

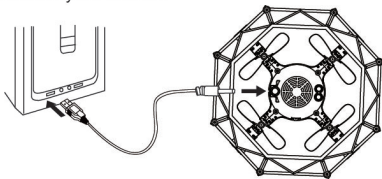


CONTROL METHOD

Before use, please ensure an adult has installed the battery correctly using the instructions shown in this instruction manual.

1. Long press the drone's power switch to turn on and place flat on the ground, the LED lights on drone will be flashing. Ensure you are least 2 metres from the back of drone.
2. Press the one key take-off / landing button on the controller, if the LED lights on the drone stop flashing, the pairing and calibration are successful.
3. Press the one key take-off / landing button again, the drone will rise automatically, and then the drone will enter sensing function mode when it rises to the position of about 1.5 metres, then the drone will slowly cycle up and down in the range of 1.5 to 2 metres.
4. In the sensing function mode, you can use your hands / feet / knees for a unique remote control game experience.
5. After you have finished playing, press the one key take-off / landing button, the drone will land slowly.
6. Long press the drone power switch, the drone will turn off.

 Tip: The LED lights will flash continuously when the drone is low in battery, then the drone will automatically and slowly land on the ground.

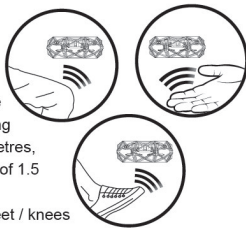

WARNING

- Please follow the instructions for correct installation and use. Some parts require assembly by an adult.
- The product contains small parts and is a choking hazard.
- Do not touch the hot motor and batteries.
- Do not touch working propellers.
- Do not fly towards yourself or other people.
- Adult supervision is required.
- Non rechargeable batteries are not rechargeable.
- Charging of the rechargeable battery should be done by an adult.
- Do not mix old and new batteries or batteries of different types.
- Do not short circuit the battery or put the battery in fire.
- Do not leave the toy unattended while charging it.
- When the battery is low, please recharge drone.
- Charge the toy on non-flammable surface and keep it away from flammable items.
- Turn the charger off when the toy's battery is charged and always unplug it from the toy.
- If the toy has been damaged, immediately stop use, unplug, and safely move the toy away from flammable materials.
- Follow the manufacturer's instructions for charging the toy. Do not charge longer than recommended. Do not use the product for a long time. Remove the battery.
- To avoid injury, do not touch the rotating parts.
- Do not impact or drop the drone or remote control.
- Please use a clean soft cloth to clean the product.
- The user has the responsibility to ensure that the product will not cause harm to themselves or others.
- The manufacturers and dealers do not bear any responsibility for injuries or damage to property caused by improper use.
- The packaging and instructions contain important information of products, please keep for future reference.
- Only fly during the day and keep your drone within visual line-of-sight. This means being able to see the drone with your own eyes (rather than through a device) at all times.
- Do not fly your drone higher than 120 metres (400ft) above the ground.
- Keep your drone at least 30 metres away from other people.
- Do not fly your drone over or near an area affecting public safety or where emergency operations are underway (without prior approval). This could include situations such as a car crash, police operations, a fire and associated firefighting efforts and search and rescue.
- Only fly one drone at a time.
- Do not fly over or above people. This could include beaches, parks, events, or sport ovals where there is a game in progress.
- Keep at least 5.5km away from controlled aerodromes if your drone weighs more than 100g. Flying within 5.5km of a non-controlled aerodrome or drone landing site (HLS) is possible, but only if no manned aircraft are operating to or from the aerodrome. If you become aware of manned aircraft operating to or from the aerodrome/HLS, you must manoeuvre away from the aircraft and land as soon as safely possible.
- Do not operate your drone in a way that creates a hazard to another aircraft, person or property.