 


# anko

**Oil-filled Radiator**

**NY2311-13A1L**

**User Manual**

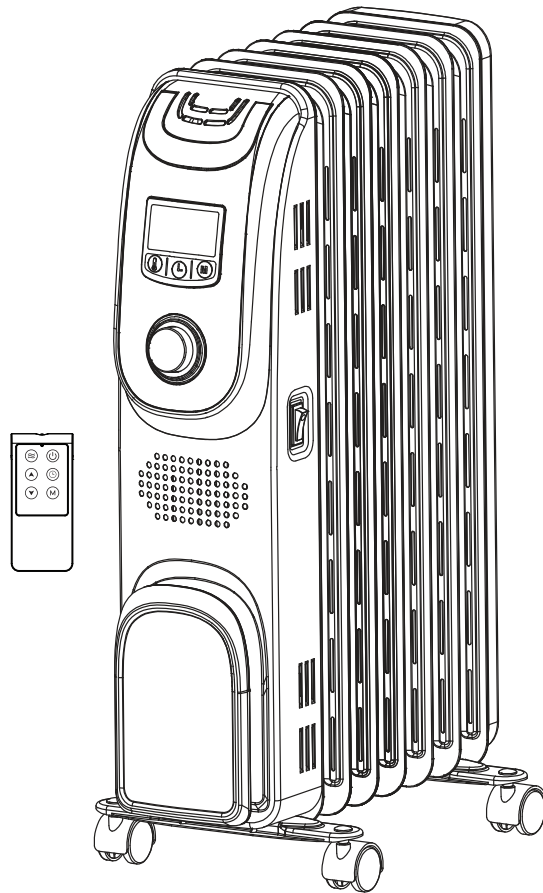

**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## **IMPORTANT INSTRUCTION**

When using any electrical appliance, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

1. Read all instructions before using heater.
2. Do not use if there are visible signs of damage to the heater.
3. Use this heater on a horizontal and stable surface.
4. Do not immerse the appliance in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.,) and do not use it with wet hands.

**IMPORTANT! This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 1m from the heater. Allow heater to cool before moving and then use the built-in handle for easy movement.**

5. Extreme caution is necessary when heater is used by or near children and whenever heater is left unattended.
6. Always inspect your appliance before use. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water. Have the heater checked by a qualified electrical person or the heater must be disposed.
7. Always unplug the heater when it is not in use.
8. **This appliance is designed for indoors ONLY. DO NOT use outdoors.**
9. Avoid the use of an extension cords, extension cord may overheat and cause a risk of fire.
10. This heater is not intended for use in bathrooms, laundry areas or similar moist indoor locations. Never locate heater where it may fall into a bathtub or other water container.
11. Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
12. To disconnect heater, set controls to OFF, then remove plug from outlet.
13. Keep this heater clean. DO NOT allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock, or fire, or damage the heater.
14. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

**CAUTION: The heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.**

15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
16. Warning: In order to avoid overheating, do not cover the heater.
17. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
18. The heater must not be located immediately below a socket-outlet.
19. For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrical person only or the heater must be disposed of.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
21. Children should be supervised to ensure that they do not play with the appliance.
22. This heater is filled with a precise quantity of special oil. Repairs requiring opening of oil-container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak. When scrapping the heater, follow the regulations concerning the disposal of oil.
23. The oil heater does not produce instant heat and not suitable for spot heating. Ideal for areas where constant heat is required for long period of time.

**CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**

**CAUTION: In order to avoid a hazard due to inadvertent resetting of the Thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.**

24.  **WARNING: DO NOT COVER.**

 
**WARNING: Fire risk exists if the heater is covered by or positioned close to curtains or other combustible materials.**

**WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

**WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY


### PARTS

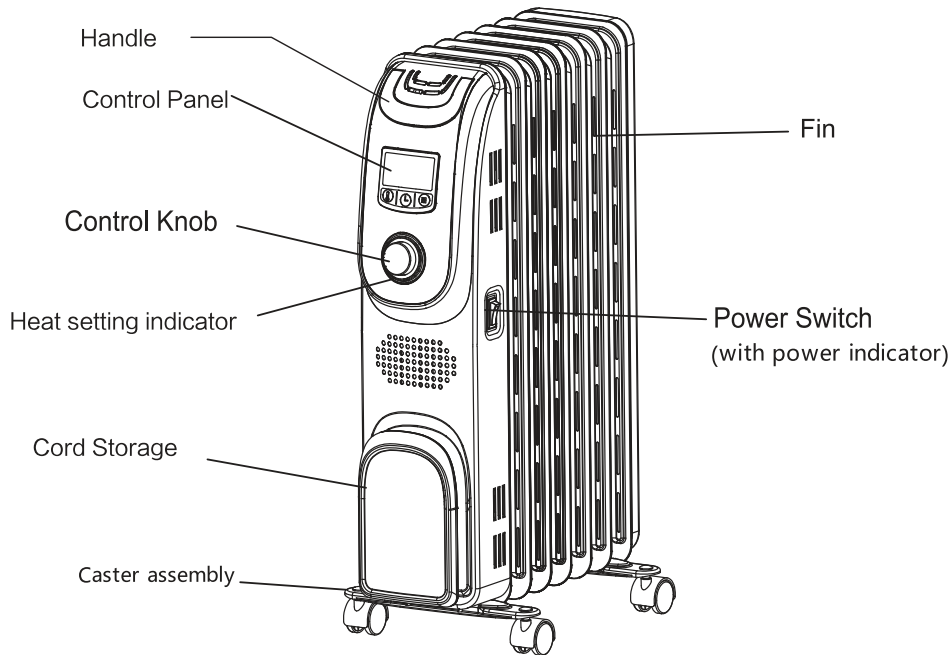

### ASSEMBLY INSTRUCTION

Unpack your heater and find the wheel-holding plate and butterfly nuts between the fins assemblies.

 1. Make sure the heater is unplugged and in the "OFF" position.
2. TURN THE HEATER UPSIDE DOWN.
3. Attach the wheel-holding plates onto the heater as shown in the figure. The straight plate is fixed between the last row of fins and the other one is fixed under the metal control chamber.
4. Fix the castors to the vertical axis of both the wheel holding plates.
5. TURN THE HEATER UPRIGHT.

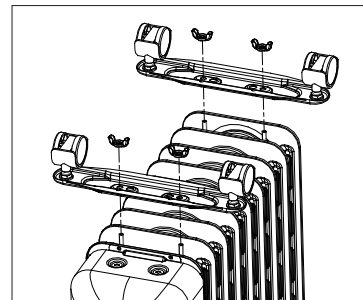

Your heater is now ready to use.


**WARNING: Risk of fire. Do not operate heater without wheel assemblies attached. Operate heater in upright position only (wheels at bottom, controls on top). Any other position could create a hazardous situation. Ensure that the surface beneath the heater is clean and free of any obstructions. It is not recommended that this heater be placed on high-pile carpeting or any other surface that impedes the flow of air underneath the heater.**
 
## **POWER CONNECTION**



Position the heater in the room, ensuring there is at least 20cm clearance around the heater and 1m above it. Check that the air flow through the radiator is unobstructed. Do not cover the unit.


1. Set the Power Switch to OFF position.
2. Unwind the power cord fully, insert the plug into the suitable wall power outlet.
3. Press the Power Switch to ON position, the power indicator illuminates RED and a beep sound is heard to indicate the radiator had entered Standby Mode.

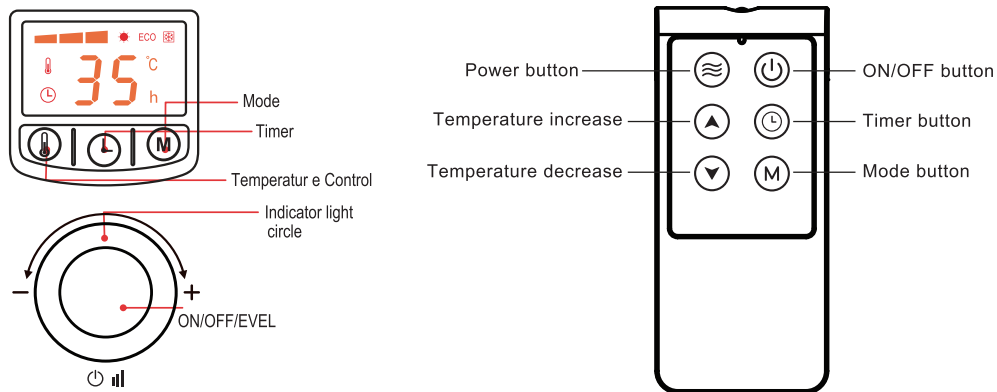
## **FUNCTIONS**




### **[ON/OFF/LEVEL]**

 To turn on the appliance from Standby Mode, press Control Knob  (or ON/Off button  on remote control). Default setting is Normal Mode (High), with temperature setting at 35°C, heat setting indicator shows ORANGE.

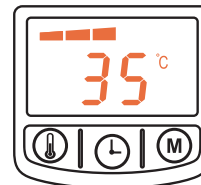

 Under normal mode, repeatedly press the Power button  on remote control to switch between High (orange) --- Middle (red) --- Low (green) --- High (orange).

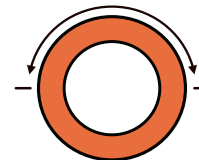

**[Mode]**






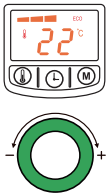
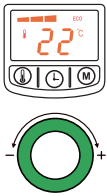



Press the (M) button on remote control to select desired mode of operation.

Repeatedly press the (M) button to switch between FAST HEAT MODE --- ENERGY SAVING MODE--- ANTI-FREEZING MODE --- Normal Mode --- FAST HEAT MODE.

Press the (M) button on control panel to select desired mode of operation.

Repeatedly press the (M) button to switch between FAST HEAT MODE ---- ENERGY SAVING MODE ---ANTI-FREEZING MODE --- NORMAL MODE LOW (GREEN) ---NORMAL MODE MIDDLE (RED) --- NORMAL MODE HIGH (ORANGE) --- FAST HEAT MODE.

3 modes of operation:

<b>Normal Mode</b>			
	<b>Low (GREEN)</b>	<b>Mid (RED)</b>	<b>High (ORANGE)</b>
	 <b>(ORANGE)</b>		
<b>Fast Heat Mode</b>	 <b>(ORANGE)</b>		
	 <b>ECO (GREEN)</b>		
<b>Energy Saving Mode</b>	 <b>ECO (GREEN)</b>		
	 <b>(RED)</b>		
<b>Anti-Freezing Mode</b>	 <b>(RED)</b>		
	 <b>(RED)</b>		

**Introduction on Mode**

**Normal Mode:**

3 power settings available. Temperature can be adjusted in each power setting. Heater stops heating when room temperature reach set temperature, display icon will flash for indication.

**Fast Heat Mode:**

Highest heat setting at this mode to warm up the space in shortest time. Temperature setting cannot adjust in this mode.




**ECO Mode:**

The appliance will automatically set to the most appropriate temperature, 22°C. Temperature setting cannot adjust in this mode.

**Anti-Freezing Mode:**


 
Temperature is set to 5°C, in this way the appliance will turn on only if the room temperature falls below 5°C. Temperature setting cannot adjust in this mode.



### [Temperature Setting]

Under **Normal Mode**, temperature setting can be adjusted. Press  button on control panel or remote control to enter temperature setting interface. The temperature icon  will flash on the display. The flashing will continue for a few seconds until the adjustment has finished. You may turn the Control knob  or pressing "▲" "▼" on remote control to adjust temperature from 5°C to 35°C. Temperature is set when icon stop flashing.

### [Timer Operation]

This function can be activated in two ways.

**Timing ON:** Under Standby Mode, press the timer button , the timer icon will flash. The hours left before the appliance comes on is displayed. To adjust the hour setting, using the Control knob  or pressing "▲" "▼" on remote control. Time is set when icon stop flashing.

**Timing OFF:** When the appliance is ON, press the timer button . The hours left before the appliance goes to Standby Mode is displayed. To adjust the hour setting, using the Control knob  or pressing "▲" "▼" on remote control. Time is set when icon stop flashing.

### [Memory Function]

When the power of the heater is not cut off or the heater keeps under Standby Mode, it can memorize the last working mode and temperature setting. The memory data will be reset if power supply of heater is cut off, and the setting temperature of the heater recovers to default setting (Normal Mode, Low, 35°C) when turned ON.

## CLEANING AND MAINTENANCE INSTRUCTION

1. The electric heater should be cleaned regularly to wipe out the dust on the surface of flanges, as this may influence the radiating efficiency.
2. Disconnect the electricity supply and allow the radiator to cool, before wiping out the dust with a soft damp cloth. Do not use detergent or abrasives.
3. Do not scrap the surfaces of flanges with sharp hard tools, to avoid surfaces getting rusty due to damage of the paint coat.

## TECHNICAL DATA

Voltage: 230-240Va.c. 50Hz

Power: 2200-2400W

## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.