
 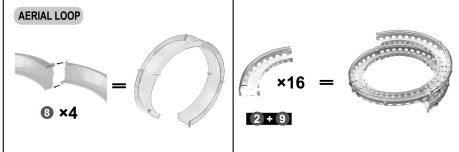




# SUPER LOOP TRACK SET

8+ YEARS

## INSTRUCTIONS

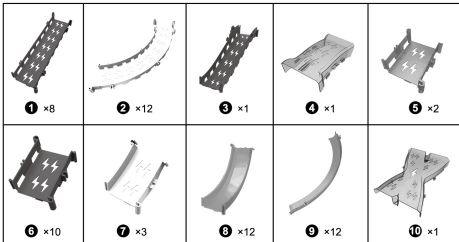
 
### BATTERY SPECIFICATION:




1. Unscrew to open battery cover, insert 2 x 1.5V AAA batteries.
  2. Replace battery cover.
- Attention: Remove batteries after you have finished using your product.


Requires 2 x 1.5V AAA batteries (not included).

### TRACK ASSEMBLY:

 
Lay out track pieces first before connecting. Make sure all track pieces are right side up with raised side walls on top. Assemble track by connecting ends together. Make sure connections are smooth when assembled. To configure track as shown, match the track piece numbers to the location on the diagram.




### LOOP ASSEMBLY:

 


### BASE ASSEMBLY:

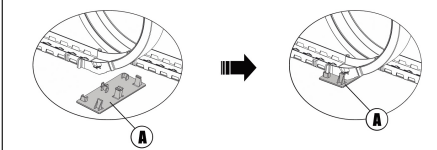


### UPHILL COVER ASSEMBLY:

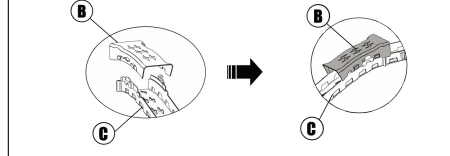


### LONG LINKAGE ASSEMBLY:

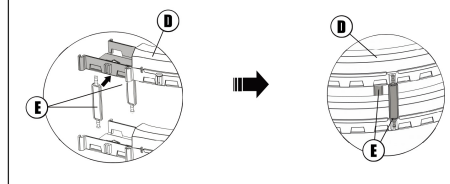


### SHORT LINKAGE ASSEMBLY:

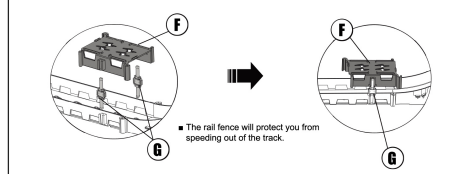

### TOP

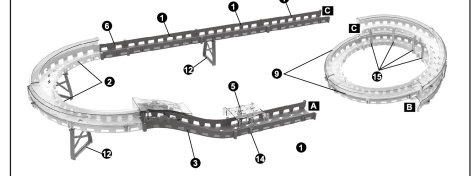

### BOTTOM

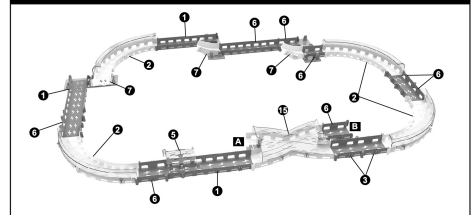

MADE IN CHINA  
 FOR ALL BATTERIES OR ANY OTHER POWER SOURCE, PLEASE READ THE INSTRUCTIONS CAREFULLY.  
 FOR USA, CONTACT US AT: 1-800-4-A-MATTEL  
 FOR OTHER COUNTRIES, CONTACT US AT: 1-800-4-A-MATTEL  
 KEYWORD: 42803462

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ and -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY ADULT. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME SWOLLEN. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC PACKAGING BEFORE GIVING THIS TOY TO YOUR CHILD.