


AGES 3+ YEARS


INTERACTIVE ROBOT MANUAL

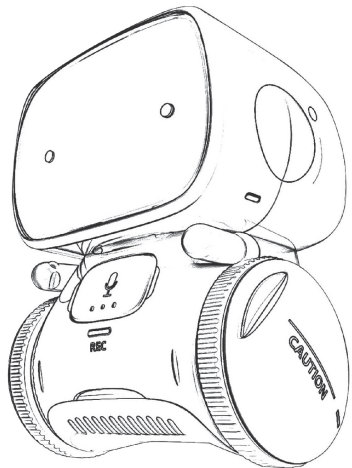

IMPORTANT SAFETY PRECAUTIONS

- READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT.
- Do not use your robot near water. Clean using a soft cloth or paper towel.
 - Do not place your robot on any wet surfaces.
 - Do not allow children under age eight to play with your robot without adult supervision.
 - Do not expose your robot to excessive heat, flames or fire.
 - Always press all buttons or switches carefully.
 - Do not use in extremely dry environments, as this can lead to static discharge during usage.
 - Do not expose your robot to temperatures above 40°C. Keep out of direct sunlight.
 - Do not drop, puncture or expose your robot to excessive trauma.
 - Your robot is not intended for commercial use.

ROBOT

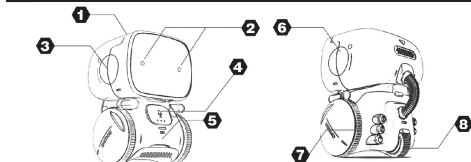

- 1. Head button**
With a 1st short press of the head button, the robot speaks (robot language).
With a 2nd short press of the head button, the robot will walk in a circle with sounds.
With a 3rd short press of the head button, the robot will go forward with sounds.
With a 4th short press of the head button, the robot will go back with laughter sounds.
With a long press of the head button, the robot will enter voice repeat mode and a short press will exit voice repeat mode.
- 2. Robot's eyes**
The eye's colours change colour when it is working.
The lights turn off when it falls into sleep mode.
- 3. Right ear button**
With a short press of the right ear button, the robot will walk backward with sound and then turn left with sounds.
With a long press of the right ear button, this will adjust (reduce) the voice volume.
- 4. Voice message button**
The robot can record messages when you hold down the voice message button for about 2 seconds.
One recording can last for approximately 8 seconds and you can save up to 3 recordings.
The robot will repeat one message at a time with a short press of the voice message button.
With a short press of the voice message button, you can wake the robot from sleep mode.
- 5. Voice control receiver**
The best distance to the receiver is within 50cm.
- 6. Left ear button**
With a short press of the left ear button, the robot will walk forward with sounds and then turn right with sounds.
With a long press of the left ear button, this will adjust (increase) the voice volume.
- 7. Independent steering wheel**
- 8. Follower wheel**

VOICE CONTROL FUNCTIONS


When power on, the robot will: go forward + power sounds + turn left + turn right + robot language + backward.

The robot will do the following actions when it receives the below voice commands.

	HEY AT		01 "A...T..."+SHAKE 02 "HERE" + GO FORWARD +ROBOT SOUNDS 03 "HEY GUY" + TURN LEFT & TURN RIGHT
	COME HERE		01 "YES" + GO FORWARD + ROBOT SOUNDS
	GO BACK		01 "YES" + BACKWARD + ROBOT SOUNDS
	TURN LEFT		01 "YES" +TURN LEFT + ROBOT SOUNDS
	TURN RIGHT		01 "YES" + TURN RIGHT +ROBOT SOUNDS
	I LOVE YOU		01 ROBOT SOUNDS+GO FORWARD + SOUND AS "KISS" 02 ROBOT SOUNDS+WALK IN CIRCLE + ROBOT SOUNDS 03 ROBOT SOUNDS+ "I LOVE YOU TOO" + " KISS" SOUNDS
	ARE YOU HAPPY		01 ROBOT SOUNDS+LAUGHTER SOUNDS 02 ROBOT SOUNDS+SONG+DANCE MOVES 03 "MMM....."+LIGHT TURN OFF
	CAN YOU DANCE		01 "NO PROBLEM" + RANDOM PLAY ONE DANCE MUSIC + SOME DANCE ACTIONS.
	MUSIC		01 "OK,MUSIC" + RANDOM PLAY ONE MUSIC
	GOOD-BYE		01 "SEE YOU" + BACKWARD

INSERTING BATTERIES

- Unscrew to open battery cover and take out battery jar, insert 3 x 1.5V AAA batteries.
- Replace battery cover.

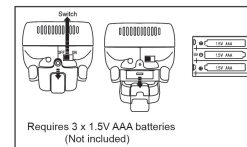

Caution: The robot will play music or do other actions when the batteries are running low. Replace the batteries as soon as possible to continue use. Please do not touch the two sensor buttons at the same time.

Keycode: 42853947

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISOR. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN. READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT. PLEASE KEEP THE PACKAGING FOR LATER REFERENCE.

WARNING: CHOKING HAZARD
SMALL PARTS AND SMALL BALLS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.