

AGES 8+ YEARS

MAZE MASTER ROBOT MANUAL



PACKAGE CONTENTS


•Maze Robot • Remote Control • User's Manual

IMPORTANT SAFETY PRECAUTIONS


READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT.

1. Do not use your robot near water. Clean using a soft cloth or paper towel.
2. Do not place your robot on any wet surfaces.
3. Do not allow children under age eight to play with robot without adult supervision.
4. Do not expose your robot to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your robot to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your robot to excessive trauma.
9. Your robot is not intended for commercial use.

ROBOT

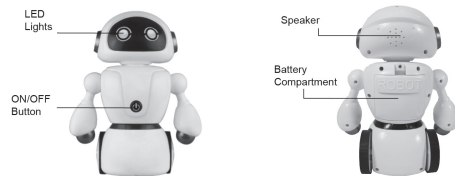

REMOTE CONTROL

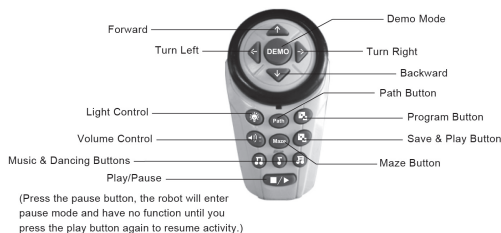


(Press the pause button, the robot will enter pause mode and have no function until you press the play button again to resume activity.)

-1-

INSERTING BATTERIES

Robot

1. Unscrew to open battery cover, insert 4 X 1.5V AA batteries.
 2. Replace battery cover.
- Attention: remove batteries after you have finished using your product.

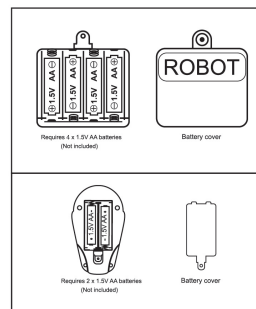

Remote control

1. Unscrew to open battery cover, insert 2 X 1.5V AA batteries.
 2. Replace battery cover.
- Attention: remove batteries after you have finished using your product.

POWERING ON YOUR ROBOT

Once you have inserted batteries into your robot and remote control, you can go ahead and power on your robot. To do so, press the ON/OFF button (the LED light of the eyes will be on). When you have finished playing with your robot, press the ON/OFF button again.


NOTE: When your robot is running low on power, it will emit an audible tone and power down. Once the batteries are completely depleted, replace the batteries as soon as possible to continue use.

MOVING YOUR ROBOT

You can use your remote control to move your robot around in different directions.

By pressing the up or down arrow buttons your robot will move forwards or backwards.

By pressing the left and right arrow buttons, your robot will turn left or right.

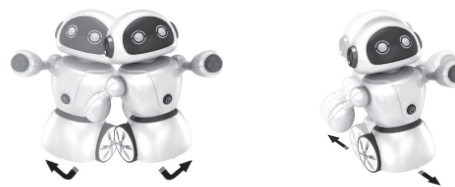

-2-


PROGRAMMING YOUR ROBOT

Press the program button and your robot will enter program mode. Once in program mode, you can press the directional buttons to create a series of movements. Press the save & play button to have your robot carry out the movement program that you created.

PATH / MAZE FUNCTION

Place robot on paper (or other surface) facing towards the path. Press the path button on the remote control and your robot will follow along a drawn path (black line of no less than 1.2 cm).

Place the robot in a maze first. Press the maze button on the remote control and your robot will find its way through a drawn maze (a maze with black lines of no less than 1.2 cm).

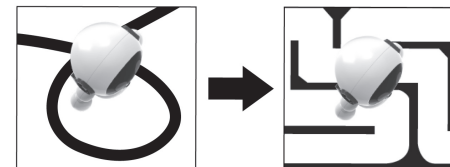

Keycode: 42853954

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN. READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT. PLEASE KEEP THE PACKAGING AND INSTRUCTION MANUAL FOR FUTURE REFERENCE.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

-3-