


3+ YEARS

HUNGRY BEAR BLASTER GAME

INSTRUCTIONS

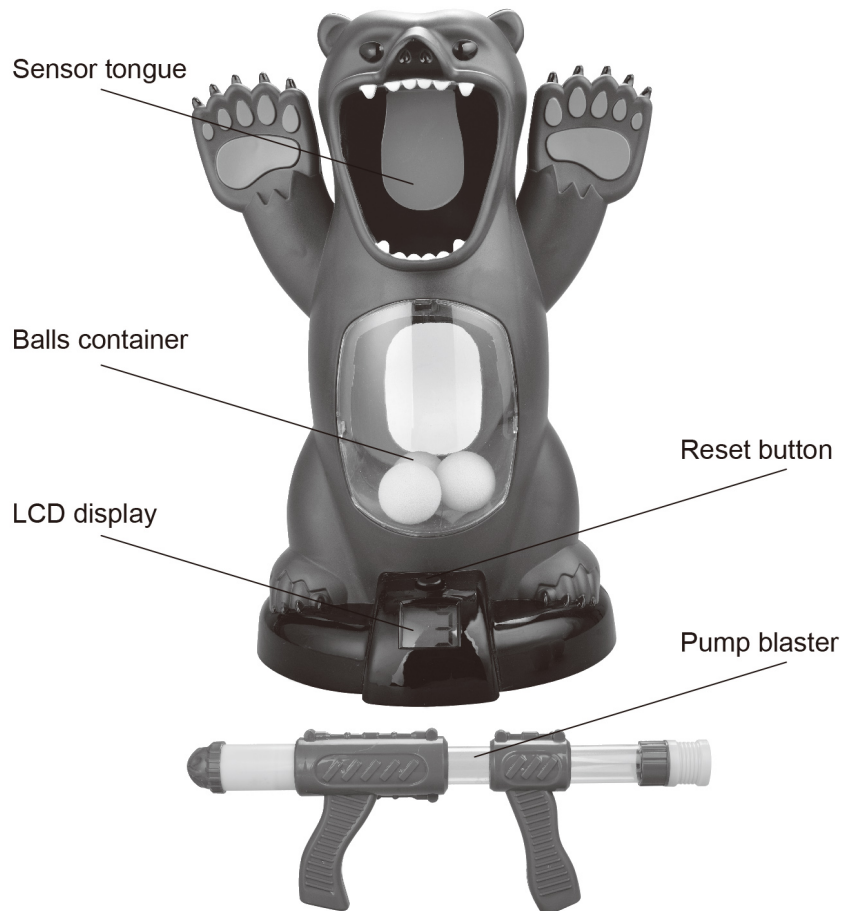


PACKAGE CONTENTS

- Hungry Bear
- Pump Blaster
- 5 Foam Balls

INSERTING BATTERIES

1. Unscrew to open battery cover, insert 2 x 1.5V AA batteries.
2. Replace battery cover.
Attention: Remove batteries after you have finished using your product.

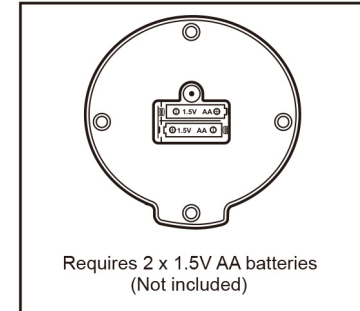

SHOOTING THE BEAR

1. Use the pump blaster to aim and shoot the tongue.



2. The LCD display will show the score for each shot of the tongue.



3. Take the balls out of the bear's belly to prepare for the next shot.



4. If you want to reset the score, press the reset button.

WARNING:
CHOKING HAZARD - SMALL PARTS AND
SMALL BALLS. NOT FOR CHILDREN UNDER 3 YRS.

WARNING: DO NOT AIM AT EYES OR FACE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND
PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

Keycode: 42854012

ADULT SUPERVISION IS REQUIRED
PRODUCT MAY VARY FROM THE IMAGE SHOWN.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.