

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



WARNING Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.

Bluetooth® Kids Headphones

Operating instructions




includes:

- › Bluetooth® headphones
- › charging cable
- › braided headphone audio cable



Function overview:

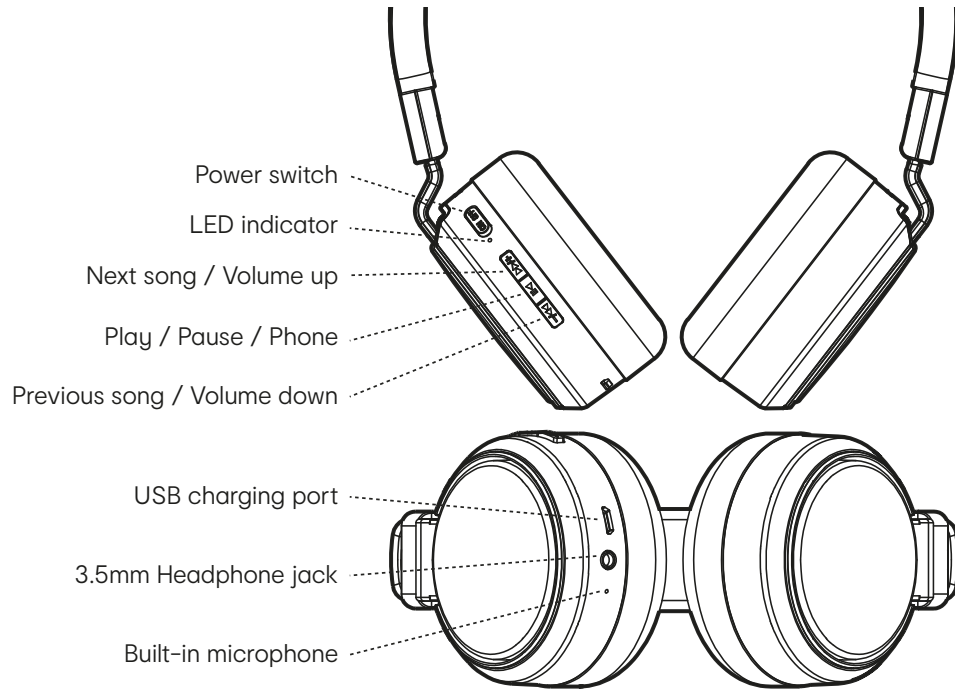

How to use these headphones:

Function Operation

Pause Press ►|| button

Play Press ►|| button

Next Song Press ►►+ button

Previous Song Press -/◄◄ button

Volume Up Press and hold ►►+ button – when the volume is adjusted to maximum you will hear a voice indication tone

Volume Down Press and hold -/◄◄ button

Power ON / OFF

Power ON

Move the power switch to the “ON” position. RED and BLUE LED blink alternatively

Power OFF

Move the power switch to the “OFF” position

Pairing the headphone with Bluetooth devices

- › Once the headphone is powered on, it is in pairing mode (LED flashes quickly) and will pair to the last paired device (if available).
- › If not previously paired, please search for the headphone in the Bluetooth menu of your device. Select the Bluetooth name of your headphone model, when complete, you can hear a pairing tone and the LED will flash slowly. Bluetooth Name: KM42829676 Blue or KM42854203 Pink

Phone calls

- › Press ►|| to pick up/hang up phone calls.
- › Press ►|| twice to call the previous number dialed.

Playing music

When the headphone connects with your device via Bluetooth you can enjoy music wirelessly.

Alternatively you can connect the braided headphone cable and listen to music.

This function can still be used when the headphones battery is flat.

Battery Charging

This Bluetooth headphone is powered by rechargeable Li-ion battery.

Please use the supplied USB cable to recharge the battery.

- › Insert USB cable into a suitable USB port.
- › Connect the micro USB end of the USB cable to the headphone USB charging port.
- › LED Indicator turns RED to show battery is charging.
- › LED Indicator turns OFF when battery is fully charged.
- › It takes about 2.5 hours to fully charge the battery.

Specifications:

Model No:

42829676 Blue, 42854203 Pink

Version:

V5.0 multimedia hi-fi Bluetooth chipset

Support profiles:

A2DP, AVRCP, HFP

Volume limited:

82dB ± 3dB

Working Distance:

10 Meters

Music Time:

>30 Hours

Talk time:

>30 Hours

Standby time:

>100 Hours

Charging voltage:

5V d.c.

Battery capacity:

450mAh

Charge time:

2.5 Hours

Cable length:

1.2m

Pairing window time:

5 Minutes